

Install Driver Printer before change MSW Setting or Connect USB Cable directly

1. Open program 'Memory Switch'

How_to_use_MemorySwitch	New.exe.xlsx 4/7/2556 17:59
🥌 Jcp32.dll	20/6/2546 13:40
🔚 MemorySW.zip	31/7/2556 16:52
🚟 MemorySwitch_New.exe	6/10/2554 5:30
smj_discovery.dll	14/12/2548 14:4
SMJUSBDIRECT.dll	5/10/2552 11:45
SMJWINSOCK.dll	11/9/2546 15:45

MemorySwitch	-		
Function Bit Set & Clear	C Memory Switc	h Clear 🗢 All Clear	○ Factry Set
	•		Check Clear
Bit F	Bit B	Bit 7	Bit 3
○On ○Off	○On ○Off	○On ○Off	○ On ○ Off
Bit E	Bit A	Bit 6	Bit 2
⊂On ⊂Off	⊂On ⊂Off	⊂On ⊂Off	○On ○Off
Bit D	Bit 9	Bit 5	Bit 1
⊂On ⊂Off	⊂On ⊂Off	On Off	○On ○Off
Bit C	Bit 8	Bit 4	Bit 0
○On ○Off	○On ○Off	○On ○Off	○On ○Off
l	.PT1	Writ	e !
	E	xit	

2. Select 'Memory Switch' that you want to change (In this case select 'Memory Switch 3')





3. Choose '**On**' at Bit 8, Bit A and Bit C



4. Click 'LPT1'



5. Click 'PRINTER' then click 'OK'

m	ory	SWITCH 3		•		
É	Sele	ect Interface	_		_	
) E	I	PRINTER	•	Serial Interface Baud Rate 38400 bps 💌	Data Bit 8 bit	
		COM1 COM2 COM3 USB NIC FILE PRINTER		Parity Bit	Stop Bit	
5	On	0 Off		On C Off	O On	0



6. Select Driver Printer which you want to change then click ' \mathbf{OK}'

Printer	Port
Fax F X DecuCentre -IV C2263 PCL 6 Star BSC10	SHRFAX: 192.168.2.248 USB001
 Cancel 	ш) к

7. Click 'Write'



8. Click 'ECS GS # <Normal>'

Select	Command
	ESC GS # <normal></normal>
•	ESC GS ; : <new></new>
	ESC # <old></old>
	Cancel
8	Bit 4



9. Click 'Write & Reset & Test Print'



10. Printer will be printing Self-Test out and after that try test again.