## How to change Memory switch setting by utility with AirPRNT Product

\*\*Please connect LAN before install driver printer\*\*

1. You need to download driver printer from <u>http://www.starmicronics.com/support</u> and choose topics like below picture then click then click "StarPRNT Intelligence Software"

FREE OF CHARGE	Star Micronics Support Database				The Latest Technical Updates	
SOLUTION	Welcome to the Star Micronics Global Support Site! Browse Star's online database to easily and quickly find drivers, software, documentation and FAQs. To begin, choose your printer below.				✓ StarPRNT for	
$\sim$	Star Micronics Software	License Agreeme	ent			mCollection V2.1 Released
	Product Type	Thermal	¥			November 25, 2018 StarPRNT for
AllReceipts		How do I find my F	Printer Type?			mCollection V2.1 has been released.
	Printer Family	TSP650II	T		2	CUP Drivers Released: V4.4
		How do I find my F	Printer Family Name?			for Mac and V3.8
	Printer Model	TSP650II	T			November 25, 2019
Store		How do I find my F	Printer Model Name?			The CUPS drivers
Decim	Interface	Ethernet	¥			
		How do I identify n	ny interface?			
CHOIS CON	Operating System	Windows 10 / 8.1	/8/7 ▼			
SDK		How do I identify n	ny Operating System?			
Swift + AllReceipts	Language	English	¥			
Download on the			Reset	1		
App Store	Drivers	Manu	uals	Other Downloads	HA HA	Qs
	Star Micronics	TSP650II Dr	iver Download	s		
	Recomn StarPF Link to the Includes	nended: RNT Intelligence StarPRNT Intellig support for <u>AllRec</u>	e Software gence Download page elpts (digital receipt s	ervice), Survey Function, De	vice manage	ment and Engage

2. Click Download "StarPRNT V3.6 Lite for Windows xx-bit Systems"



3. After downloaded got the file "starprnt\_v3.6\_setup\_32bit.zip" you have to extract file in same location.

4. Install driver printer follow up this folder "starprnt\_v3.6\_setup\_32bit\starprnt\_v3.6\_setup\_32bit\Setup" double click file "Setup.exe" until finished.

9/2/2561 15:56	File folder	
9/7/2561 14:44	WinRAR archive	38,347 KB
14/6/2561 11:57	Text Document	4 KB
14/6/2561 11:57	Text Document	5 KB
9/7/2561 14:44	Windows Installer	68,472 KB
6/7/2561 8:56	Text Document	57 KB
6/7/2561 8:53	Text Document	45 KB
9/7/2561 14:44	Application	170 KB
	9/2/2561 15:56 9/7/2561 14:44 14/6/2561 11:57 14/6/2561 11:57 9/7/2561 14:44 6/7/2561 8:56 6/7/2561 8:53 9/7/2561 14:44	9/2/2561 15:56     File folder       9/7/2561 14:44     WinRAR archive       14/6/2561 11:57     Text Document       14/6/2561 11:57     Text Document       9/7/2561 14:44     Windows Installer       6/7/2561 8:56     Text Document       6/7/2561 8:53     Text Document       9/7/2561 14:44     Application

- 5. Double Click "Portable Printer Utility" from Start Press >> Program >> Star Micronics >> Printer Software
- 6. Choose Printer TSP654II and click next

Star Micronics Printer	Utility	×
File Tool Help		
	Printer Connection Wizard	
Current Connection TSP654II Star Line Mode	Please choose your printer model.     FVP10     SP512     * High Reliability and Performance     SP542     * Print Speed: Up To 300mm/sec     * SP712     * "Drop-In & Print" Easy Paper Loading     SP717     * Optional Charcoal Gray Display Stand     SP742     * Barcode Capability for Coupons and Graphics     * SP747     * Bluetooth support     TSP800II     TUP542     TUP542     TUP542     TUP992	
Connection Manager	Emulation Star Line Mode	Next>
		Next>

7. Choose Ethernet and click "Search Network" or if you press search network already but not found, please print selftest page from the printer for see the IP Address and fill under Ethernet connection settings then click Done then fill the name off printer you want to setup and press OK 2 times.

🔣 Star Micronics Printer	Utility		
File Tool Help			
	Printer Connection Wizard		
TSP654II	First choose your interface type then co USB Ethernet Serial Parallel	nfigure its connection settings. Ethernet connection settings	
Current Connection	Bluetooth		
TSP654II Star Line Mode Ethernet 192,168,1,55		Search Network	
		Set Printer's IP address	
Connection Manager		Temporary IP Address Assignment	
New Connection 2 👻			
			<back done<="" th=""></back>

8. Click "Printer Settings" and scroll bar down and you will see Print Destiny you can change anything you want.

🔣 Star Micronics Printer U	ltility		
File Tool Help			
~	<u>Utility Functions &gt;</u> Printer Settings		
	Category All		* : Default Option
TERCEAU	International Character	USA*	- ^
13P03411	Ladder Barcode Adjustment	OFF*	-
Current Connection	Line Feed	4mm *	•
TSP654II Star Line Mode Ethernet	Multi Bytes Character Code	Simplified Chinese (GB2312)	
192.168.1.55	Paper Near End Sensor	Enable *	•
	Print Density	+3 (Darkest)	•
Connection Manager	Print Speed	High Speed *	
	Printable Area	72mm *	• <b>E</b>
	Printer Performance	Print Speed *	•
	Top Margin	11mm *	•
	File Operations		
	Export Import		
	Printer Operations		
	Reset Defaults Print Settings	Store	Reload

9. Press "Store" and "Print Setting" for print selftest page for check is correct or not.

the second day		
and the second s		C. CONTRACTOR
111 12	Memory Switch	
AL DESCRIPTION	FEDCBA9876543210 HEX.	
- Alterna	<0> 00000000000000 0000	
	<1> 0000000000000 0000	
in any -	<2> 00000000000000011 0003	
	<3> 0000000000000 0000	Contraction of the local division of the loc
The second s	<4> 0000000000000 0000	1
	<8> 00000000000000 0000	
The second second	<a> 00000000000000 0000</a>	
a manufactor and	<b> 00000000000000 0000</b>	1. Street
for the second		-
and the second	Memory Switch Detail	And and a state of the local division of the local division of the local division of the local division of the
to the second	<0>4 = Character Mode: Standard U3.0	-
the second se	<1>9 = Top Margin: Default	
and a second second	<1>4 = Zero Style: Normal Zero	all the second
- And and a second	<1>3-0= Inter. Char: USA	
	<2>F = Refresh Mode: Valid	1000
and the state of the	<2>D = Speed Down@Ladder Bar: No	Carlot and
A state of the state of the state	<2>C = 180 Rotation: Invalid	-
all a series	<2>A,8= Print Start Control: Page	the second
	<pre>&lt;2&gt;7 = Print Pass: Special</pre>	all line
and the second second	<2>5,4= Print Speed: Normal	-
and the second se	<2>2-0= Print Density: +3	
- Antonio -	<3>F-8= Page: Normal	-
	(3)4 = ANK Pitch; 12 dot	And a state of
	(3)1 = (OR): Ignore	and the second second
-	(3)0 = Feed Pitch: Amm	
	(4)8 = Print Mode: Monochrome	-
the same the	(A)2-0- Printohle Area: 72mm	
	(8) E-C= H-Reduced Size: Invalid	and the second second
Television	(8)B-8= V-Reduced Size: Invalid	Sec. 1
	<8>3 = H-Paper Reduction: Invalid	Contractor of the
	<8>2 = V-Paper Reduction: Invalid	The state of the s
And the second second		