



## How to check maintenance counter of printer mC-Print2/3 Series

1. Download mC-Print Utility Application from App Store or Google Play.



**mC-Print Utility** 4+  
STAR MICRONICS CO.,LTD.  
★★★★★ 5.0, 1 Rating  
Free



mC-Print Utility


STAR MICRONICS CO.,LTD. Business

3+


⚠ You don't have any devices.

➕ Add to Wishlist

2. Open mC-Print Utility Application then click 'Selected Printer'

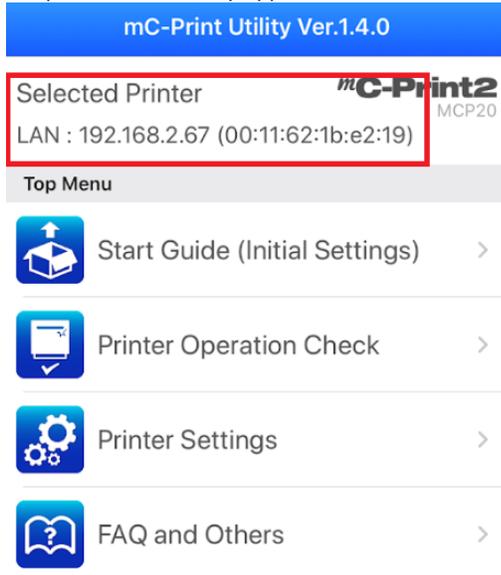

3. The printer unit which you are connecting will appear then select the printer unit.

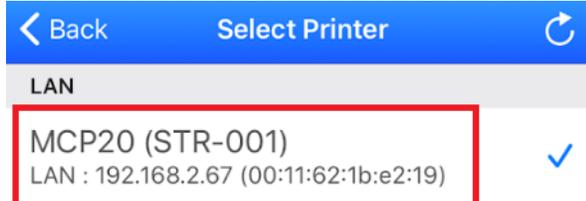



## How to check maintenance counter of printer mC-Print2/3 Series

### 4. Click 'Printer Setting'

Selected Printer **mC-Print2**  
MCP20  
LAN : 192.168.2.67 (00:11:62:1b:e2:19)

Top Menu

-  Start Guide (Initial Settings) >
-  Printer Operation Check >
-  **Printer Settings** >
-  FAQ and Others >

### 5. Slide down then click 'Customer Service Function'

< Back Printer Settings

Selected Printer **mC-Print2**  
MCP20  
LAN : 192.168.2.67 (00:11:62:1b:e2:19)

Interface Settings

Peripheral Settings

-  Barcode Reader Settings


Others

-  Printer Self Printing >
-  **Customer Service Function** >
-  Firmware Update >
-  Remote Config Setting >
-  Connect Printer to Cloud >




## How to check maintenance counter of printer mC-Print2/3 Series

6. Typing password 'star1234' then click 'OK'

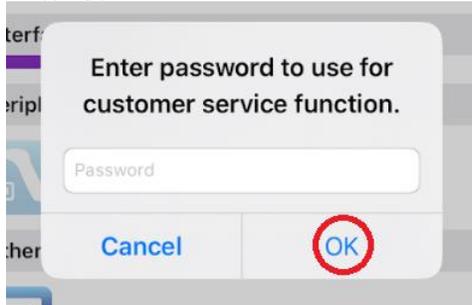

7. Click 'Maintenance Counter'

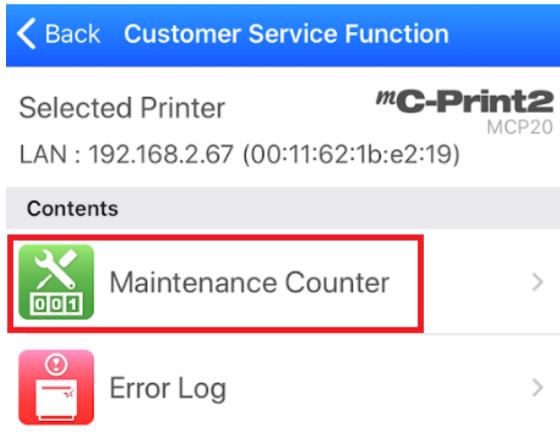

8. The Maintenance Counter will appear.

