



## How to download and install driver BSC10UD for Windows by USB or Serial

1. Download driver from website>> <http://www.starmicronics.com/support/> and select following as picture below.

### Star Micronics Support Database

Welcome to the Star Micronics Global Support Site! Browse Star's online database to easily and quickly find drivers, software, documentation and FAQs. To begin, choose your printer below.

[Star Micronics Software License Agreement](#)

Product Type  [How do I find my Printer Type?](#)

Printer Family  [How do I find my Printer Family Name?](#)

Printer Model  [How do I find my Printer Model Name?](#)

Interface  [How do I identify my interface?](#)

Operating System  [How do I identify my Operating System?](#)

Language



Drivers   Manuals   Other

### Star Micronics BSC10 Windows Driver Download

**Recommended Driver:**

▶ [BSC10 Installation CD V2.1\\*](#) (146MB)  
*Installation CD Package including Windows Driver Configur  
Windows 10(32/64-bit), Windows 8.1(32/64-bit), Windows 8(  
Windows Vista(32/64-bit)*


**\*Important:** This Installation CD Package is only supported o  
you have an earlier version or are unsure how to check whic  
and we will supply you with the correct driver.

2. After finished downloaded, Install at your PC




## How to download and install driver BSC10UD for Windows by USB or Serial

### 3. Open program 'Printer Software for BSC10'

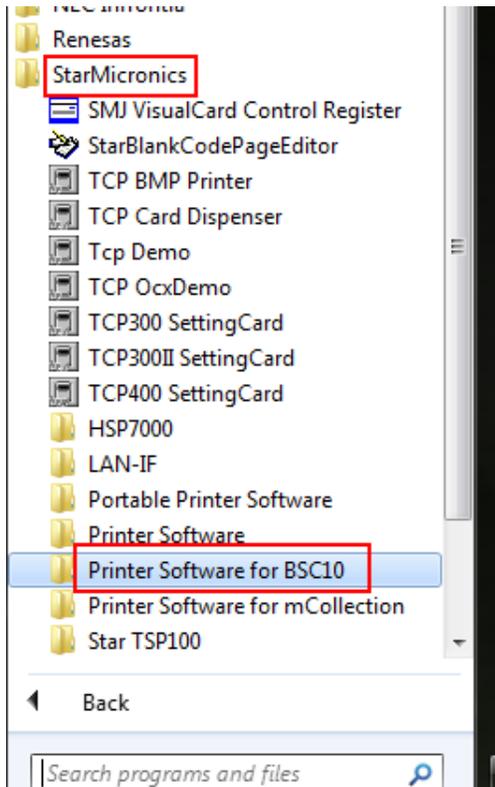

### 4. Choose Port which you are connecting to PC


- If connecting USB Cable, please choose USB then select the printer name.

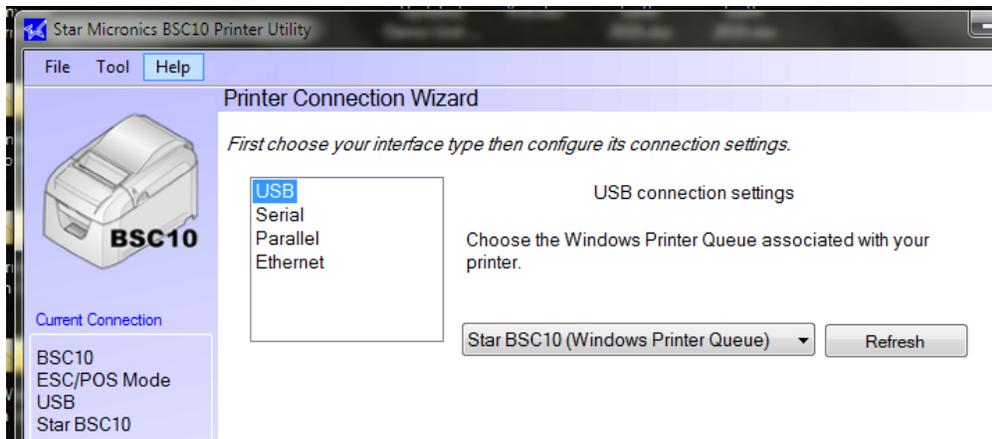




## How to download and install driver BSC10UD for Windows by USB or Serial

- If connecting Serial Cable, please choose Serial then select COM Port same with the PC.

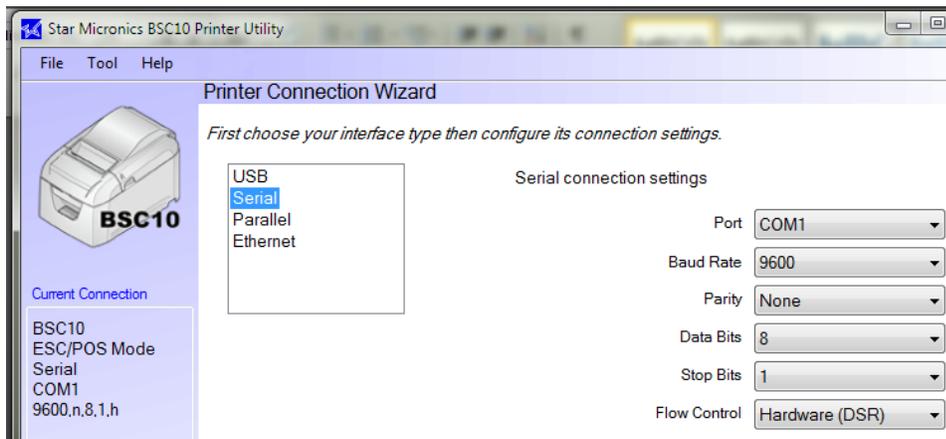

- Click **'Done'**

5. If you need to change printer name, please fill in but if you don't click **'OK'**.

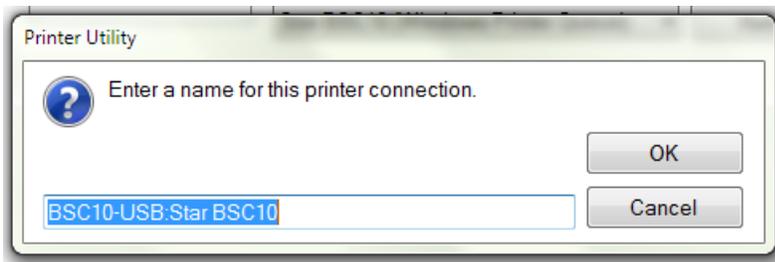

6. Click **'Check'** then click **'OK'** for make sure printer can connected to PC after that printer will printing check status out.

