

1. Connect Lan Cable then print selft-test out for check the IP Address of the printer, see how to print self-test as below.

1.1 Turn printer off.

1.2 Press and hold 'Feed' button then turn printer on.

1.3 Continue hold 'Feed' button until printer have printed Self-Test out.



2. Access 'IP Address' in a Browser.

Not secure 192	2.168.2.54					
ะ 🤷 Google แปลกาษา	💡 Google Maps	STAR MICRONICS S	🐋 Star Global Support	🔀 Technical Specificati	Star Micronics Clou	🥂 SANEI ELECTRIC IN.
		sta	 	C-Print3 N	etwork Uti	lity
		Home		Home		

Display Status
Device Status

> Home

System Access

Login Username is "root" Default password is "public"

If you forgot your password, refer to online manual to initialize network settings

Manual

> Online Manual

Device Information

MAC Address :

00:11:62:1D:33:A0

Clone MAC Address :

(Invalid)

Firmware Version

Main F/W : 2.4 Boot F/W : 2.4

Network Status

IP Address:

192.168.2.54 (DHCP)



How to fix IP Address for mC-Print 2/3 Model

3. Click 'Login'.

Home > Home	Home
Display Status	Device Information
System Access	MAC Address : 00:11:62:1D:33:A0
Username is "root" Default password is "public"	Clone MAC Address : (Invalid)
If you forgot your password, refer to online manual to initialize network settings	Firmware Version
Manual Online Manual	Main F/W : 2.4 Boot F/W : 2.4

4. Fill Username = root // Password = public then click 'Sign In'.

Sign in	
http://192.16	8.2.54
Your connect	tion to this site is not private
Username	root
Password	
	Sign in Cancel

5. Fill 'public' in Input New Password then click 'Save'.

Home > Home	Change Password for "root" accou	nt
Network Configuration	Input old password	
Change Password		
Change default password to configure network settings.	Show characters	
Display Status	Input new password	
> Device Status		
System Access	Show characters	
> Logout	-	
	Submit	Cancel
Manual		
> Online Manual		



6. Click 'Save' again.

"root"	password is accepted!
	Please execute "Save" menu if these settings are correct.
	Return to Previous page <change password=""></change>
	(Don't use "Back" button of browser to return.)

7. Select Save \rightarrow Configuration printing \rightarrow Restart device then click 'Execute' after that printer will be printing Config out.

Save	
\circledast Save \rightarrow Configuration printing \rightarrow Restart device	
\odot Save \rightarrow Restart device	
Execute	Cancel

8. Click 'IP Parameters' then select 'Static' and fill the IP Address that you need then click 'Submit'.

lome > Home	IP Parameters	
etwork Configuration	Static Following addresses are used.	
Change Password	IP Address	
Star Micronics Cloud	0.0.0.0	
> CloudPRNT		
> SSL/TLS	Subnet Mask	
Miscellaneous	0.0.0.0	
 Save Set Default 	Default Gateway	
Display Status Device Status	0.0.0.0	
System Access Logout	Dynamic Addresses are obtained from notwork	



How to fix IP Address for mC-Print 2/3 Model

9. Click 'Save'.

Static address condition is accepted! IP Address : 192.168.2.56 Subnet Mask : 255.255.255.0 Deafult Gateway : 192.168.2.1 Please execute "Save" menu if these settings are correct. Return to Previous page <IP Parameters> (Don't use "Back" button of browser to return.)

10. Select Save \rightarrow Configuration printing \rightarrow Restart device then click 'Execute' after that printer will be printing Config out.



11. Look at the IP Address and see the bottom line (Static) is mean IP Address has been fixed.

