How to install printer utility of BSC10

please do not connect printer to PC during install driver utility

1. Download driver from > <u>http://www.starmicronics.com/support/</u> and selected as below.

Star Micronics Support Database

Welcome to the Star Micronics Global Support Sitel Browse Star's online database to easily and quickly find drivers, software, documentation and FAQs. To begin, choose your printer below.

Star Micronics Software License Agreement

Product Type	Thermal
	How do I find my Printer Type?
Printer Family	BSC10 V
	How do I find my Printer Family Name?
Printer Model	BSC10 V
	How do I find my Printer Model Name?
Interface	USB 🔻
	How do I identify my interface?
Operating System	Windows 10 / 8 / 7 / Vista 🔻
	How do Lidentify my Operating System?
Language	EN / CH / FR / KR / RU / SP 🔻

2. Click download > <u>BSC10 Installation CD V2.1</u>* and install after download finished.

Star Micronics BSC10 Windows Driver Downloads



3. Open program Printer Software for BSC10



4. Selected connection 'Ethernet' and fill the IP Address or click 'Search Network' if the program did not get IP Address by themselves. Then click 'Done'

File Tool Help									
Printer Connection Wizard									
BSC10	First choose your interface typ USB Serial Parallel Ethernet	be then configure its connection settings. Ethernet connection settings							
BSC10 ESC/POS Mode Ethernet		Search Network Set Printer's IP address							
Connection Manager		Temporary IP Address Assignment							
Star BSC10 👻									

5. Click 'Windows Printer Queue Management' for add printer to Devices & Printers (Control Panel) Utility Functions

Windows Printer Queue Management

This function will allow for the installing and management of print queues for the windows printer spool system.

Printer Settings

Use this function to configure your printer's settings and fine tune

6. Click 'Add' and fill your printer name as you want then click 'OK'

D :		<u>.</u>				
Printer Name	Default	Shared		Add		
BSC10 - TCP:192.168.1.44						
				Delete		
Add Printer				1	t Print	
Enter the name of the printer you want to add.					eue	
BSC10 - TCP:192.168.1.44			Cance		erties	
					Jefault	
Refresh						

7. Check your printer was show in devices & printer (Control Panel)

