



How to update Firmware and Boot of BSC10 UD or BSC10 UC By Serial or Parallel Interface

Main Program


1. Open Program 'MOT2FMEM' (For COM / LPT model)

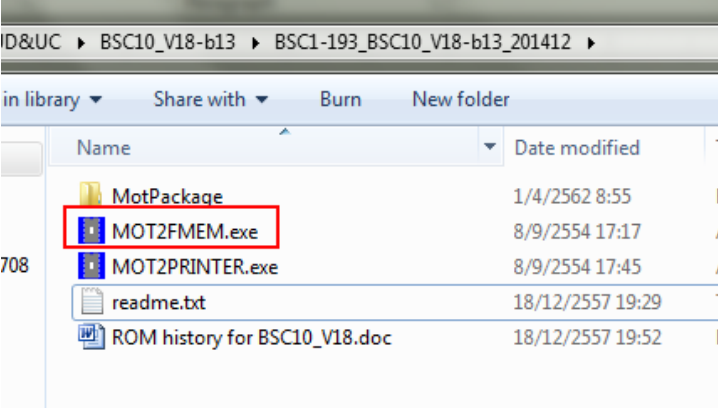


2. Choose 'Port' in the top bar.

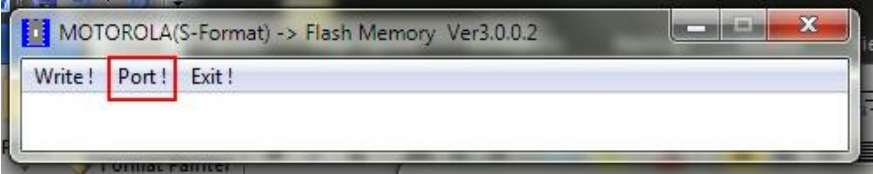


3. Port >> Select port connected to your printer
Baud Rate >> Select baud rate of your printer (COM model only)
Protection of rewriting >> Choose 'Valid' Then click 'OK'

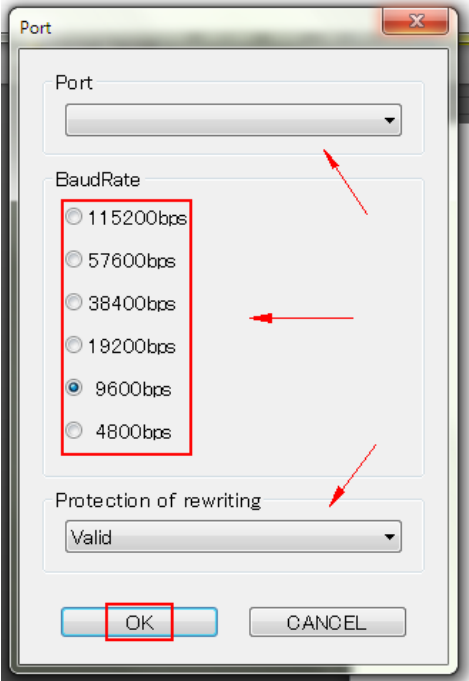

4. Choose 'Write' in the top bar.

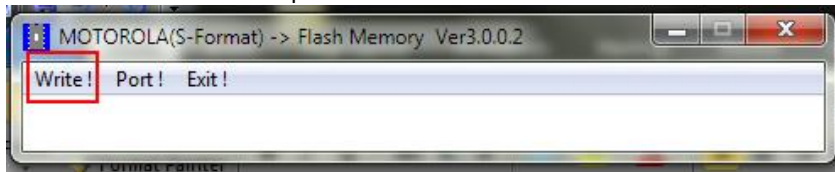

5. After choose mot file (Main Program/Font Data), click 'open' button.

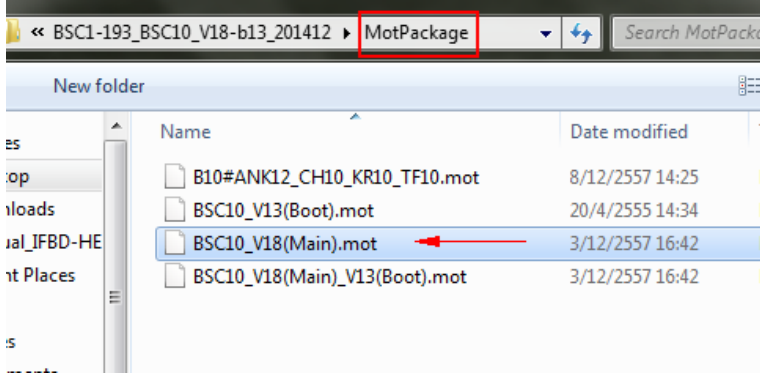


6. Click 'OK' button then F/W is executed to rewrite.



Boot Program

When you rewrite Boot Program, follow the steps below.

1. Open the cover.
2. Turn POWER ON with holding the FEED button pushed for over 15 seconds.
3. The LEDs will blink by turns, and then release the button.
4. Push the button 3 times.
5. The LEDs will blink, and then close the cover.
6. The LEDs will blink by turns then both LEDs will light.
7. Execute F/W rewriting tool same as Main Program but **Step 5** please selected (refer below picture)

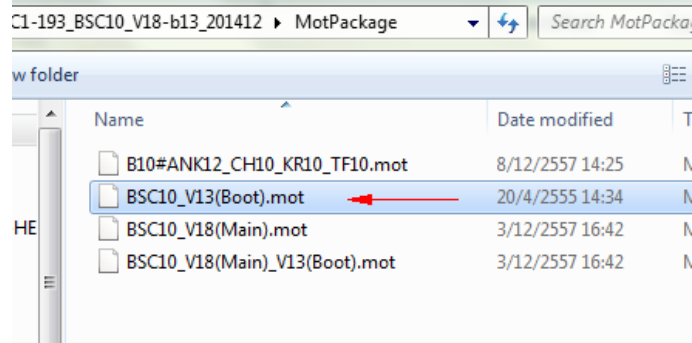

8. Click 'OK' button then F/W is executed to rewrite.

