


How to update firmware of SM-L300 by USB Cable


1. Connect printer to PC/Laptop by USB Cable, then will get the printer driver in Control > Devices & Printers




2. Go to folder SM-L300\SM-L300_Ver13\SM-226_L300_Ver13_201709\FW_Rewriting_Tool\FW_RewriteTool_for_SM-L_V1.1.0.0_20170411 and open program 'FW_RewriteTool_for_SM-L.exe' for update firmware

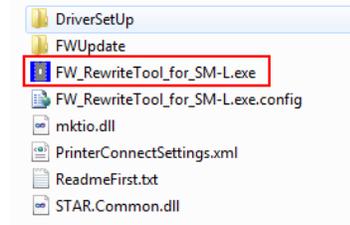





3. Select the printer model that you want to update then click 'Connection Test' for testing communication to printer.

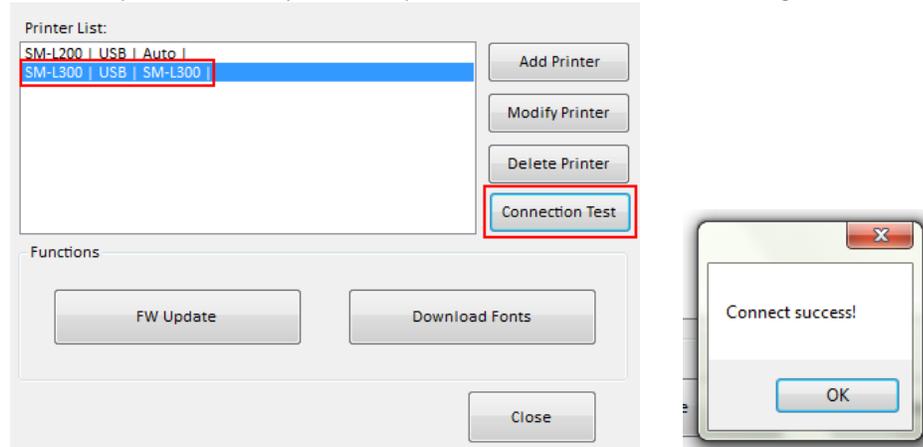


4. If no any printer model show on or need to add new model. Please click 'Add Printer' then select printer model and port type then click 'OK'

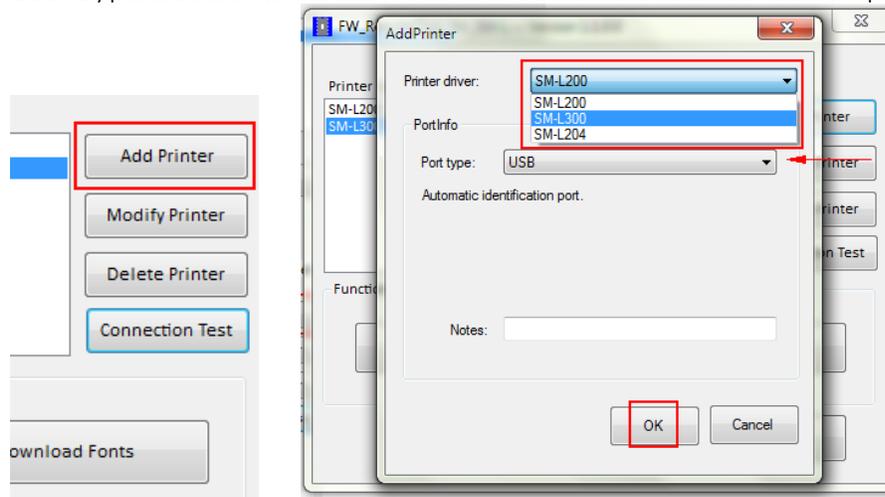

5. Click 'FW Update' then click 'Select DFU File' (after Device show 'Printer') then go to inside of folder 'SM-L300\SM-L300_Ver13\SM-226_L300_Ver13_201709\FW_Data' select 'SM-L300_V13.dfu' and click open then click 'Update' and wait until finished click 'Quit'

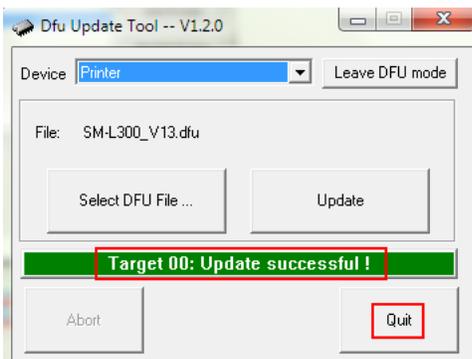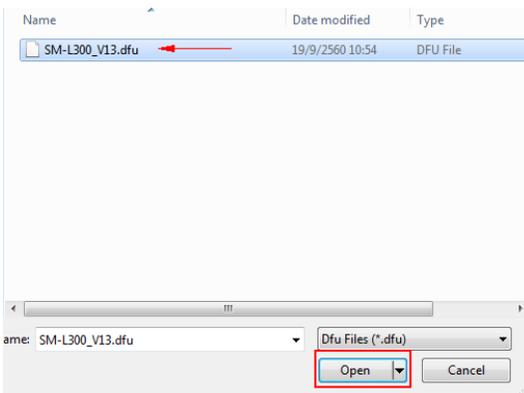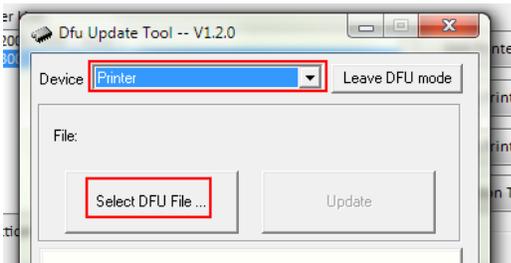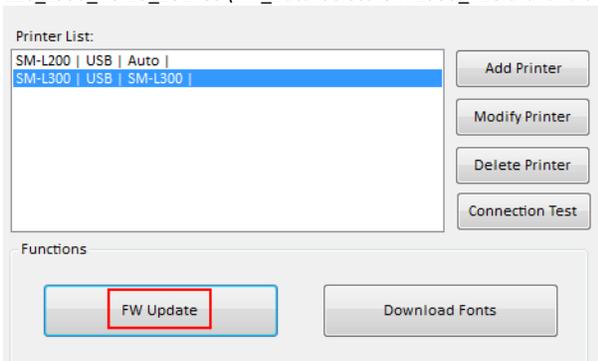

6. Remove the battery and install again then turn on the printer SM-L300. Go to program for update font as well. Click 'Connection Test' then click 'Download Fonts' then click '...' go to same as folder update FW but click 'L300#10.bin' after that click 'Open > Download' and wait until finished.

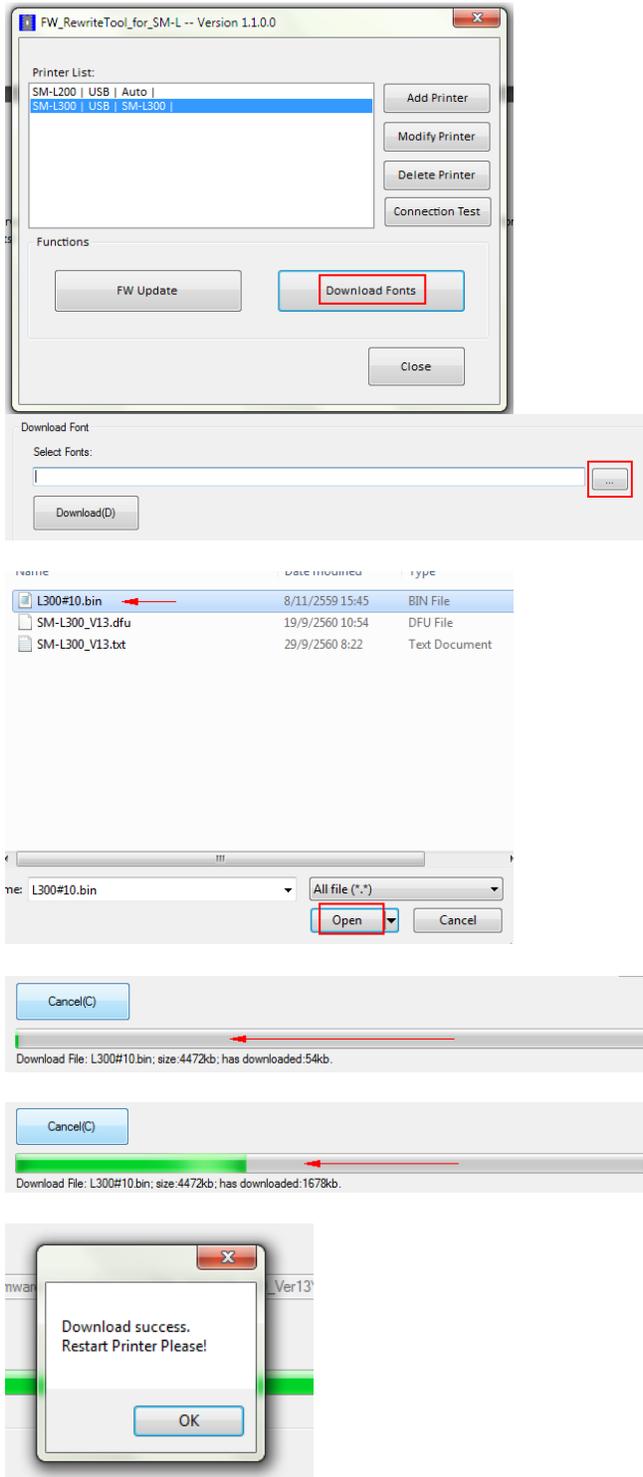

7. After success, turn off the printer and Self-Test for checking firmware version.