

## Setting Multi Session = Enable for mC-Print Series

1. Login to IP Printer  
Username: root  
Password : public

Not secure | 192.168.1.51



### mC-Print2 Network Utili

#### Home

Home

#### Display Status

Device Status

#### System Access

Login

#### Manual

Online Manual

## Home

### Device Information

#### MAC Address :

00:11:62:1B:E2:19

#### Clone MAC Address :

(Invalid)

### Firmware Version

Main F/W : 1.2

Boot F/W : 1.2

2. #9100 multi session = Enable  
Click Submit

## System Configuration

### Web Refresh Interval Time (Sec.)

5

### #9100 Multi Session

ENABLE

### #9100 Data Timeout (Sec.)

0

### Disconnect Message

DISABLE

Submit

3. Click Save

Not secure | 192.168.1.51/html/nsys.cgi



## mC-Print2 Network

### Home

Home

### Network Configuration

IP Parameters

System Configuration

Change Password

Star Micronics Cloud

CloudPRNT

SSL/TLS

Miscellaneous

Save

Set Default

### Display Status

Device Status

## System Confi

### Web Refresh Time

5

### #9100 Multi Sessio

Enable

### #9100 Data Timeou

0

### Disconnect Messag

Disable

4. Click " Save --- > Configuration Printing ---- > Restart device

## Save

Save → Configuration printing → Restart device

Save → Restart device

Execute