

TSP650IIE set Static IP Address

How to set Static IP Address

1. Self-Test for get IP address from router (DHCP IP) Open any browser to fix Static IP



Select IP Parameters Setting Static IP Address Select Submit



Star IFBD-HE07 Network Utility	7/08 V			
Contents	System Access	Network Configuration	Display	
Network Configuration IP Parameters System Configuration Change Password Save Set Default Diaplay Status Network Card Info. Network Status Device Info. Device Status	PI	Static add IP A Subno Deafu ease execute "Sav	lress conc Address : : et Mask : It Gatewa e'' menu	
Select "Save"				
Contents	System Ac	cess Netw Configu	ork tration	Display Status
	Logout			



Select "Save - > Configuration - > Restart device" Select "Execute"

When you do self-test printer will print IP configuration on second page. You can found IP Address is set to Static IP

