



How to install HSP7000 windows driver and OPOS testing

****Please do not turn on printer during install program****

1. Download **HSP7000 Windows Driver** via following picture as below.

<http://www.starmicronics.com/support/>

Star Micronics Support Database

Welcome to the Star Micronics Global Support Site! Browse Star's online database to easily and quickly find drivers, software, documentation and FAQs. To begin, choose your printer below.

[Star Micronics Software License Agreement](#)

Product Type	Multifunction Hybrid	How do I find my Printer Type?
Printer Family	HSP7000	How do I find my Printer Family Name?
Printer Model	HSP7000	How do I find my Printer Model Name?
Interface	USB / PoweredUSB	How do I identify my interface?
Operating System	Windows 7 / Vista / XP	How do I identify my Operating System?
Language	English	



2. Click '**HSP7000 Installation CD V2.0**' for download windows driver.

 **Recommended Driver:**

▶ [HSP7000 Installation CD V2.0](#) (279MB)
*Installation CD Package including Driver, Configuration Utility, OPOS, JavaPOS and Manuals
Windows 7 (32/64-bit)*, Windows Vista (32/64-bit)*, Windows XP
* Printer Driver only supported on 64-bit; no Configuration Utility*

▶ [Status Configuration Patch for HSP7000 Installation CD V2.0](#) (1.84KB)
*Patch enabling printer status to show up in the printer properties dialog box
Windows 7 (32-bit), Windows Vista (32-bit)*

3. After finished download, double click 'Autorun.exe.' for install program.

Documents	19/2/2563 9:49	File folder	
Linux	19/2/2563 9:49	File folder	
Mac	19/2/2563 9:49	File folder	
Win2K_XP_Vista	19/2/2563 9:49	File folder	
Autorun.exe	13/6/2551 10:43	Application	40 KB
Autorun.inf	4/4/2551 8:36	Setup Information	1 KB
Autorun.ini	14/5/2551 13:36	Configuration sett...	7 KB
cdicon.ico	4/4/2551 8:36	Icon	9 KB
Readme_En.txt	18/7/2551 16:18	Text Document	18 KB
Readme_Jp.txt	18/7/2551 13:46	Text Document	19 KB
SoftwareLicenceAgreement.pdf	4/4/2551 8:36	Adobe Acrobat D...	25 KB
SoftwareLicenceAgreement_jp.pdf	7/5/2551 11:32	Adobe Acrobat D...	25 KB




How to install HSP7000 windows driver and OPOS testing

4. Click 'Printer Driver'




5. Click 'I Accept'

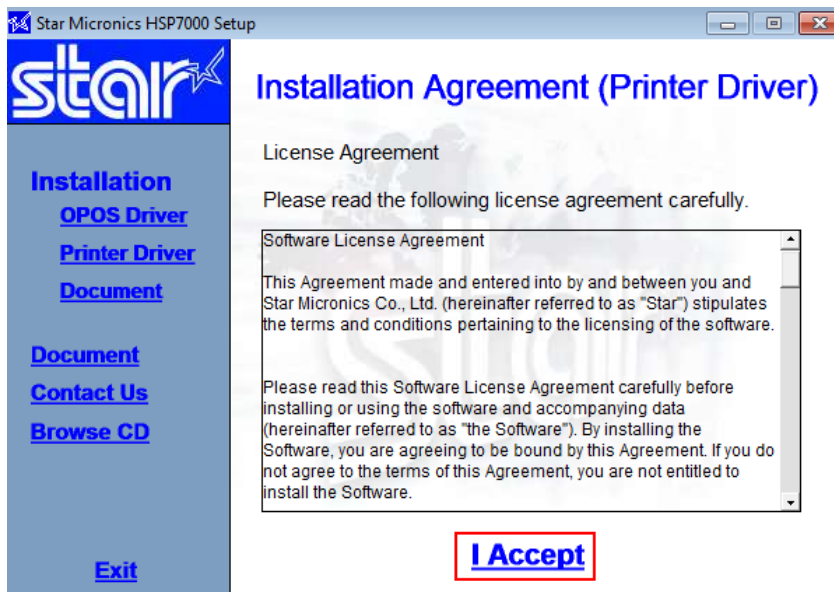




How to install HSP7000 windows driver and OPOS testing

6. Click 'Next'

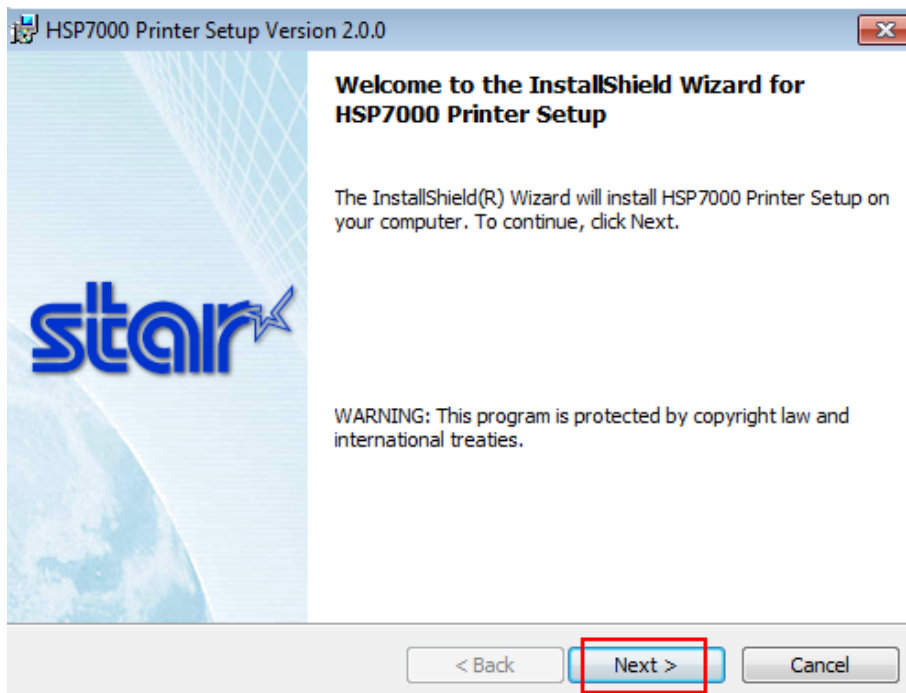


7. Click 'Next'

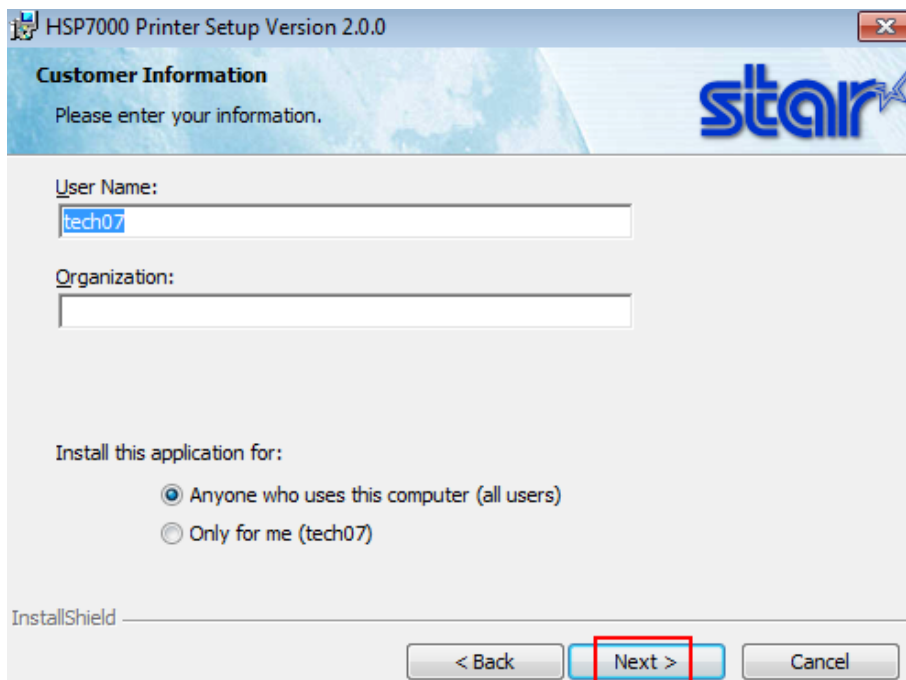




How to install HSP7000 windows driver and OPOS testing

8. Click 'Next'

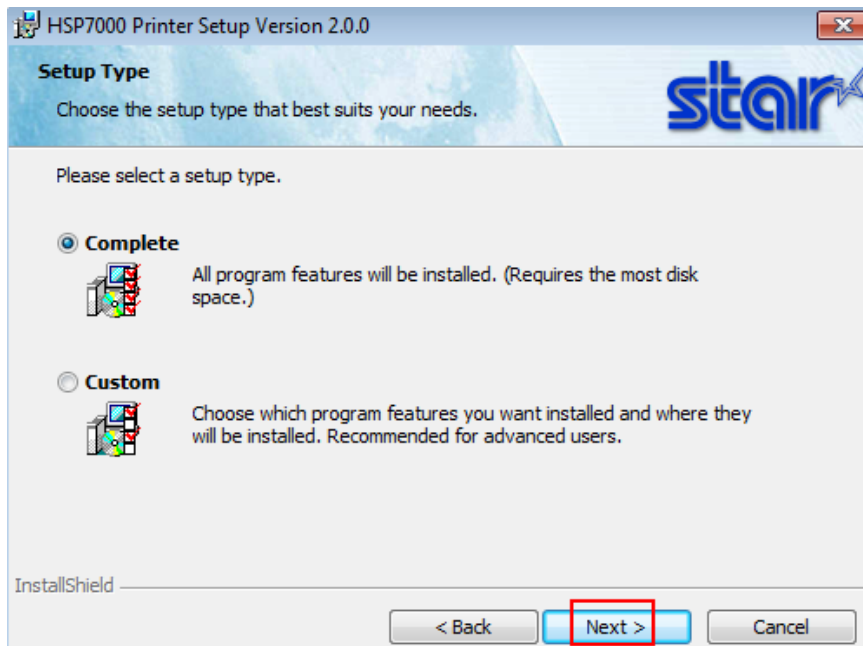


9. Click 'Install' and wait till finished.

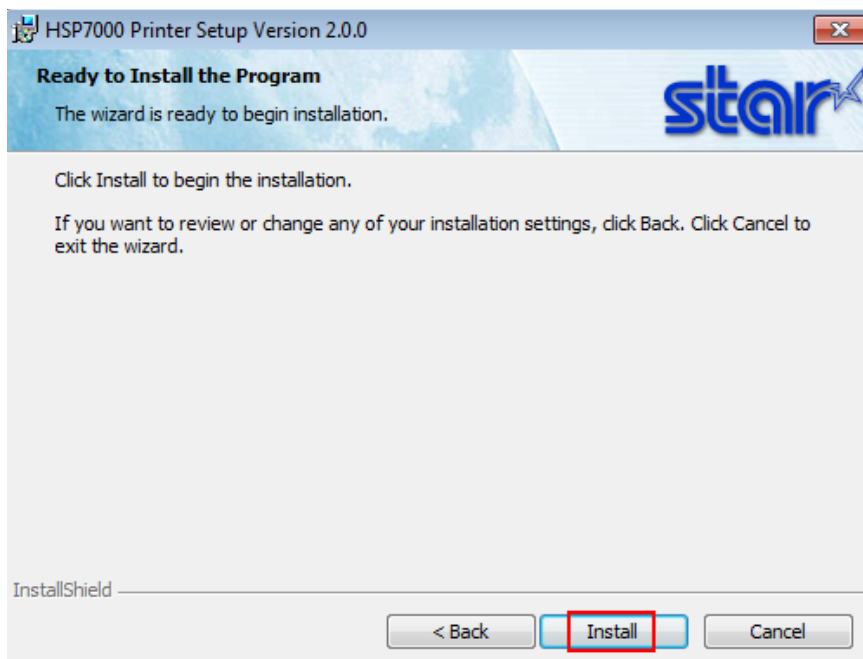



How to install HSP7000 windows driver and OPOS testing

10. Click 'Finish'

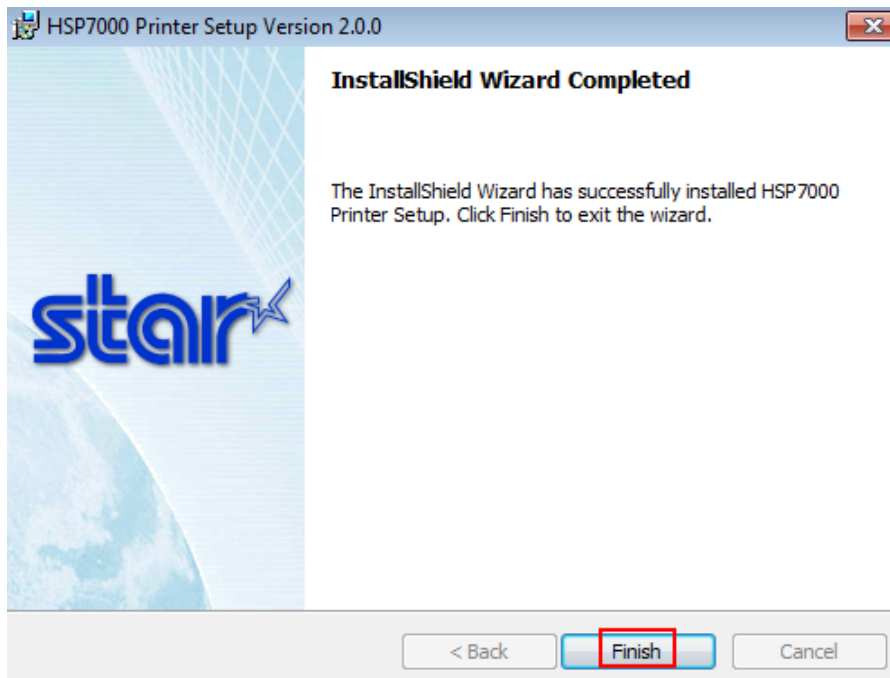

11. Click 'OPOS Driver'






How to install HSP7000 windows driver and OPOS testing

12. Click 'I Accept'



13. Click 'Next'

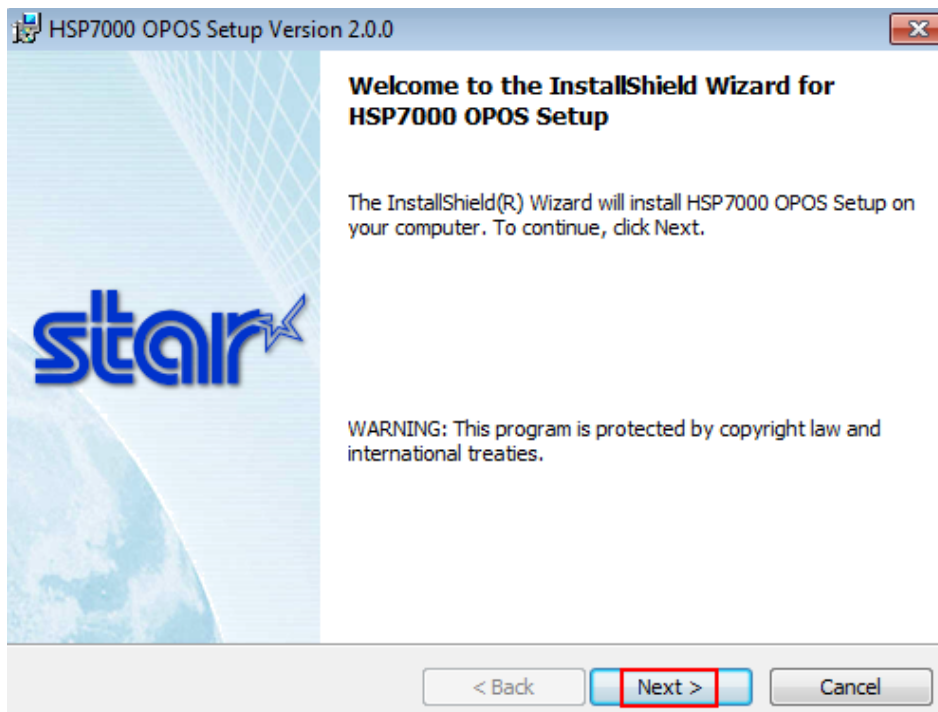



How to install HSP7000 windows driver and OPOS testing

14. Click 'Next'

The screenshot shows the 'Customer Information' window of the HSP7000 OPOS Setup. The window title is 'HSP7000 OPOS Setup Version 2.0.0'. The header bar is blue with the 'star' logo on the right. Below the header, the text 'Customer Information' is followed by 'Please enter your information.' There are two input fields: 'User Name:' with the text 'tech07' and 'Organization:' which is empty. At the bottom, there are three buttons: '< Back', 'Next >' (highlighted with a red rectangle), and 'Cancel'. The 'InstallShield' logo is visible in the bottom left corner.


15. Click 'Next'

The screenshot shows the 'Setup Type' window of the HSP7000 OPOS Setup. The window title is 'HSP7000 OPOS Setup Version 2.0.0'. The header bar is blue with the 'star' logo on the right. Below the header, the text 'Setup Type' is followed by 'Choose the setup type that best suits your needs.' There is a prompt 'Please select a setup type.' and two radio button options: 'Complete' (selected) and 'Custom'. The 'Complete' option has a description: 'All program features will be installed. (Requires the most disk space.)'. The 'Custom' option has a description: 'Choose which program features you want installed and where they will be installed. Recommended for advanced users.' At the bottom, there are three buttons: '< Back', 'Next >' (highlighted with a red rectangle), and 'Cancel'. The 'InstallShield' logo is visible in the bottom left corner.




How to install HSP7000 windows driver and OPOS testing

16. Click '**Install**' and wait till finished.

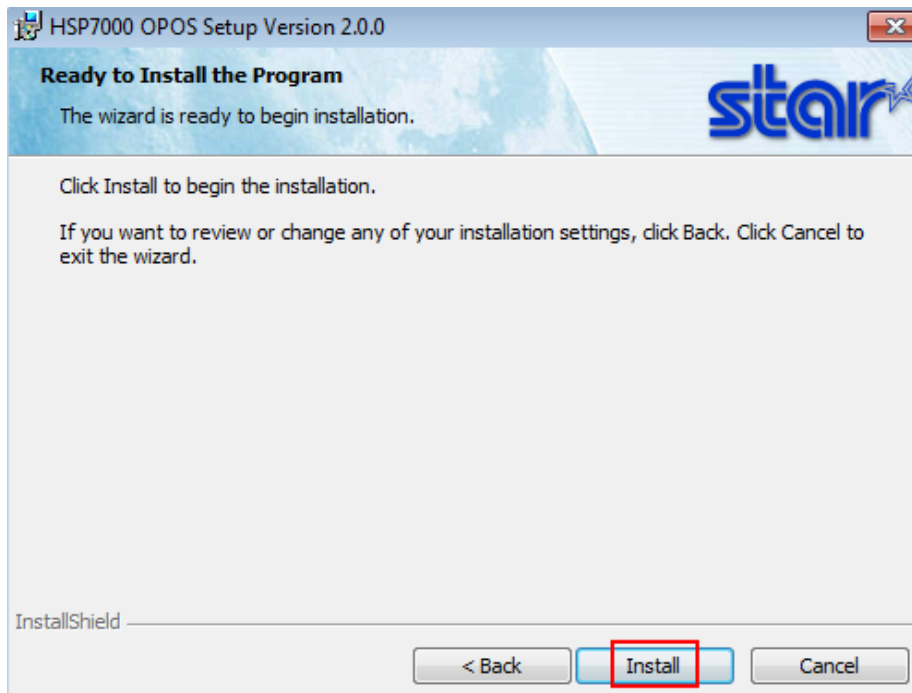


17. Click '**Finish**'

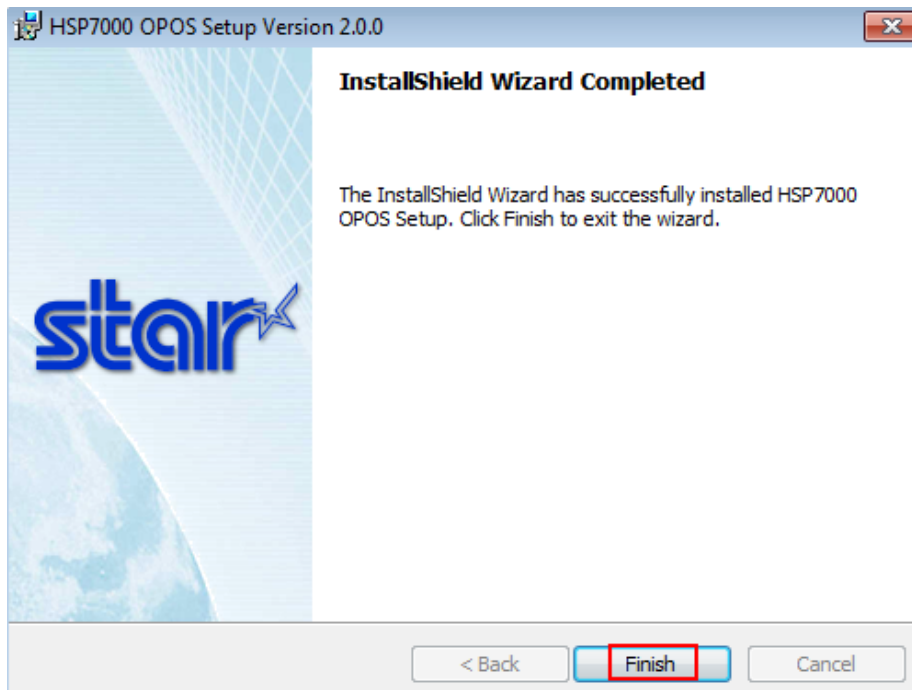




How to install HSP7000 windows driver and OPOS testing

18. Click 'HSP7000 Printer Driver Installer'

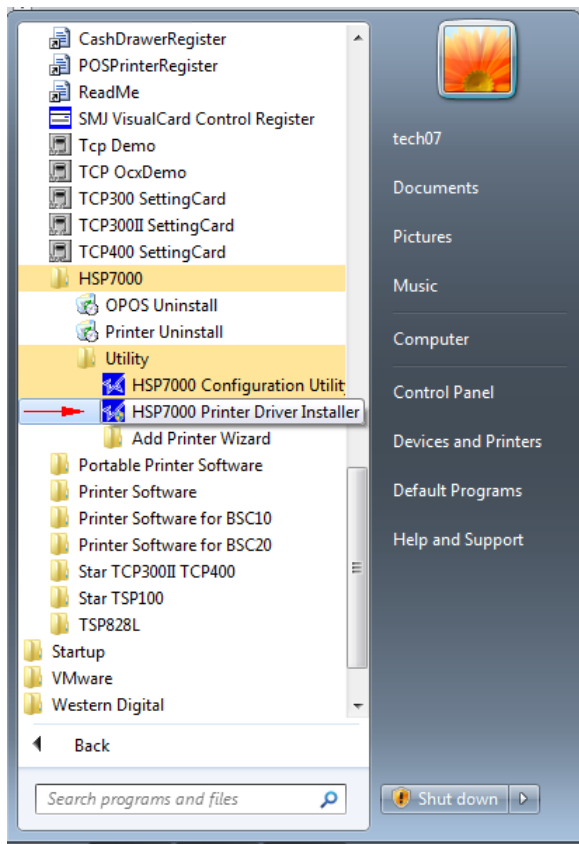


19. Connect USB Cable to PC then turn printer on and select 'USB (Vendor Class)' then click 'Next'

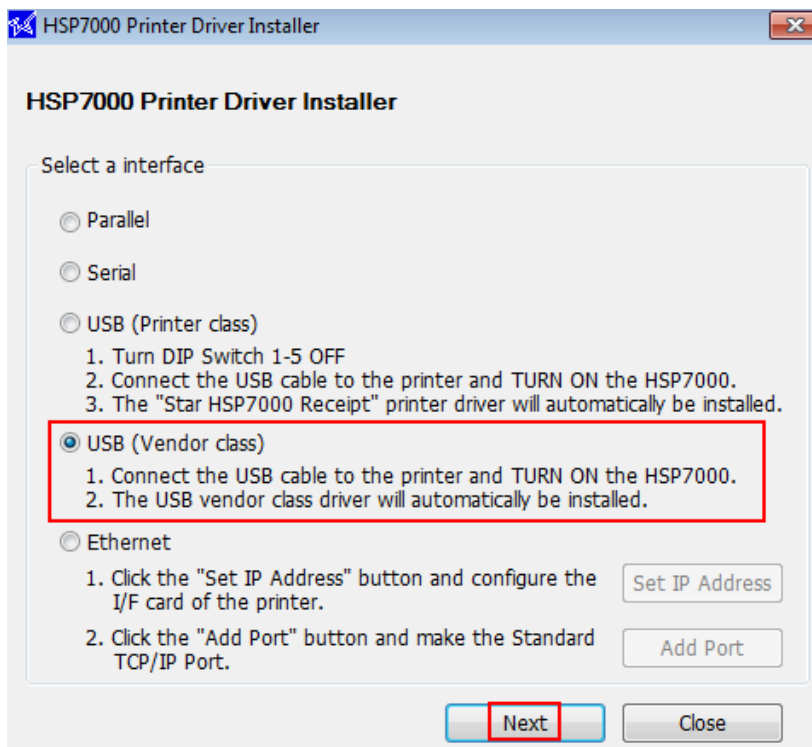




How to install HSP7000 windows driver and OPOS testing

20. Following a Port that you get in **Control Panel > Device and Printers**

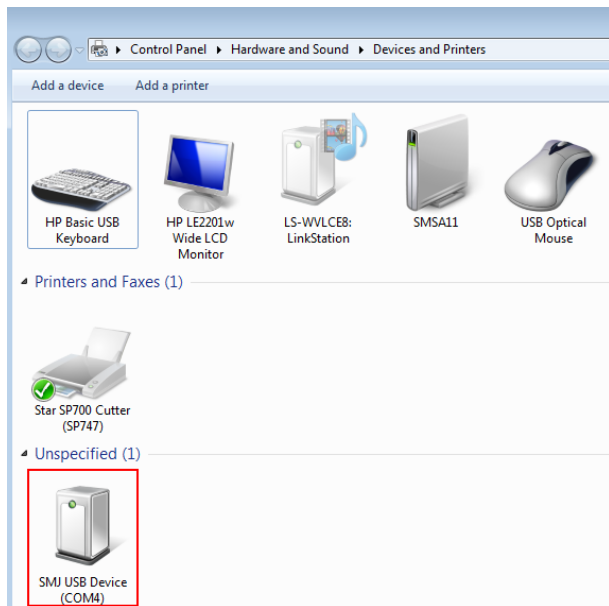


21. Select Port same as devices and printers and click '**Install**'

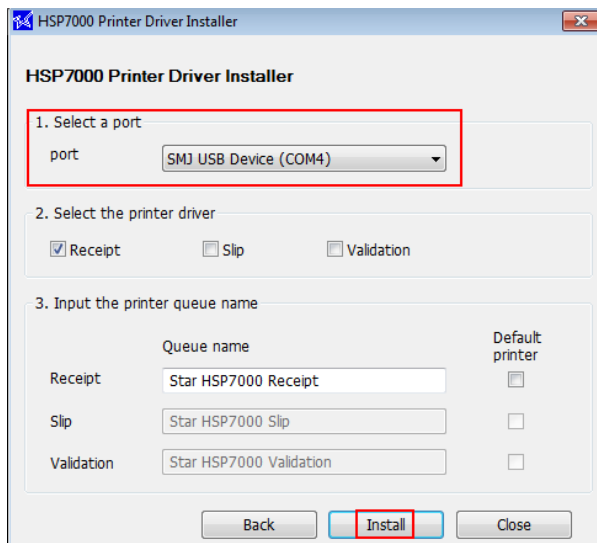




How to install HSP7000 windows driver and OPOS testing

22. Click 'OK'

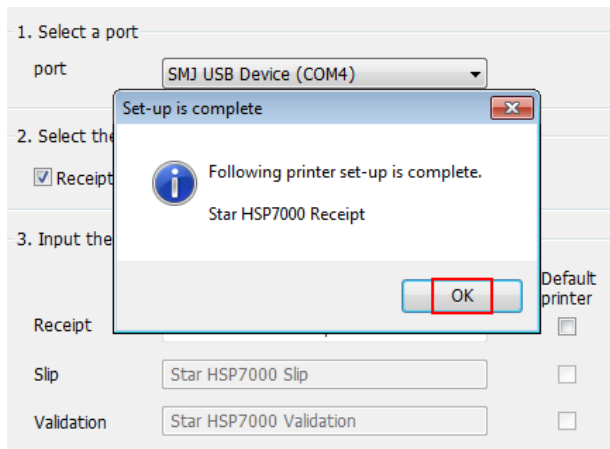


23. Open HSP7000 Configuration Utility

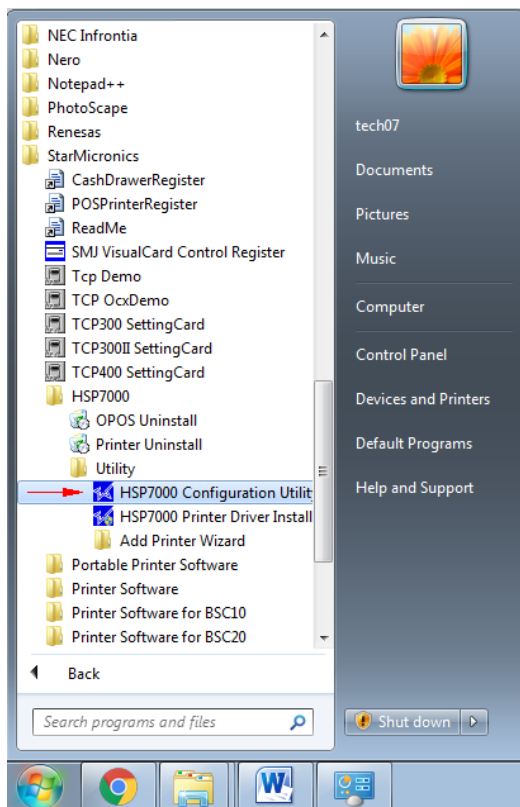




How to install HSP7000 windows driver and OPOS testing

24. Click 'OPOS'

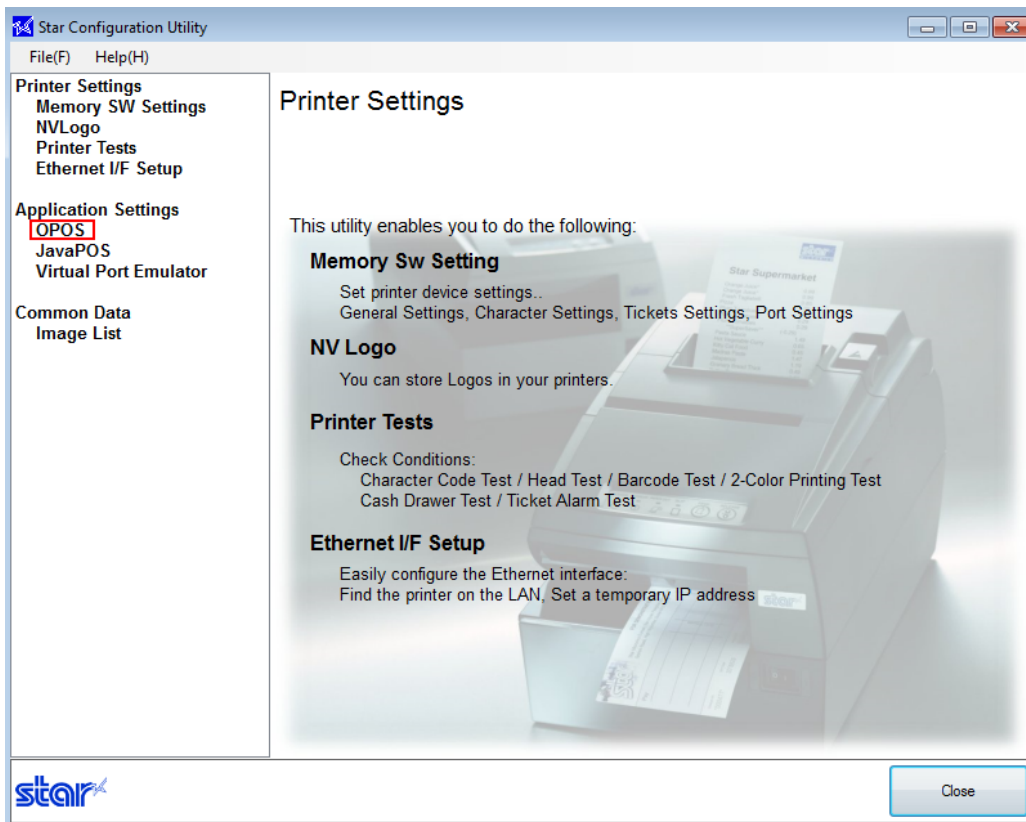


25. Click 'Add New'

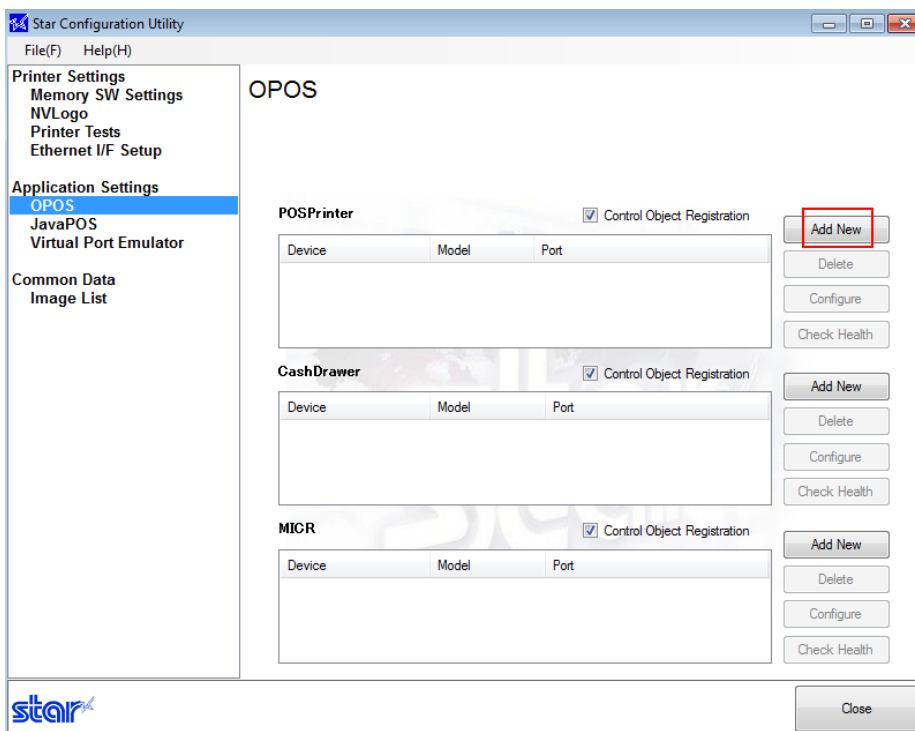




How to install HSP7000 windows driver and OPOS testing


26. Click **Port Name** for select port that you are connecting and you can change printer name in Device Name as well.

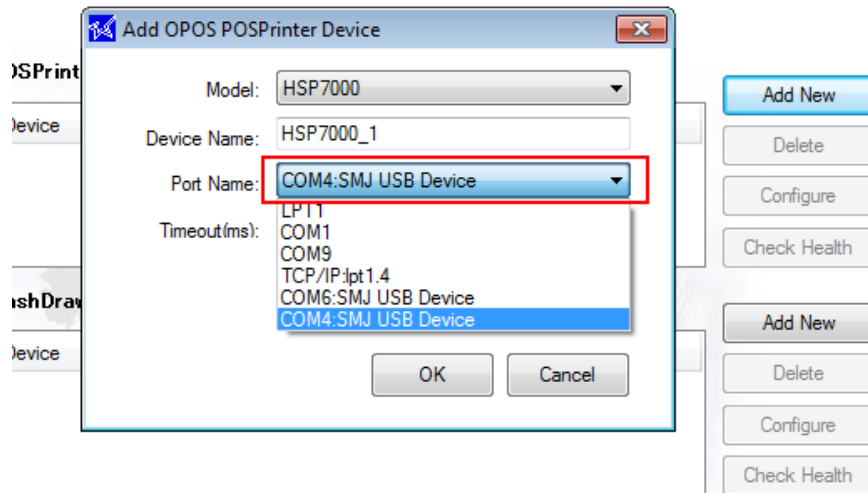


27. Select printer and click '**Check Health**'

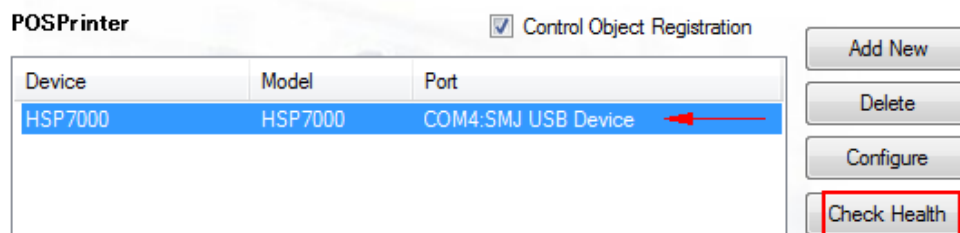

 28. Click '**Check Health**'

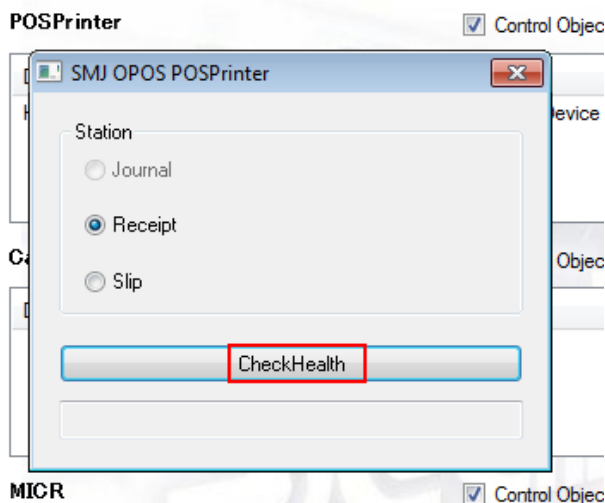



Station

☐ Journal

☒ Receipt

☐ Slip

CheckHealth

OPOS_SUCCESS →

Bold (ESD) (x4)
 StarMicroonics
 Underline (ESD) (x4)
 StarMicroonics
 Reverse video (ESD) (rv)
StarMicroonics
 Single high & wide (ESD) (10)
 StarMicroonics
 Double wide (ESD) (20)
 StarMicroonics
 Double high (ESD) (30)
 StarMicroonics
 Double high & wide (ESD) (40)
 StarMicroonics
 Scale horizontally (ESD) (10)
 StarMicroonics
 Scale horizontally (ESD) (20)
 StarMicroonics
 Scale horizontally (ESD) (30)
 StarMicroonics
 Scale horizontally (ESD) (40)
 StarMicroonics
 Scale horizontally (ESD) (50)
 StarMicroonics
 Scale horizontally (ESD) (60)
 StarMicroonics
 Scale horizontally (ESD) (80)
 StarMicroonics
 Scale horizontally (ESD) (100)
 StarMicroonics
 Scale vertically (ESD) (rv)
 StarMicroonics
 Scale vertically (ESD) (2vc)
 StarMicroonics
 Scale vertically (ESD) (3vc)
 StarMicroonics
 Scale vertically (ESD) (4vc)
 StarMicroonics
 Scale vertically (ESD) (5vc)
 StarMicroonics
 Scale vertically (ESD) (6vc)
 StarMicroonics