



BSC10UD Configuration for printing 48 Character per Line

****Please use Laptop or PC for configuration and don't require to turn off the printer during configuration****

1. Download printer utility from <http://www.starmicronics.com/support/> and select option as the picture below.

Star Micronics Support Database

Welcome to the Star Micronics Global Support Site! Browse Star's online database to easily and quickly find drivers, software, documentation and FAQs. To begin, choose your printer below.

[Star Micronics Software License Agreement](#)

Product Type: [How do I find my Printer Type?](#)

Printer Family: [How do I find my Printer Family Name?](#)

Printer Model: [How do I find my Printer Model Name?](#)

Interface: [How do I identify my interface?](#)

Operating System: [How do I identify my Operating System?](#)

Language:



2. Click '**BSC10 Installation CD V2.1**' for download.

Drivers Manuals Other Downloads FAQs

Star Micronics BSC10 Windows Driver Downloads

 
Recommended Driver:

BSC10 Installation CD V2.1* (146MB)

Installation CD Package including Windows Driver, Configuration Utility, OPOS and Manuals
Windows 10(32/64-bit), Windows 8.1(32/64-bit), Windows 8(32/64-bit), Windows 7(32/64-bit),
Windows Vista(32/64-bit)

***Important:** This Installation CD Package is only supported on BSC10 models with Firmware V1.2 or later. If you have an earlier version or are unsure how to check which firmware your printer has, please [contact us](#) and we will supply you with the correct driver.

3. After finished downloaded go to the destination folder, Right click on '**Autorun**' then click '**Run as administrator**'.

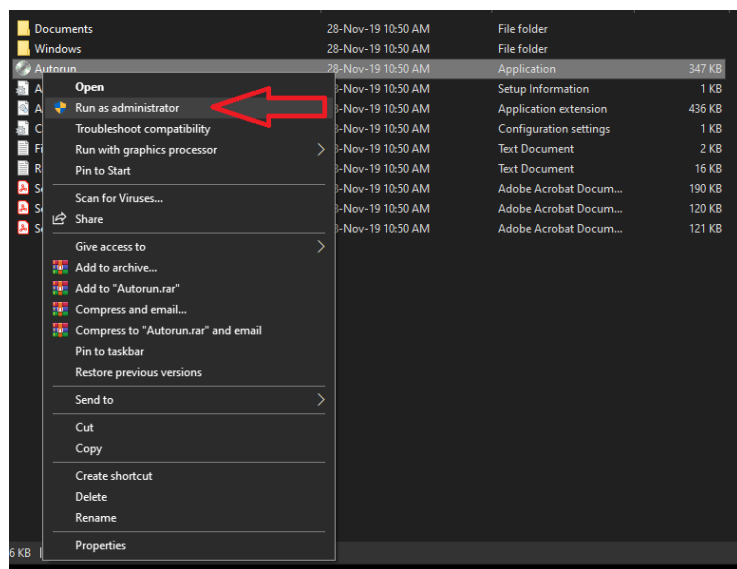




BSC10UD Configuration for printing 48 Character per Line

4. Click 'Install'.



 
5. Select 'I AGREE' then click 'Next'.

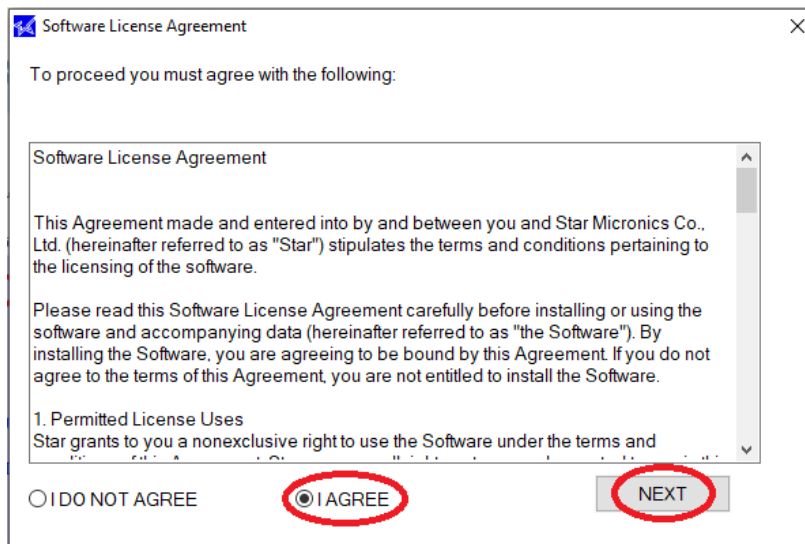




BSC10UD Configuration for printing 48 Character per Line

 6. Click 'Next'.

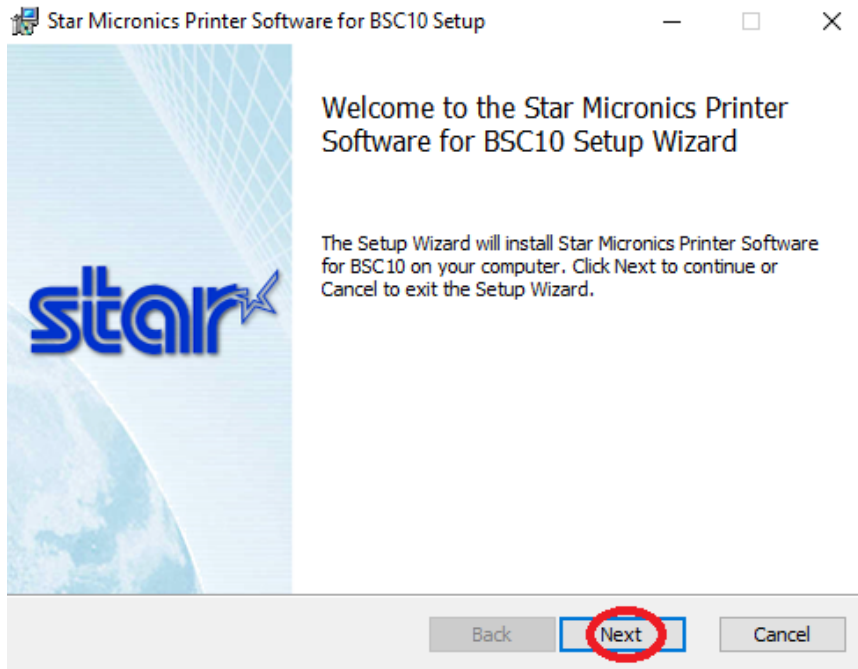

 
7. Check 'I accept the terms in the License Agreement' then click 'Next' as below.

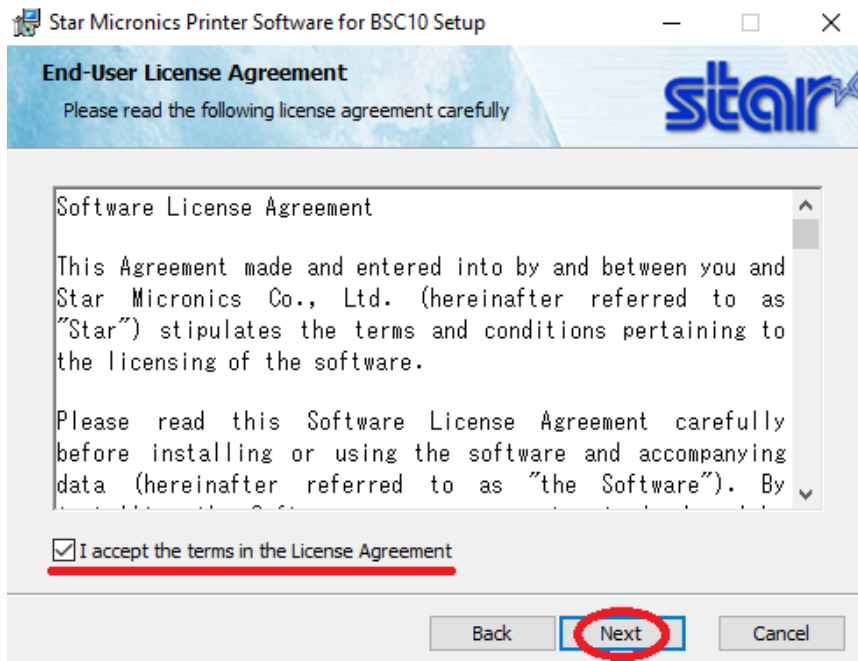




BSC10UD Configuration for printing 48 Character per Line

 8. Click 'Typical'.

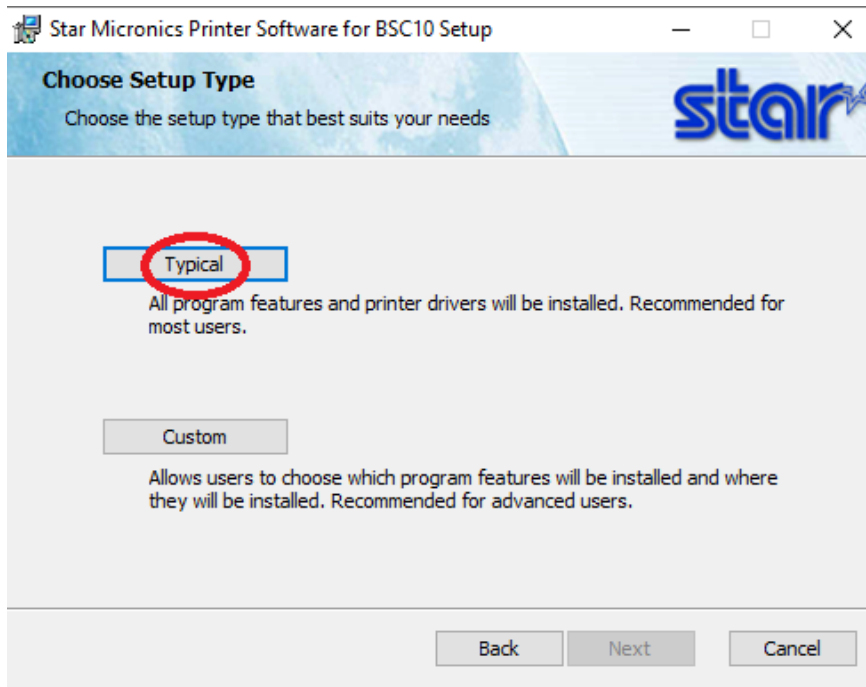

 
9. Click 'Install' and please wait until the installation finishes.

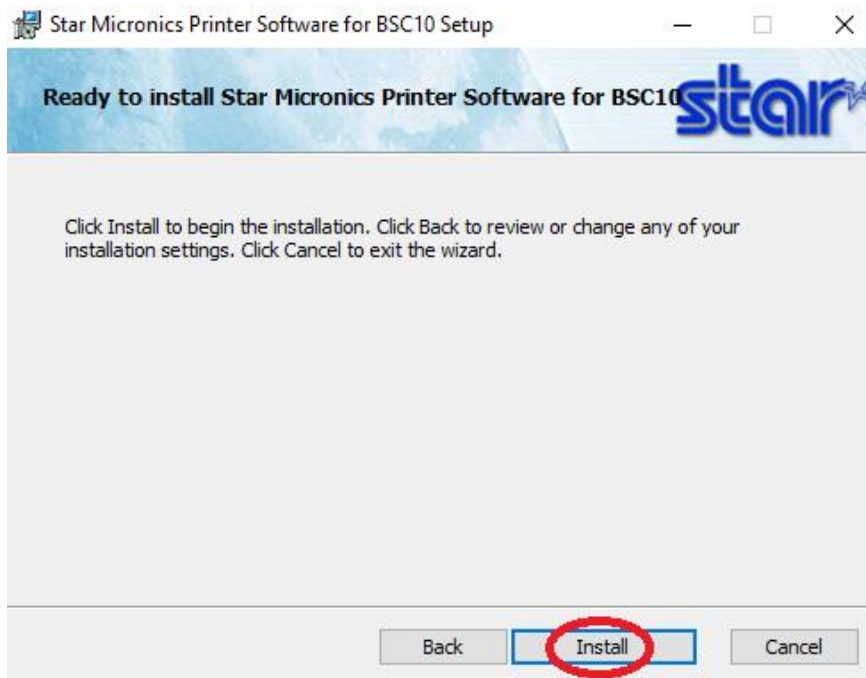




BSC10UD Configuration for printing 48 Character per Line

10. Click 'Finished'.

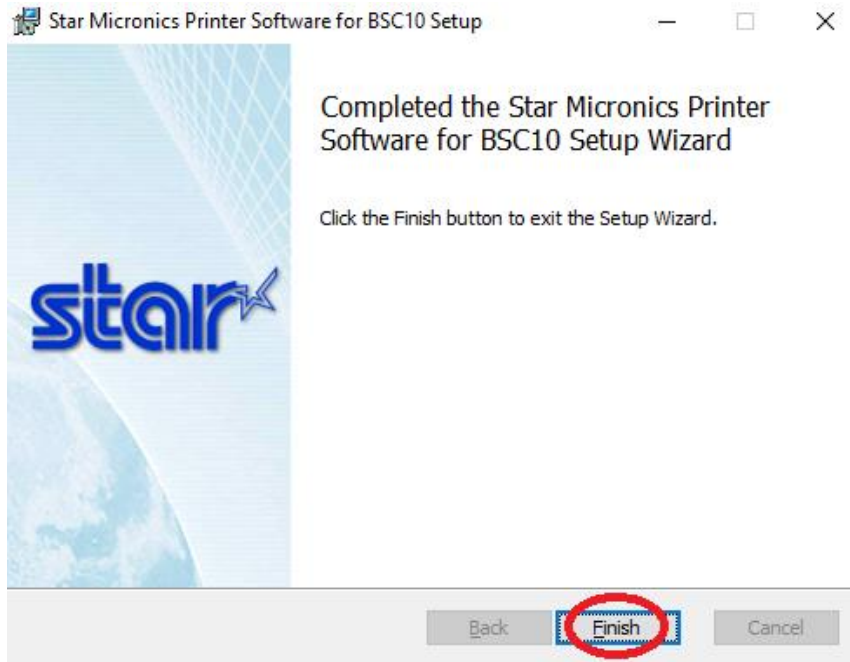

11. Connect USB cable to printer BSC10UD then turn on the printer.

 
12. Open program 'Printer Utility BSC10'.

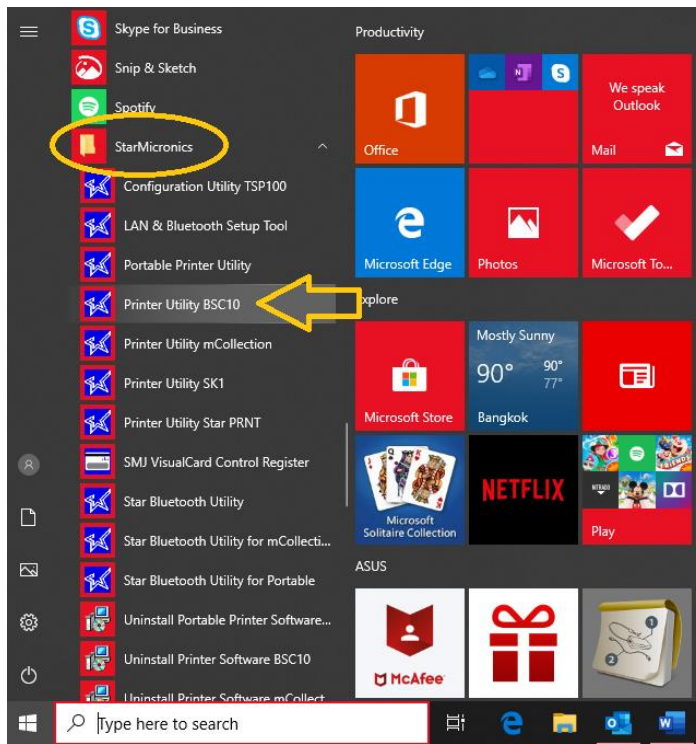




BSC10UD Configuration for printing 48 Character per Line

 13. Select 'USB' and you will find the printer driver 'Star BSC10 Windows Printer Queue' then click "Done".

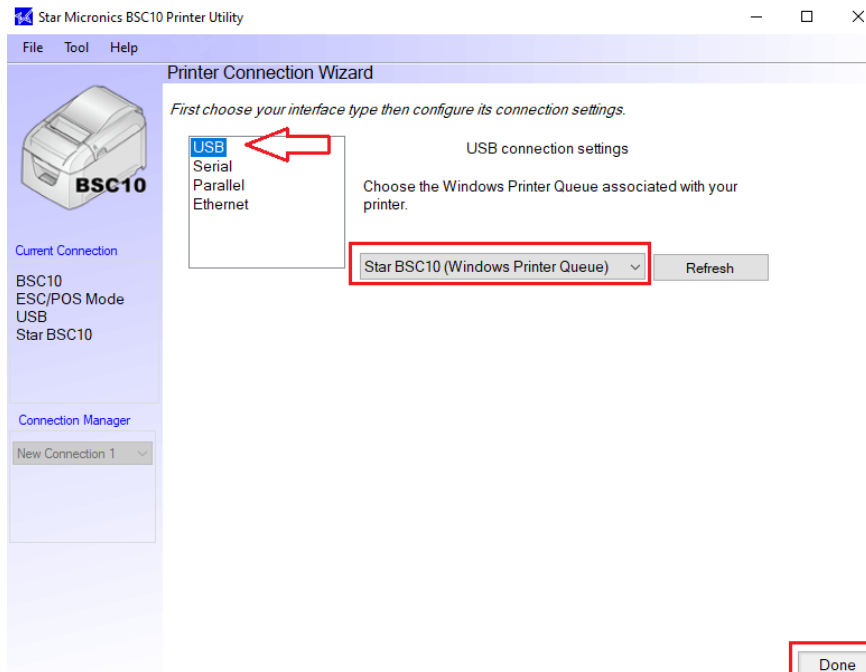

 14. You can setup your printer name or click 'OK' immediately.

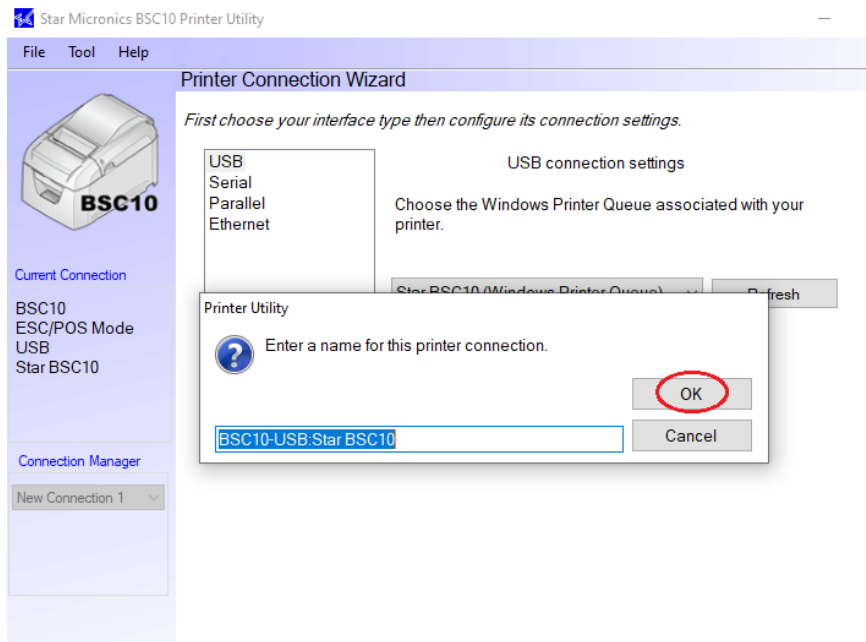




BSC10UD Configuration for printing 48 Character per Line

16. Click “Printer Setting”.



 
17. Please wait until program finishes downloading then scroll down to find “Paper Size”.

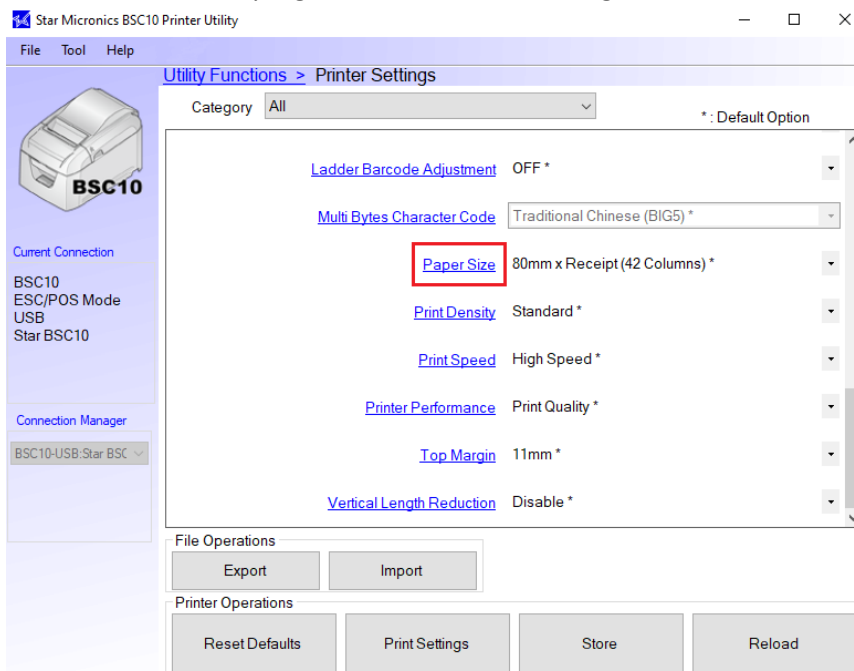




BSC10UD Configuration for printing 48 Character per Line

 18. Click Drop Down then select “80mm x Receipt (48 Columns)”.

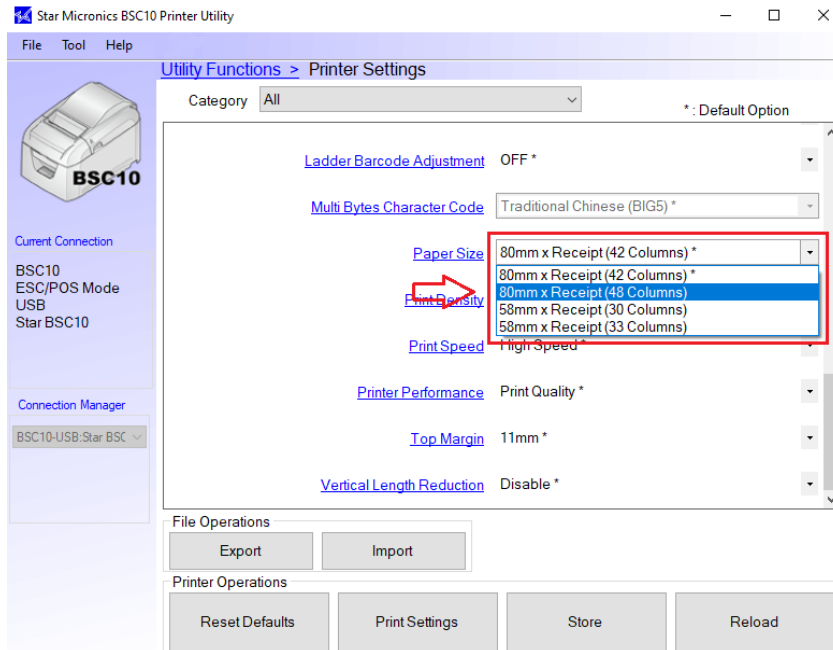

 
19. Click “Store” for save the configuration then printer will make a sound.

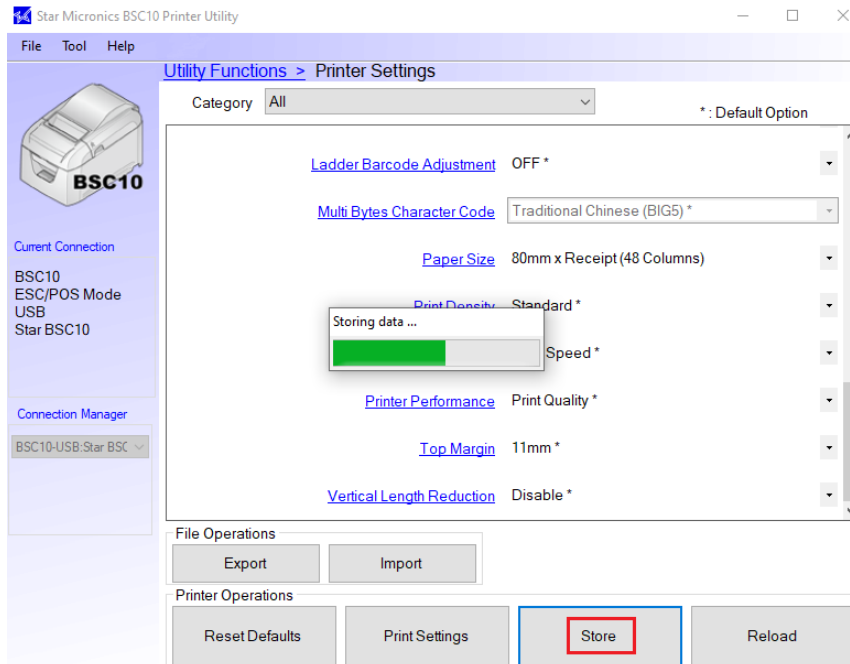




BSC10UD Configuration for printing 48 Character per Line

 20. Click “OK”

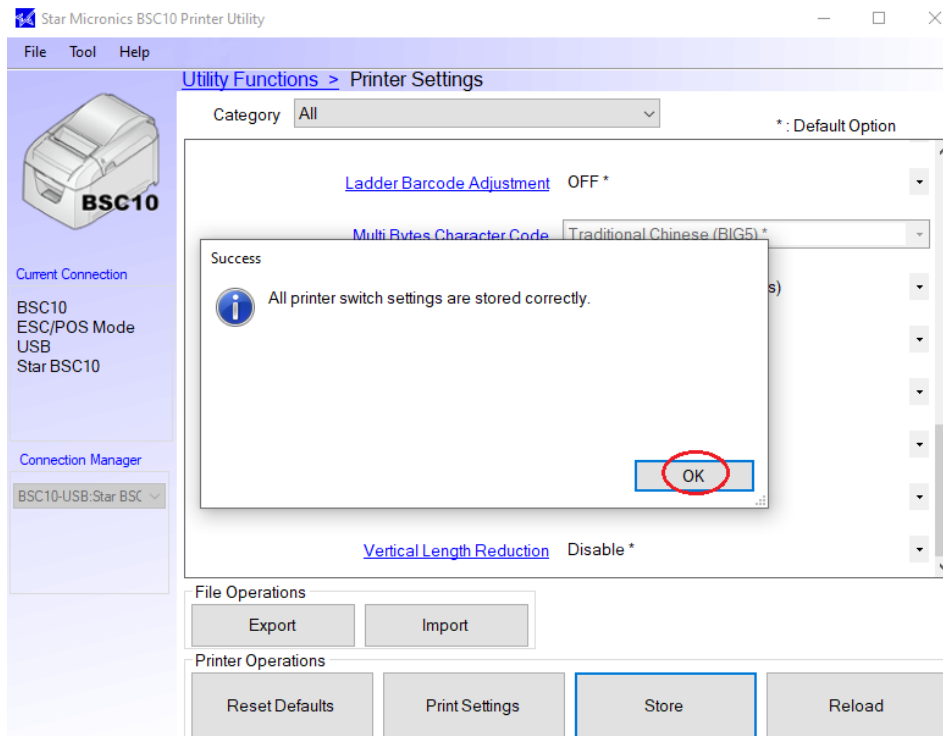

 21. Click “Print Setting” then “OK” for checking latest configuration, Printer will print the Self-test. You can check the configuration from Self-test paper as next picture.

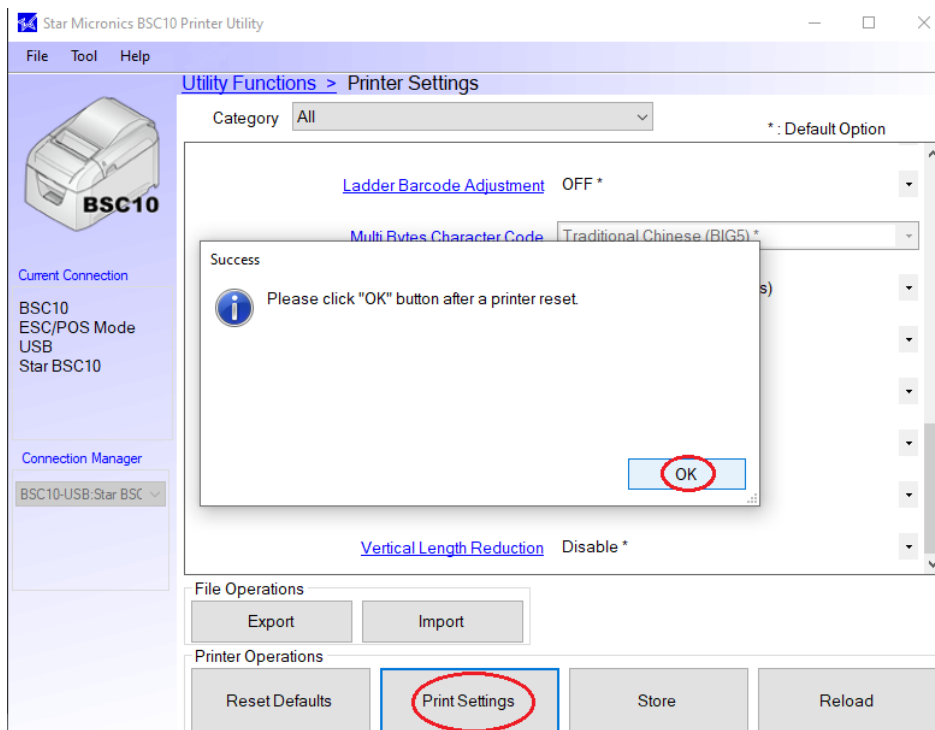



BSC10UD Configuration for printing 48 Character per Line

Self-Test Paper

