

- \*\*กรุณาใช้ Laptop หรือ PC ในการตั้งค่าเท่านั้น และไม่จำเป็นต้องเปิดเครื่องพิมพ์ ในระหว่างติดตั้งโปรแกรม\*\*
- 1. ดาวน์โหลด printer utility จาก http://www.starmicronics.com/support/ และเลือกตามภาพด้านล่าง

#### Star Micronics Support Database

Welcome to the Star Micronics Global Support Site! Browse Star's online database to easily and quickly find drivers, software, documentation and FAQs. To begin, choose your printer below.

Star Micronics Software License Agreement

Product Type	Thermal  How do 1 find my Printer Type?
Printer Family	BSC10  How do I find my Printer Family Name?
Printer Model	BSC10  How do Lind my Printer Model Name?
Interface	USB  V
Operating System	Windows 10 / 8 / 7 / Vista
Language	How do I identity my Operating System?       EN / CH / FR / KR / RU / SP ▼

## 2. คลิก 'BSC10 Installation CD V2.1' เพื่อดาวน์โหลด



3. หลังจากดาวน์โหลดเสร็จสิ้น ไปที่โฟลเดอรีที่ดาวน์โหลดไฟล์ไว้ จากนั้น คลิกขวา 'Autorun' แล้วคลิก 'Run as

### administrator'





### 4. คลิก **'Install'**



## 5. เลือก **'I AGREE'** แล้วคลิก **'Next'**

ş	Software License Agreement		×
	To proceed you must agree with the following:		
	Software License Agreement	^	
	I his Agreement made and entered into by and between you and Star Micronics Co., Ltd. (hereinafter referred to as "Star") stipulates the terms and conditions pertaining to the licensing of the software.		
	Please read this Software License Agreement carefully before installing or using the software and accompanying data (hereinafter referred to as "the Software"). By installing the Software, you are agreeing to be bound by this Agreement. If you do not agree to the terms of this Agreement, you are not entitled to install the Software.		
	1. Permitted License Uses		
	Star grants to you a nonexclusive right to use the Software under the terms and	~	
	OIDO NOT AGREE OIAGREE NEXT		
_			



6. คลิก **'Next'** 



7. ติ๊กถูกที่ 'I accept the terms in the License Agreement' แล้วคลิก 'Next'





## 8. คลิก **'Typical'**

🖟 Star Micronics Printer Software for BSC10 Setup	_		×
Choose Setup Type Choose the setup type that best suits your needs	5	ta	r
Typical All program features and printer drivers will be installed. R most users.	ecommer	nded for	
Custom Allows users to choose which program features will be inst they will be installed. Recommended for advanced users.	talled and	where	
Back Nex	ct	Canc	el
9. คลิก <b>'Install'</b> และรอจนติดตั้งโปรแกรมเสร็จ			
记 Star Micronics Printer Software for BSC10 Setup	8. <del></del>		×
Ready to install Star Micronics Printer Software for BS	C105	ta	r
Click Install to begin the installation. Click Back to review or change installation settings. Click Cancel to exit the wizard.	any of yo	pur	
Back Install		Cano	el



10. คลิก **'Finished'** 



- 11. เชื่อมต่อสาย USB เข้ากับเครื่องพิมพ์ BSC10UD และ เปิดครื่องพิมพ์
- 12. เปิดโปรแกรม 'Printer Utility BSC10'





13. เลือก 'USB' แล้วคุณจะเจอ printer driver 'Star BSC10 Windows Printer Queue' หลังจากนั้นให้กด "Done"



14. คุณสามารถตั้งชื่อของเครื่องพิมพ์ได้หากเสร็จแล้วให้คลิก '**OK**'





### 16. คลิก "Printer Setting"

#### 🜠 Star Micronics BSC10 Printer Utility



## 17. โปรดรอให้โปรแกรมโหลดจนเสร็จ หลังจากนั้นเลื่อนลงมาด้านล่างหาหัวข้อ "Paper Size"

候 Star Micronics BSC10	Printer Utility	- 0	×
File Tool Help			
~	Utility Functions > Printer Settings		
	Category All	✓ * : Default Option	
BSC10	Ladder Barcode Adjustment Ol	FF*	•
	Multi Bytes Character Code Tr	raditional Chinese (BIG5) *	-
Current Connection BSC10	Paper Size 80	0mm x Receipt (42 Columns) *	•
ESC/POS Mode USB Star BSC10	Print Density St	tandard *	•
	Print Speed Hi	igh Speed *	•
Connection Manager	Printer Performance Pr	rint Quality *	•
BSC10-USB:Star BSC $\vee$	Top Margin 11	1mm *	•
	Vertical Length Reduction Di	isable *	
	File Operations		
	Export Import		
	Printer Operations		
	Reset Defaults Print Settings	Store Reload	



18. คลิก Drop Down แล้วเลือก "80mm x Receipt (48 Columns)"

🜠 Star Micronics	s BSC10	Printer Utility				-		×	
File Tool H	lelp								
		Utility Functions > Pri	inter Settings						
		Category All		~	*:De	efault C	Option		
BSC10	10	Lac	Ider Barcode Adjustment	OFF *	*			•	~
		IVI.	ini bytes character code	Traditional Chinese (Bids)					
Current Connection			Paper Size	80mm x Receipt (42 Colum	ns)*			-	
BSC10 ESC/POS Mode USB Star BSC10	e		Print Speed	80mm x Receipt (42 Colum 80mm x Receipt (48 Colum 58mm x Receipt (30 Colum 58mm x Receipt (33 Colum 1 ligh Speed	ns)* ns) ns) ns)				
Connection Manage	jer		Printer Performance	Print Quality *				•	
BSC10-USB:Star BS	sc $\sim$		<u>Top Margin</u>	11mm *				•	
		2	Vertical Length Reduction	Disable *				•	~
		File Operations							
		Export	Import						
		Printer Operations							
		Reset Defaults	Print Settings	Store		Rel	oad		

19. กด "Store" เพื่อบันทึกข้อมูลการตั้งค่า และหลังจากนั้นเครื่องพิมพ์จะมีเสียง

📢 Si	tar Micro	nics BSC10	Printer Utility					-		>	<
File	Tool	Help									
	_	_	Utility Functions	Prir	nter Settings						
		~	Category All			~	*:[	Default (	Dotion		
	B	5C10		Lad	der Barcode Adjustment	OFF *				•	^
	~			Mu	lti Bytes Character Code	Traditional Chinese	(BIG5) *				
Currer	nt Connec	tion			Paper Size	80mm x Receipt (48	Columns)			•	
ESC, USB Star	/POS M BSC10	ode		S	Print Donsity itoring data	Standard *				•	
						Speed *				•	
Conn	ection Ma	nager			Printer Performance	Print Quality *				•	
BSC1	0-USB:St	ar BSC $\smallsetminus$			Top Margin	11mm *				•	
				V	ertical Length Reduction	Disable *				•	¥
			File Operations								
			Export		Import						
			Printer Operations								
			Reset Defaults	5	Print Settings	Store		Rel	oad		



## 20. คลิก "**OK**"

🚧 Star	Micro	nics BSC10	Printer Utility	_		$\times$
File	Tool	Help				
	~	_	<u>Utility Functions &gt;</u> Printer Settings			
			Category All ~	* : Default	Option	
	BS	C10	Ladder Barcode Adjustment OFF*			•
			Multi Bytes Character Code Traditional Chinese (BIG5	)*		-
Current C	onnect	tion	Success	- >		
BSC10			All printer switch settings are stored correctly.	s)		•
ESC/PC	DS M	ode				-
Star BS	C10					
						-
						-
Connecti	ion Ma	nager	ОК			
BSC10-U	ISB:Sta	ar BSC $\sim$				•
			Vertical Length Deduction – Dispble *			
						~
			File Operations			
			Export Import			
			Printer Operations			
			Reset Defaults Print Settings Store	Re	load	

21. คลิก "Print Setting" หลังจากนั้นคลิก "OK" เพื่อตรวจสอบการตั้งค่าล่าสุด โดยเครื่องพิมพ์จะพิมพ์ ใบ Self-Test ออกมา สามารถตรวจสอบได้จาก บรรทัดดังภาพ ในใบ Self-Test ในหน้าถัดไป

📢 Star Micronics BSC1	0 Printer Utility	- 🗆	$\times$
File Tool Help			
$\sim$	Utility Functions > Printer Settings		
	Category All ~	* : Default Option	
BSC10	Ladder Barcode Adjustment OFF *		-
	Multi Bytes Character Code Traditional Chinese (BIG5	)*	*
Current Connection	Success		
BSC10 ESC/POS Mode	Please click "OK" button after a printer reset.	s)	-
USB Star BSC10			•
Star Boorto			-
Connection Manager	ОК		•
DOC 10-03D.Star DOC V		:	•
	Vertical Length Reduction Disable *		- ,
	File Operations		
	Export Import		
	Printer Operations		
	Reset Defaults Print Settings Store	Reload	



ใบ Self-Test

*** 8SC10 LRN Ver1.3 -b1.3 ***	
Memory Switch FEDCBR9876543210 HEX. <pre><pre><pre><pre><pre><pre>FEDCBR9876543210 HEX.</pre><pre><pre><pre><pre><pre><pre><pre>&lt;</pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre>	
	<pre> Memory Switch FEDCBR9878543210 HEX. <d> 0000000000000000 0000 &lt;1&gt; 00000000000000 0000 &lt;2&gt; 0000000000000 0000 &lt;2&gt; 0000000000000 0000 &lt;2&gt; 0000000000000 0000 &lt;2&gt; 0000000000000 0000 &lt;2&gt; 0000000000000 0000 &lt;2&gt; 00000000000000 0000 &lt;2&gt; 0000000000000 0000 &lt;2&gt; 00000000000000 0000 &lt;2&gt; 00000000000000 0000 &lt;2&gt; 00000000000000 0000 &lt;2&gt; 00000000000000 0000 &lt;2&gt; 00000000000000 0000 &lt;2&gt; 00000000000000 0000 &lt;2&gt; 0000000000000 0000 &lt;2&gt; 000000000000000000000000000000000000</d></pre>