

Connect printer through LAN Cable for get IP Address

1. Download and Install Utility > http://www.starmicronics.com/support/ Select same as below

Star Micronics Support Database

Welcome to the Star Micronics Global Support Site! Browse Star's online database to easily and quickly find drivers, software, documentation and FAQs. To begin, choose your printer below.

Star Micronics Software License Agreement

Product Type	Thermal How do I find my Printer Type?
Printer Family	BSC10 How do I find my Printer Family Name?
Printer Model	BSC10 How do I find my Printer Model Name?
Interface	Ethernet V How do I identify my interface?
Operating System	Windows 10 / 8 / 7 / Vista <u>How do I identify my Operating System?</u>
Language	EN / CH / FR / KR / RU / SP 🗸

2. Click BSC10 Installation CD V2.1 for download

Recommended Driver:

BSC10 Installation CD V2.1* (146MB)

Installation CD Package including Windows Driver, Configuration Utility, OPOS and Manuals Windows 10(32/64-bit), Windows 8.1(32/64-bit), Windows 8(32/64-bit), Windows 7(32/64-bit), Windows Vista(32/64-bit)

3. After download done, Go to that file and right click at "Autorun" and click "Run as administrator"





4. Click "Install"

候 Star Micronics Printer Software	Installation CD
Install	
Manual	
SDK Contact Us	Star Micronics Printer Software
Browse CD	Installation CD
Exit	Ver.2.1

5. Check "I Agree" then click "Next"

🜠 Software License Agreement

To proceed you must agree with the following:







7. Check I accept... then click "Next"



Ready to install Star Micronics Printer Software for BSC10
Click Install to begin the installation. Click Back to review or change any of your installation settings. Click Cancel to exit the wizard.
Back Install Cancel



10. Click "Finish"

🛃 Star Micronics Printer Softwa	re for BSC10 Setup	-		×
	Completed the Star Micron Software for BSC10 Setup	ics Print Wizard	er	
star*	Click the Finish button to exit the Setup	Wizard.		
	<u>B</u> ack <u>Finis</u>	;h	Cance	

11. Open the program "Printer Utility BSC10"





12. Click "Ethernet > Search Network" and waiting till get IP Address then click "Done"



13. Click "OK" if do not want to change printer name Printer Utility



14. Click "OK"

	operation	η.
T	Printer (Utility
C	1	Please install or manage printer driver from [Windows Printer Queue Management] page if you would like to send data via the driver.
L		
T	naced on	
	based on	r ine text of your receipte.

15. Click "Printer Setting" and waiting till finished download current configuration





16. Setting at Paper Size to 80mm x Receipt (48 Columns) and Printer Density to +3 (Darkest)

Utility Functions > Printer Settings

Category A	All	✓ * : Default Option		
	Ladder Barcode Adjustment	OFF *	•	^
	Multi Bytes Character Code	Traditional Chinese (BIG5) *	+	
	Paper Size	80mm x Receipt (42 Columns) *	•	
	Print Density	80mm x Receipt (42 Columns) 80mm x Receipt (48 Columns) 58mm x Receipt (30 Columns) 58mm x Receipt (33 Columns)		
	Print Speed	High Speed *	•	J
	Printer Performance	Print Quality *	•	
	Top Margin	11mm *	•	
	Vertical Length Reduction	Disable *	•	*

<u>Utility Functions ></u> Printer Settings

Categor	y All		~	* : Default Option		
		Ladder Barcode Adjustment	OFF *		•	^
		Multi Bytes Character Code	Traditional C	Chinese (BIG5) *	Ŧ	
		Paper Size	80mm x Rec	eipt (48 Columns)	•	
		Print Density	Standard *		•	
		Print Speed	Standard * +1 +2			
		Printer Performance	+3 (Darkest) Print Quality	•	÷	
		<u>Top Margin</u>	11mm *		•	
		Vertical Length Reduction	Disable *		•	~



17. Click "Store" for save configuration then click "OK"

Utility Functions > F	Printer Settings	
Category All		* : Default Option
Ŀ	adder Barcode Adjustment	OFF*
1	Multi Bytes Character Code	Traditional Chinese (BIG5) *
	Paper Size	80mm x Receipt (48 Columns)
	Print Density	+3 (Darkest)
	Print Speed	High Speed *
	Printer Performance	Print Quality *
	Top Margin	11mm* •
	Vertical Length Reduction	Disable *
File Operations		
Export	Import	
Printer Operations		
Reset Defaults	Print Settings	Store

Success



All printer switch settings are stored correctly.

OK



18. Click "Printer Setting" for printing self-test of the printer (Should be same as next picture)

Utilit	y Functions	>	Printer Settings	

Category	All		~	* : Default Optic	on
	Lado	ler Barcode Adjustment	OFF *		-
	Mul	ti Bytes Character Code	Traditional Chinese	(BIG5) *	-
		Paper Size	80mm x Receipt (48	Columns)	•
		Print Density	+3 (Darkest)		•
		Print Speed	High Speed *		•
		Printer Performance	Print Quality *		•
		<u>Top Margin</u>	11mm *		•
	Ve	ertical Length Reduction	Disable *		
File Operation	ns				
Expor	rt	Import			
Printer Opera	itions				
ResetDe	efaults	Print Settings	Store	Reload	



*** BSC10 LAN Ver1.3 -b1.3 *** -- Memory Switch --FEDCBR9876543210 HEX. <0> 00000010000000 0200 <1> 00000000000000 0000 <2> <3> 0000000000000000000 0000 <7> 000000000000000 0000 <8> 00000000000000 0000 -- Memory Switch Detail --<0>4 = Character Mode: Standard <1>9 = Top Margin: Default <1>7 = Large Font: Vaild <2>C = 180 Rotation: Invalid <2>A = Print Start Control: Line <2>5,4= Print Speed: Normal <2>2-O= Print Density: +3 <4>C = Motion Unit: Dot by dot <4>4 = Character/Line: Max <4>2-O= Printable Area: 72mm <7>C = ASB: Valid <7>4 = BUSY: All F-C= H-Reduced Size: Invalid B-8= V-Reduced Size: Invalid 3 = H-Paper Reduction: Invalid <8>2 = V-Paper Reduction: Invalid