



How to setting Printer BSC10 to support 58mm paper size

**Please install driver printer before setting


**This manual is using BSC10UD and connecting through USB Port

1. Connect USB Cable between printer to Windows PC and turn it on then Windows will get automatic Star BSC10 drive printer
[Check in Control Panel]


∨ Printers (7)



2. Right click at **Star BSC10 > Printer Properties**

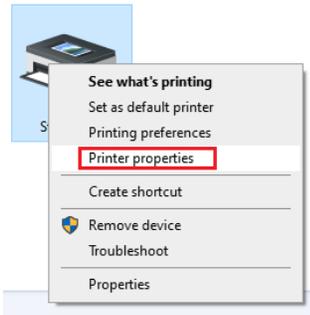


3. Select **Advance > Printing Defaults...**

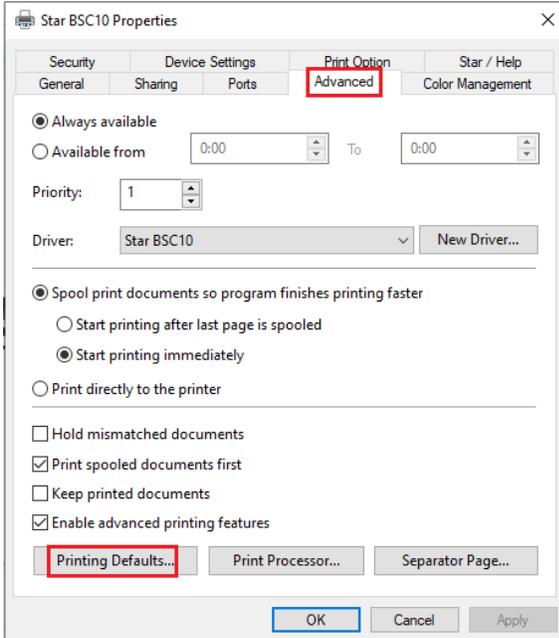




How to setting Printer BSC10 to support 58mm paper size


4. Click **Advanced...**

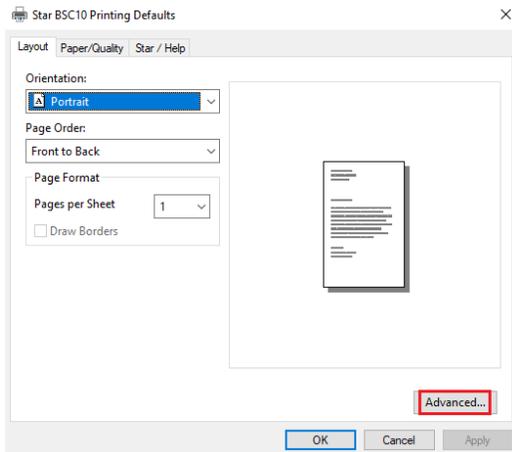

5. Change Paper Size to **58mm X Receipt (33 Columns)** then click OK 2 times

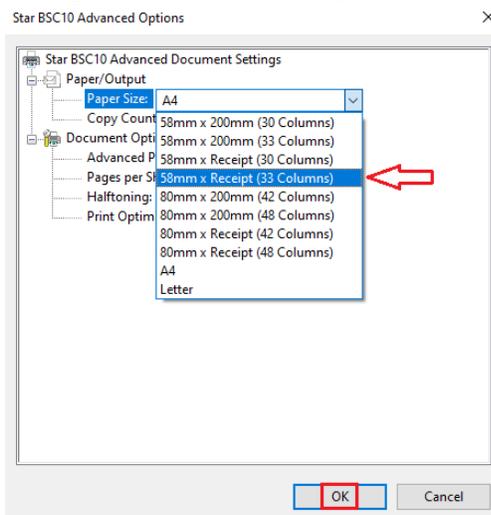


6. Select **Device Setting** and change **FRICITION** to **58mm X Receipt (33 Columns)** then click OK

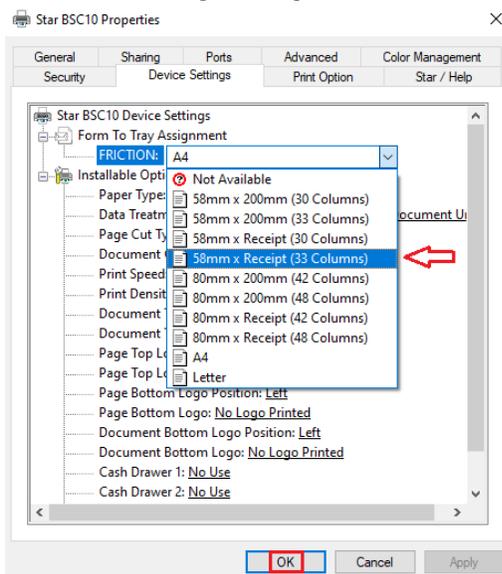



How to setting Printer BSC10 to support 58mm paper size


7. Right click at **Star BSC10 > Printer Properties** again

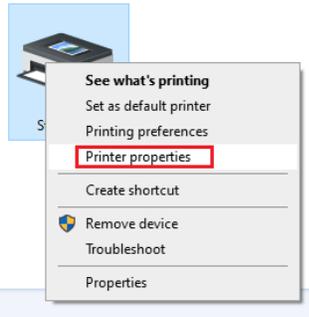

8. Select **Star / Help** and click **Open Printer Utility**



9. Click **OK** if do not change printer name in this utility

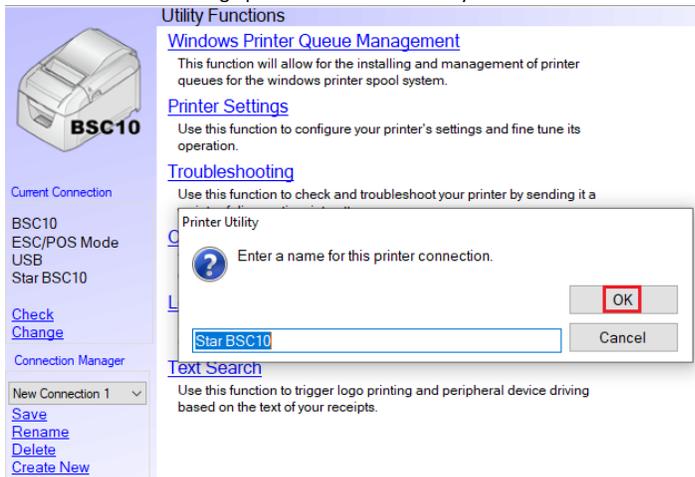



How to setting Printer BSC10 to support 58mm paper size

10. Click **Printer Setting** and program will download current setting

BSC10

Current Connection
BSC10
ESC/POS Mode
USB
Star BSC10

[Check Change](#)

Connection Manager
Star BSC10
[Rename](#)
[Delete](#)
[Create New](#)

Utility Functions

- [Windows Printer Queue Management](#)
This function will allow for the installing and management of printer queues for the windows printer spool system.
- Printer Settings**
Use this function to configure your printer's settings and fine tune its operation.
- [Troubleshooting](#)
Use this function to check and troubleshoot your printer by sending it a variety of diagnostic print patterns.
- [OPOS](#)
This function allows you to register and configure OPOS POSPrinter and CashDrawer devices.
- [Logo Store](#)
Use this to store your logos and images into the printer. This is often useful in terms of deployment and also in terms of print speed.
- [Text Search](#)
Use this function to trigger logo printing and peripheral device driving based on the text of your receipts.

11. Change **Paper Size** to **58mm x Receipt (33 Columns)**

BSC10

Current Connection
BSC10
ESC/POS Mode
USB
Star BSC10

Connection Manager
Star BSC10

Utility Functions > Printer Settings

Category: All *: Default Option

Ladder Barcode Adjustment	OFF *
Multi Bytes Character Code	Traditional Chinese (BIG5) *
Paper Size	80mm x Receipt (42 Columns) *
Print Density	80mm x Receipt (48 Columns)
Print Speed	High Speed *
Printer Performance	Print Quality *
Top Margin	11mm *
Vertical Length Reduction	Disable *

12. Click **Store** to save setting



How to setting Printer BSC10 to support 58mm paper size

13. Click **Print Settings** to print self-test

