

This sample is using BSC10UD model

This sample is connecting through USB Cable from printer to Windows PC

1. Install driver printer by download from <u>http://www.starmicronics.com/support/</u> and select by following below picture.

Star Micronics Support Database

Welcome to the Star Micronics Global Support Site! Browse Star's online database to easily and quickly find drivers, software, documentation and FAQs. To begin, choose your printer below.

Star Micronics Software License Agreement

Product Type	Thermal 🗸
	How do I find my Printer Type?
Printer Family	BSC10 V
	How do I find my Printer Family Name?
Printer Model	BSC10 V
	How do I find my Printer Model Name?
Interface	USB 🗸
	How do I identify my interface?
Operating System	Windows 10 / 8 / 7 / Vista 🗸
	How do I identify my Operating System?
Language	EN / CH / FR / KR / RU / SP 🗸

2. Click "BSC10 Installation CD V2.1*" to download to your PC

and we will supply you with the correct driver.

X	Recommended Driver:
	BSC10 Installation CD V2.1 [*] (146MB) Installation CD Package including Windows Driver, Configuration Utility, OPOS and Manuals Windows 10(32/64-bit), Windows 8.1(32/64-bit), Windows 8(32/64-bit), Windows 7(32/64-bit), Windows Vista(32/64-bit)
	*Important: This Installation CD Package is only supported on BSC10 models with Firmware V1.2 or later. If you have an earlier version or are unsure how to check which firmware your printer has, please contact us

3. Then please install driver printer into your PC (While installing, please do not connect printer to PC)



How to setting Traditional Chinese Character for Star BSC10

4. After finished installed, Connect printer to Windows PC then open the program "Printer Utility BSC10"



5. Select "USB", you will be found automatic driver printer > Click "Done"





How to setting Traditional Chinese Character for Star BSC10

OK

Cancel

6. If you don't want to replace a new printer name > click "OK" Printer Utility



Enter a name for this printer connection.

SC10-USB:Star BSC10 (Copy 2)	

7. Click "Printer Setting"



8. Change setting at Asian Character (DBCS) > Double-Byte Character Set (DBCS) > Click "Store"

The loor help					
	Utility Functions > P	rinter Settings			
	Category All		* : Default Option		
BSC10		(Serial) Parity Check	None *	•	^
		ANK Character Spacing	No spacing *	•	
Current Connection		ASB Status	USB, Ethernet : Enable / Serial, Parallel : Disal	•	
ESC/POS Mode USB		Asian Character (DBCS)	Single-Byte Character Set (SBCS) *	•	
Star BSC10 (Copy	Block	Print Start Timing (Trigger)	Double-Byte Character Set (SBCS)		
Connection Manager		Compression (Barcode)	Compress *	•	
BSC10-USB:Star BSC \vee	<u>Co</u>	mpression (Paper Length)	Original *	•	
	<u>C</u>	ompression (Paper Width)	80mm (Do not compress) *	•	~
	File Operations				_
	Export	Import			
	Printer Operations				
	Reset Defaults	Print Settings	Store Reload		



How to setting Traditional Chinese Character for Star BSC10





10. Click "Print Setting" for printing self-test of the printer.

