




How to update firmware LAN Interface (IFBD-HE07)

*Connect printer by LAN interface and using LAN Cable

*Self-test for checking printer get IP Address or not

*This procedure available on Windows 7 only

1. Get inside of the firmware file by using command prompt

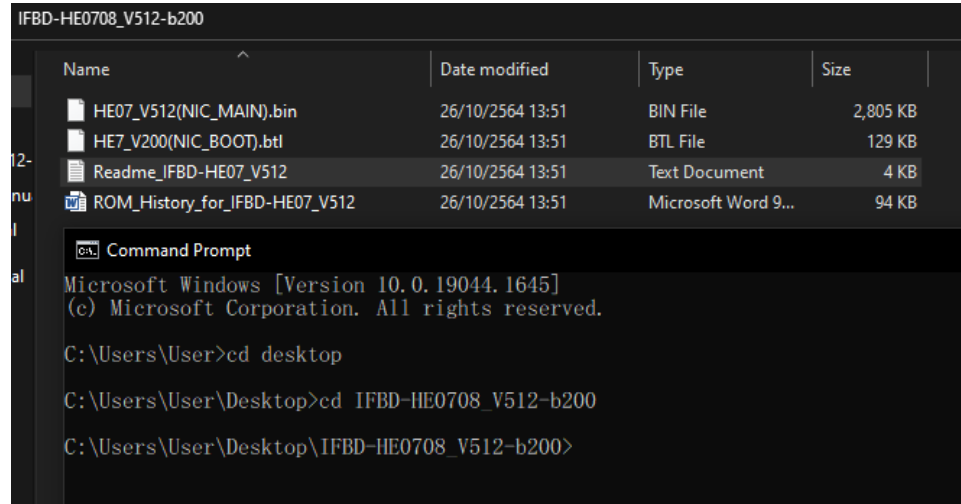

2. follow the command as in a picture

> typing '**ftp IP Printer**'
 > Username : root
 > Password : public
 > typing '**cd firmware**'
 > typing '**pwd**'
 > typing '**bin**'
 > typing '**put HE7_V512(NIC_MAIN).bin**'

```
c:\>ftp 192.168.10.1
Connected to 192.168.10.1.
220 Star IFBD-HE07/08 FTP Server.
User (192.168.10.1:(none)): root
331 User root OK, send password.
Password:*****
230 Password OK.
```

If completed will be show these
 200 PORT command Ok.
 150 About to open data connection.
 226 Transfer complete.

```
ftp> cd firmware
250 Directory is changed

ftp> pwd
257 "/firmware" is current directory
```

and waiting printer will have sound

```
ftp> bin
200 Type set to I.
```

> typing '**quit**'

```
ftp> put HE7_V512(NIC_MAIN).bin
200 PORT command Ok.
150 About to open data connection.
226 Transfer complete.
```

(wait for printer reset)

```
ftp> quit
```