


## How to change mPOP Memory Switch Setting with Star Quick Setup Utility Application


1. Connect mPOP to device by Bluetooth (check printer name from self-test)




2. Open Star Quick Setup Utility Application

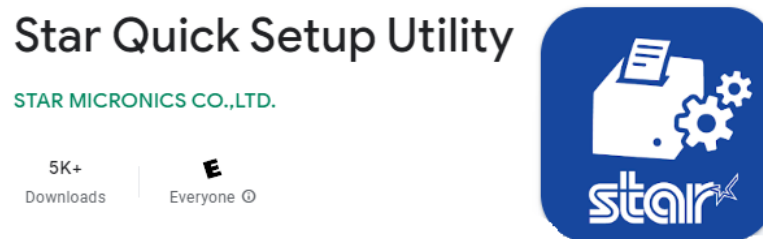

3. Click **Selected Printer** Then Select your connected printer

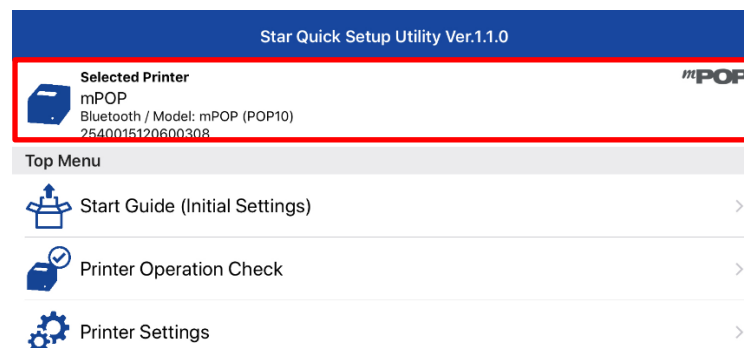

← Back Select Printer ↻

Searching... 




mPOP  
Bluetooth / Model: mPOP  
2540015120600308

4. Go to "Setting" >> click "Memory Switch Setting"

Star Quick Setup Utility Ver.1.1.0

**Selected Printer** mPOP  
mPOP  
Bluetooth / Model: mPOP (POP10)  
2540015120600308



**Top Menu**

-  Start Guide (Initial Settings) >
-  Printer Operation Check >
-  **Printer Settings** >


← Back Printer Settings

**Selected Printer** mPOP  
mPOP  
Bluetooth / Model: mPOP (POP10)  
2540015120600308

**Print Settings**

-  **Memory Switch Settings** >
-  Logo Settings >

5. Any topics you can change from default or Select “Bit” and select any “Memory Switch 0-F” and change any “Bit 0-F” that you want to change then click “Apply (bottom right of the screen) > Yes”

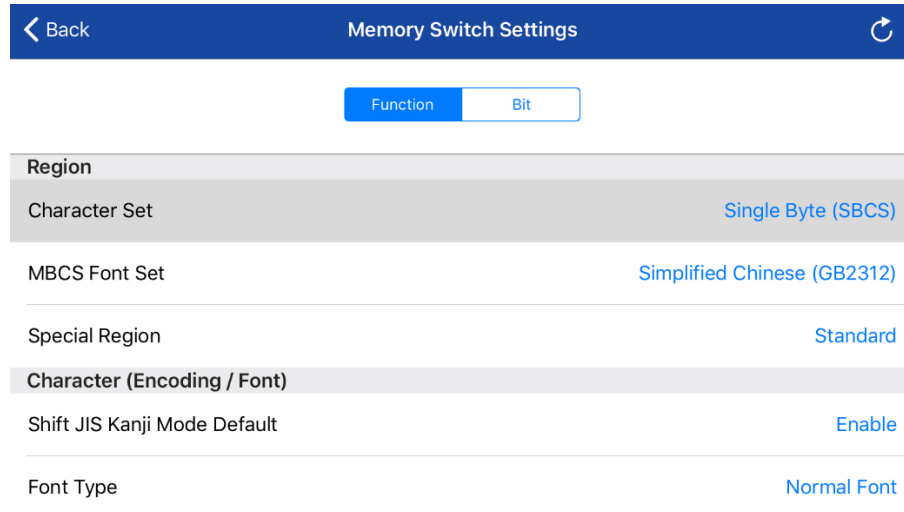


Memory Switch Settings

Function Bit

Region	
Character Set	Single Byte (SBCS)
MBCS Font Set	Simplified Chinese (GB2312)
Special Region	Standard

Character (Encoding / Font)


Shift JIS Kanji Mode Default	Enable
Font Type	Normal Font

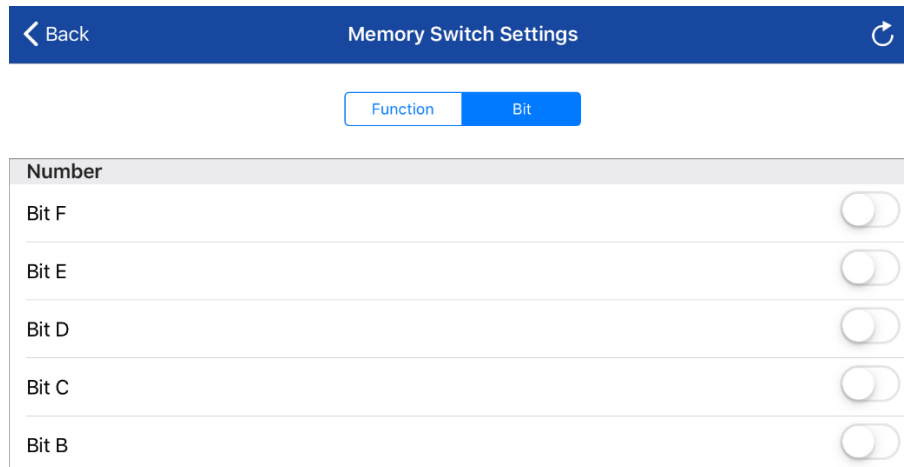

Memory Switch Settings

Function Bit


Number	
Bit F	<input type="checkbox"/>
Bit E	<input type="checkbox"/>
Bit D	<input type="checkbox"/>
Bit C	<input type="checkbox"/>
Bit B	<input type="checkbox"/>

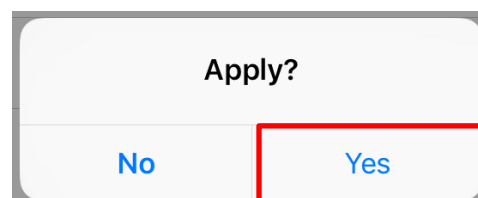

Apply?

No Yes

6. Wait application Show Success then click "OK"

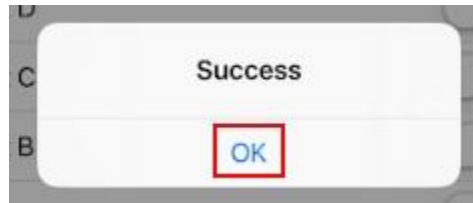

7. Self-Test print for checking Memory Switch.