


## How to change setting support Chinese character for SP700

1. Install driver SP700


Download Driver: <https://starmicronics.com/support/products/sp700-support-page/>

**\*\* Please noted during install driver please do not connect SP700 to your PC**

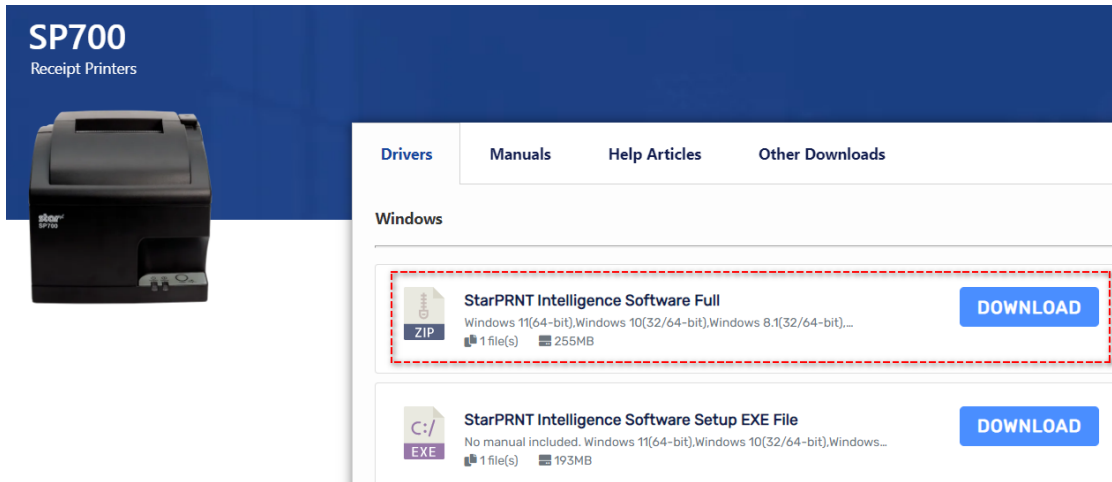


2. After finish install driver


Connect SP700 to your PC by USB Cable and Open utility

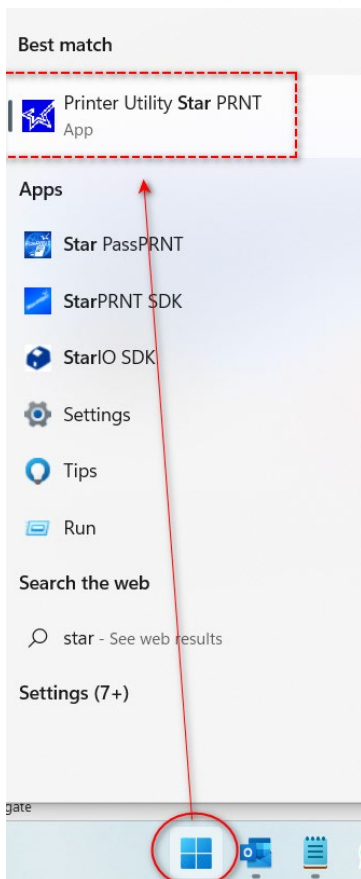


If you not found, please go to Device and Printer  
Right Click at printer Driver and select Printer properties

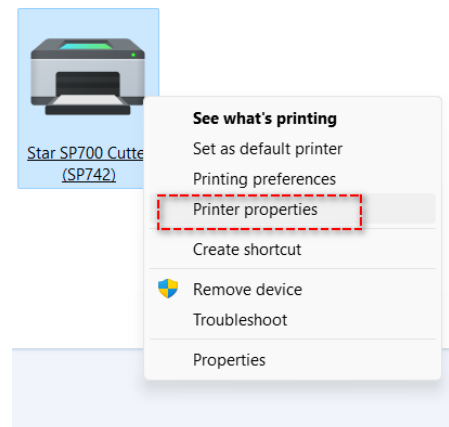


Select Star/Help Tab and Select Open Printer Utility.

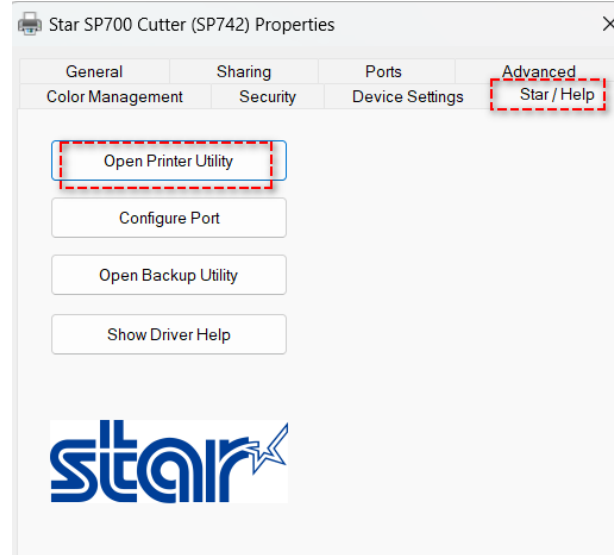


3. Select OK

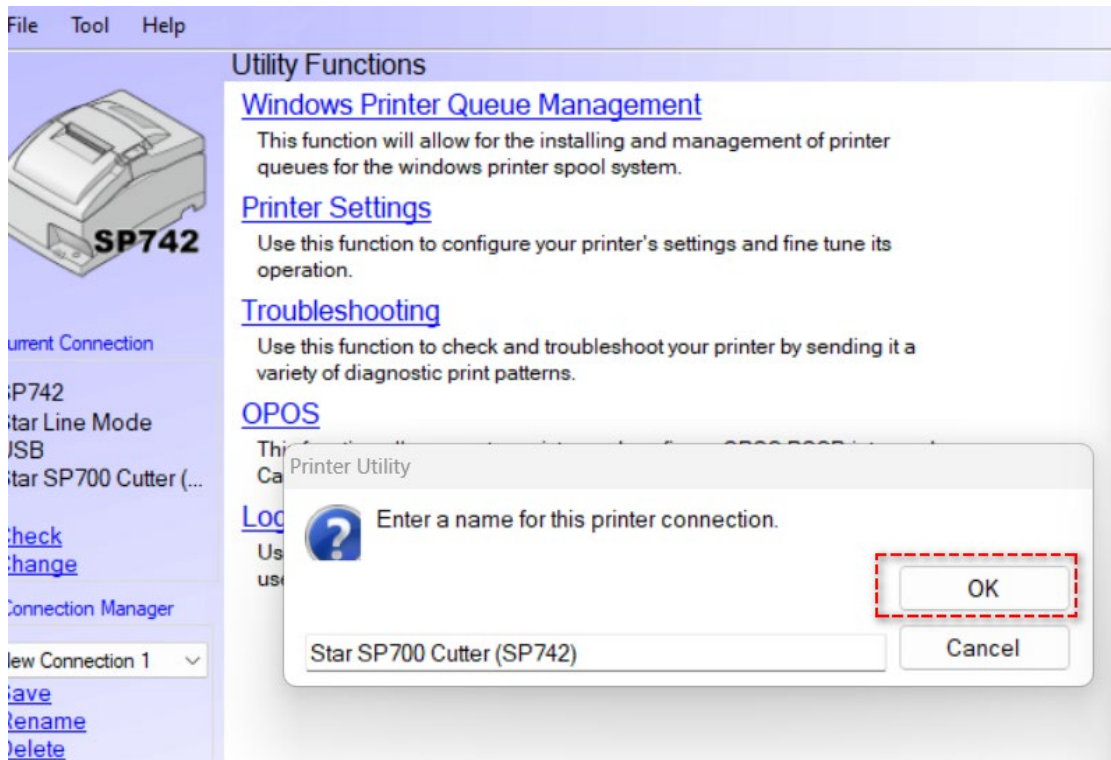

4. Select "Printer Setting"

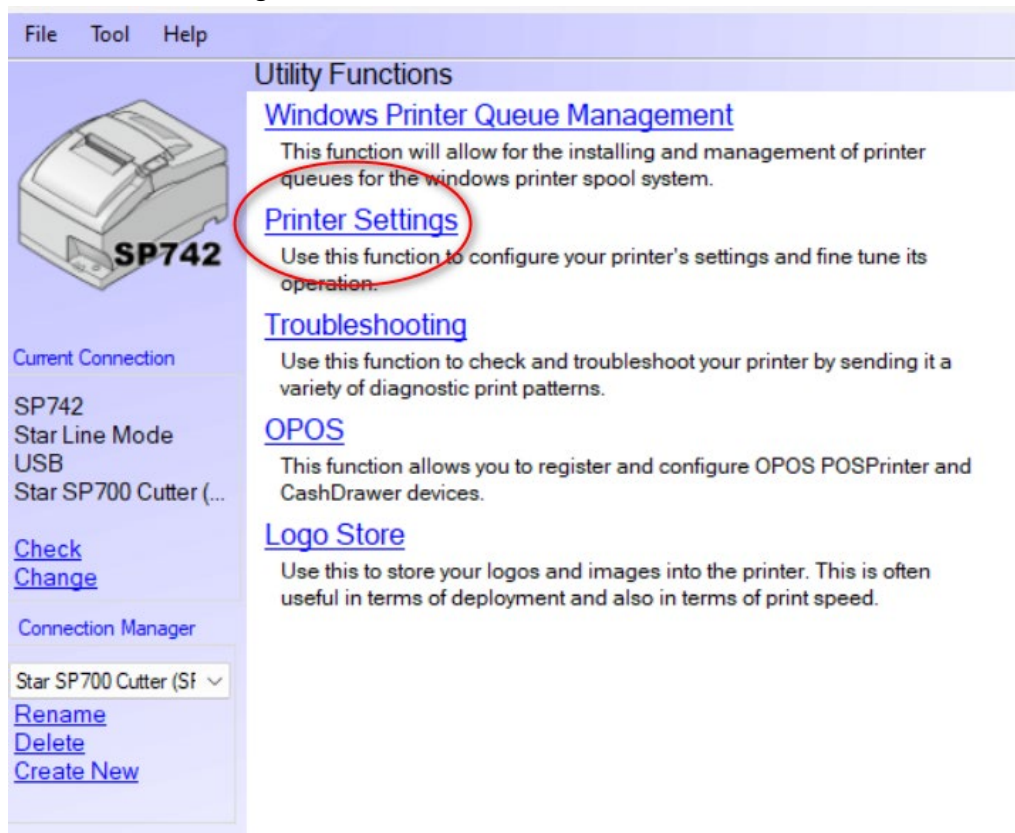

5. Select Double-Byte Character Set (DBCS) at Asian Character (DBCS)  
Select "Store "

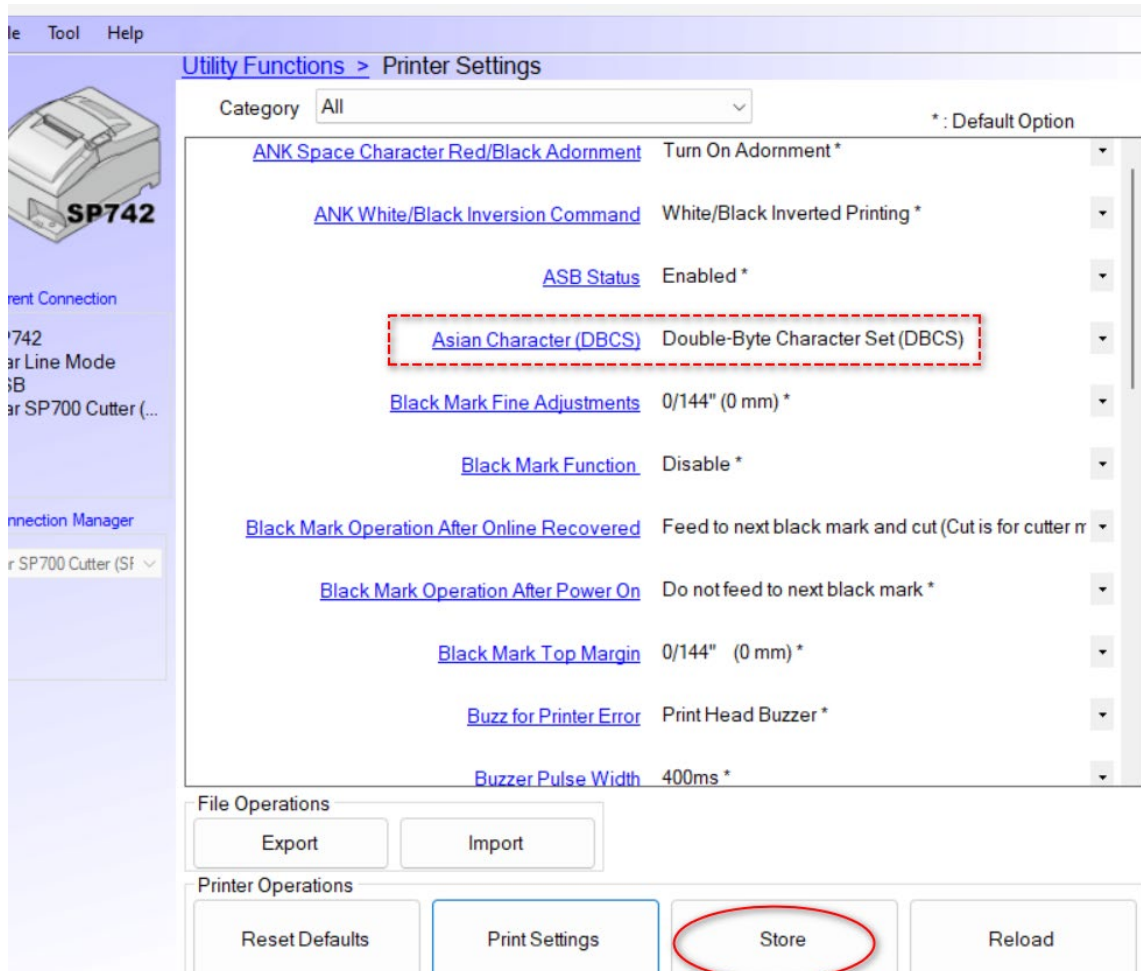

The screenshot shows the 'Utility Functions > Printer Settings' window for the SP742 printer. The 'Category' is set to 'All'. The settings list includes:

- ANK Space Character Red/Black Adornment: Turn On Adornment \*
- ANK White/Black Inversion Command: White/Black Inverted Printing \*
- ASB Status: Enabled \*
- Asian Character (DBCS): Double-Byte Character Set (DBCS)** (highlighted with a red dashed box)
- Black Mark Fine Adjustments: 0/144" (0 mm) \*
- Black Mark Function: Disable \*
- Black Mark Operation After Online Recovered: Feed to next black mark and cut (Cut is for cutter r
- Black Mark Operation After Power On: Do not feed to next black mark \*
- Black Mark Top Margin: 0/144" (0 mm) \*
- Buzz for Printer Error: Print Head Buzzer \*
- Buzzer Pulse Width: 400ms \*

At the bottom, there are two sections of buttons:

- File Operations: Export, Import
- Printer Operations: Reset Defaults, Print Settings, **Store** (highlighted with a red oval), Reload

6. Check Self-test


```
*** 57      7.0 ***  
  
Interface : USB  
  
Memory Switch  
FEDCB09876543210 HEX.  
<0> 0000000000010000 0010  
<1> 0000000000000000 0000  
<2> 0000000000000000 0000  
<3> 0000000000000000 0000  
<4> 0000000000000000 0000  
<5> 0000000000000000 0000  
<6> 0000000000000000 0000  
<7> 0000000000000000 0000  
<8> 0000000000000000 0000  
<9> 0000000000000000 0000  
  
<0> 4 = Model : China 2.0  
<0> 2-3 = <FF> : Form Feed  
<1> 8 = Black Mark : Invalid  
<1> 4 = Zero Style : Normal Zero  
<2> 9-8 = Print Width : 210 Dpl  
<2> 7 = Rewinder : Invalid  
<2> 3 = Contextual Cut : Invalid  
<2> 0-1 = NE Sensor : Unmounting  
<3> 7 = Kanji CPL : Normal  
<3> 6 = ANK CPL : Normal  
<3> 0-1 = <CR> Code : Ignore  
<4> 9 = Buffer Size : 8,192 Bytes  
<4> 8 = ASB : Enable  
<4> 7 = NSB : Enable  
<4> 3 = ESC RS a : Condition Set  
<6> F = PE Signal : PE  
<6> 9 = Busy Cond. : All  
<9> 0 = Outside Buzzer: Disable
```



You can print from StarPRNT SDK APP  
 Download from App Store and Play Store

App Store Preview

This app is available only on the App Store



**StarPRNT SDK** 4+

STAR MICRONICS CO.,LTD.

★★★★★ 4.1 • 7 Ratings

Free

Sample Receipt

