


How to get maintenance counter of STAR Dot Matrix Printer SP700

*This manual is using USB Interface.


*Tools for get information is Soft Check.

*Firstly, Install driver printer in Windows PC before start procedure below.


1. Connect printer to Windows PC though USB cable then Windows will get printer driver in Control Panel > Devices and Printers.

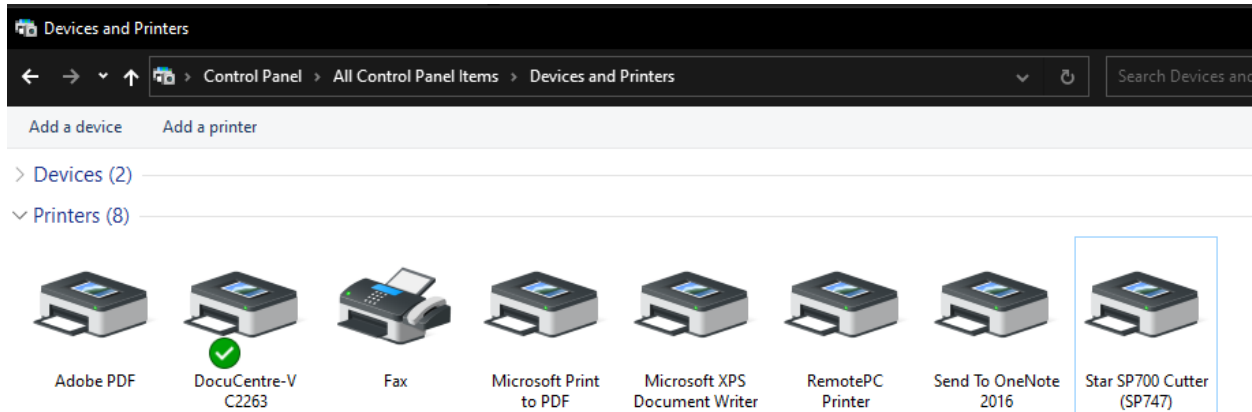


2. Open program "Soft Check"

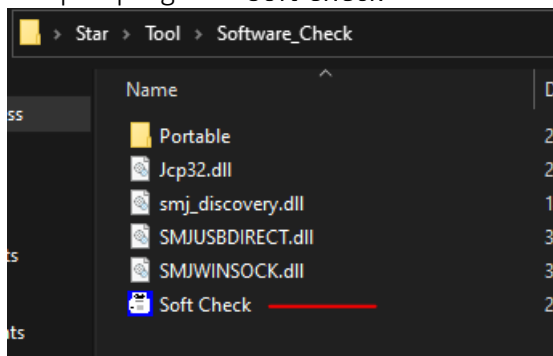


3. Click "Next"

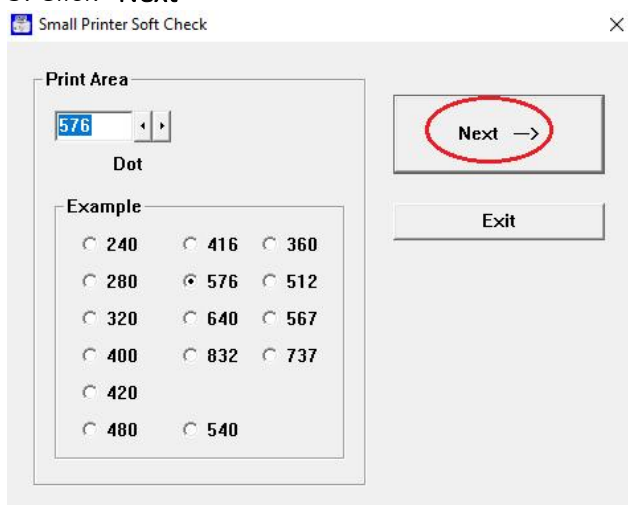


4. Follow step 1 to 4 as below.

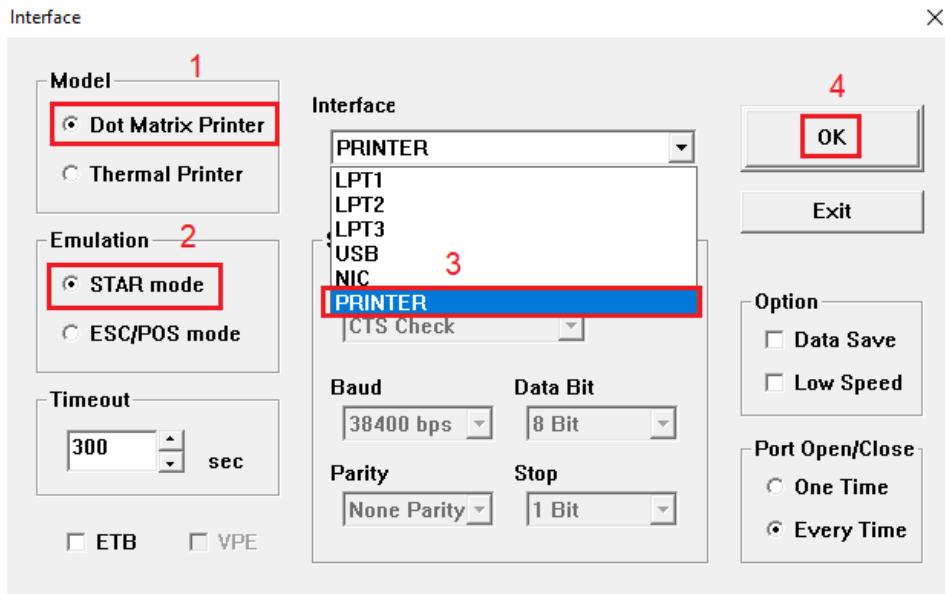


5. Select Printer model "Star SP700..." then click "OK"

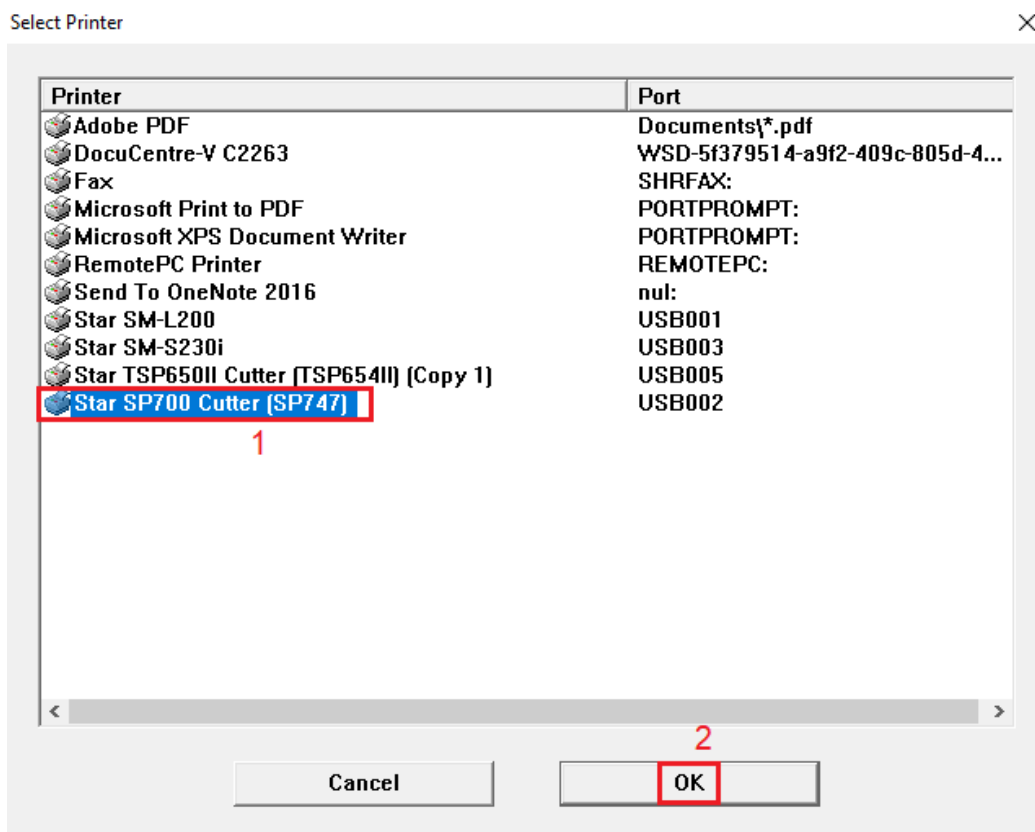


6. Click "Convenience >>"

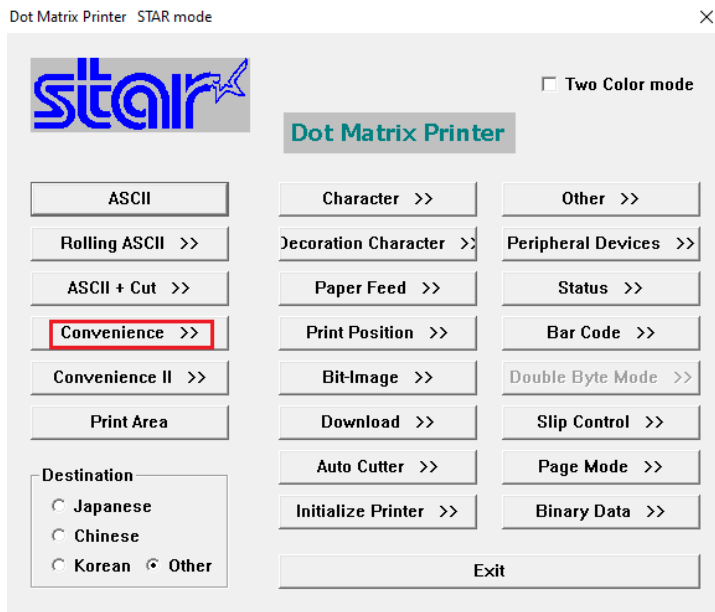

7. Follow step 1 to 6 as below.

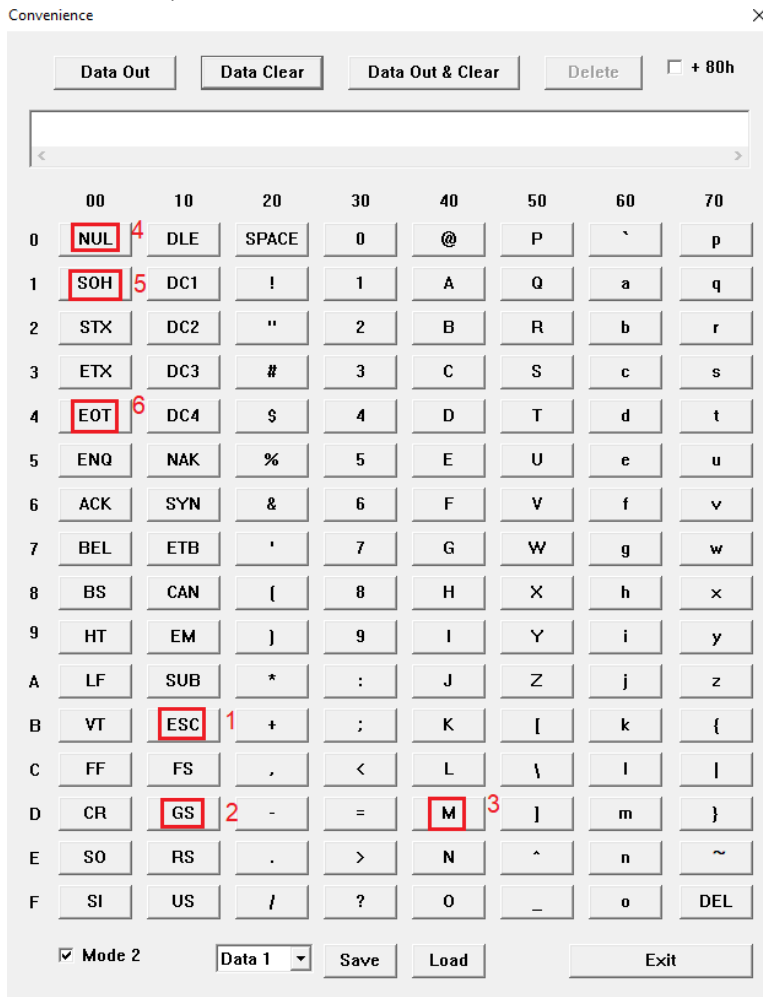


8. Result will be same as below.

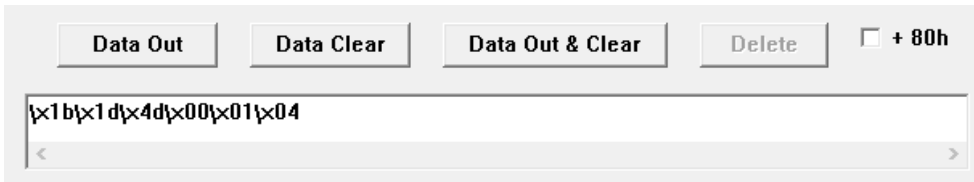

9. Click "Data Out"



10. Star SP700 will be printing Maintenance Counter but need to press feed button to show all information then calculate it by next step.

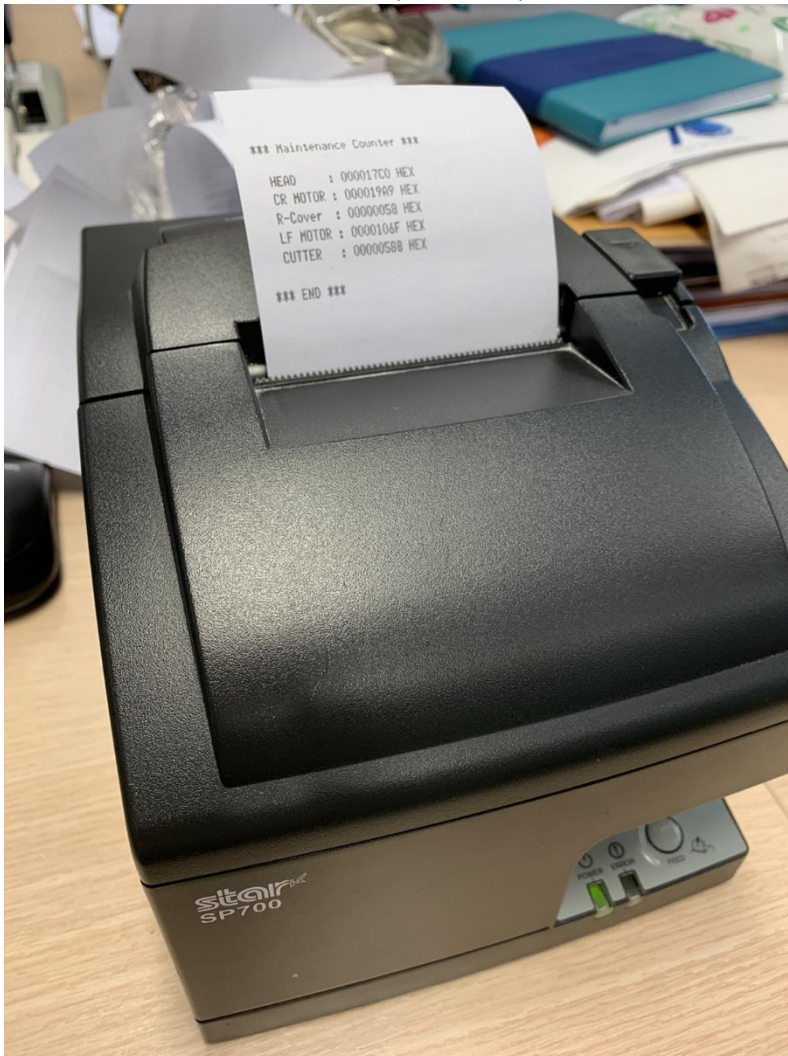

How to calculate Maintenance Counter for Star Dot Matrix Printer SP700



HEAD: 000017C0 = Hex : 17C0 = Dec : 6,080 = 6,080 x 4,000 = 24,320,000 dot lines

LF MOTOR: 0000106F = Hex : 106F = Dec : 4,207 = 4,207 x 4,000 = 16,828,000 dot lines

CUTTER: 0000058B = Hex : 58B = Dec : 1,419 = 1,419 x 10 = 14,190 cuts