


How to set Static IP at the printer without DHCP from Router [mCP31 Series]


*This instruction is using converter LAN to USB because there's no LAN Port at the laptop.

*Need to install driver printer before following this instruction


1. Disconnect any Network/Wi-Fi and restart windows 1 time
2. Connect LAN cable between printer & windows directly [Use converter If no LAN Port at laptop]

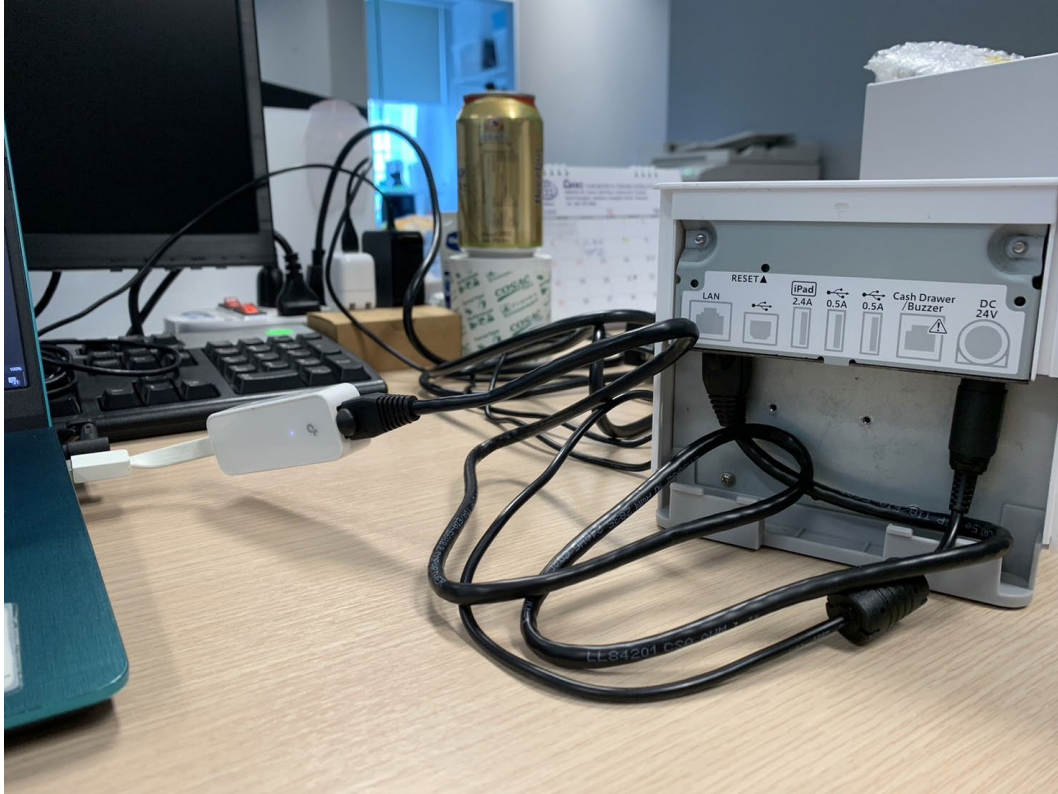


3. After connect LAN cable, Windows will be get **"Ethernet 4"** and wait until **"Unidentified Network"** [Control Panel > Network and Sharing Center > Change Adapter Setting]

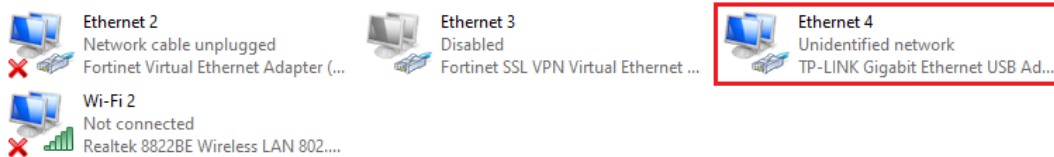


4. Right click **"Ethernet 4"** and click **"Properties"**

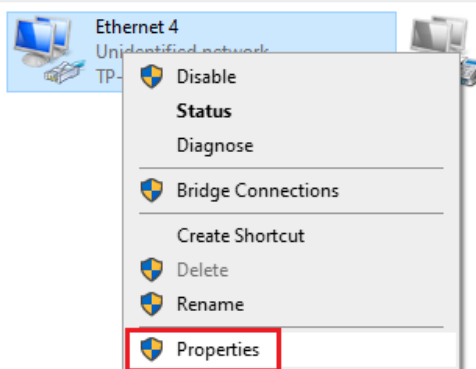


5. Double click “Internet Protocol Version 4 (TCP/IPv4)” and choose “Use the following IP address:” then typing any IP address which you want to be setting then click “OK”

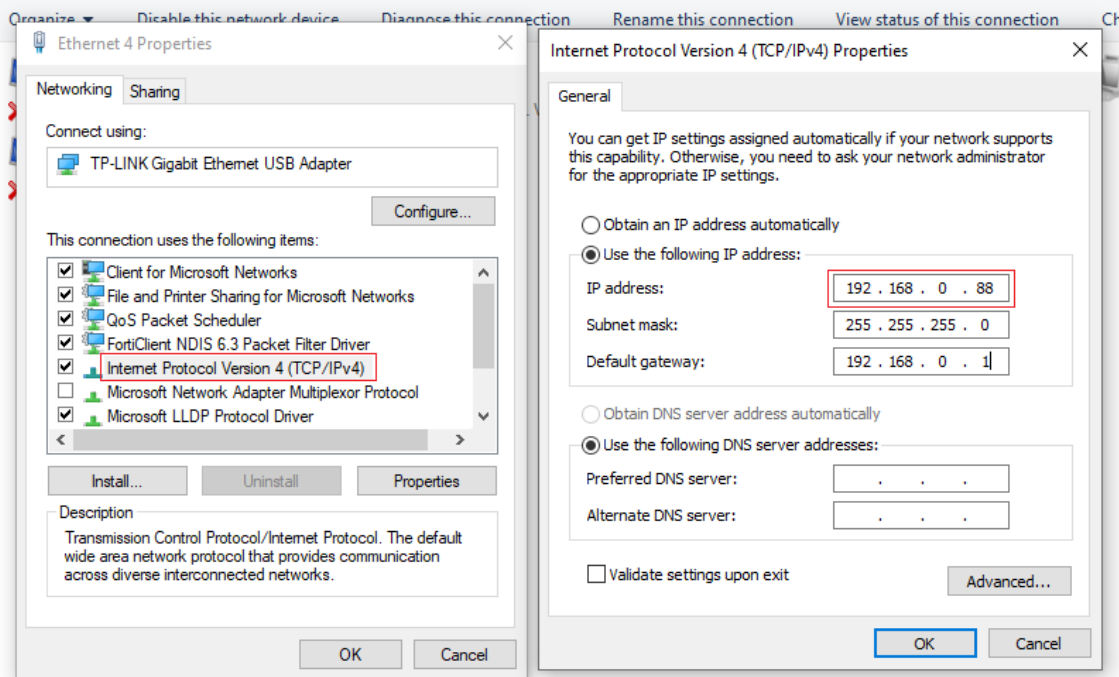

6. Open Star Software Utility, click “Start > Star Windows Software > Printer Utility”

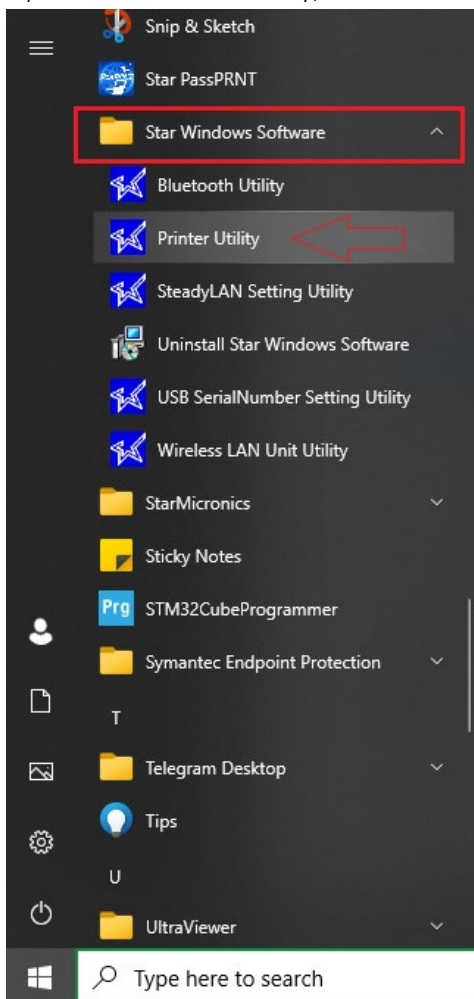


7. Select “MCP31” and click “Next”

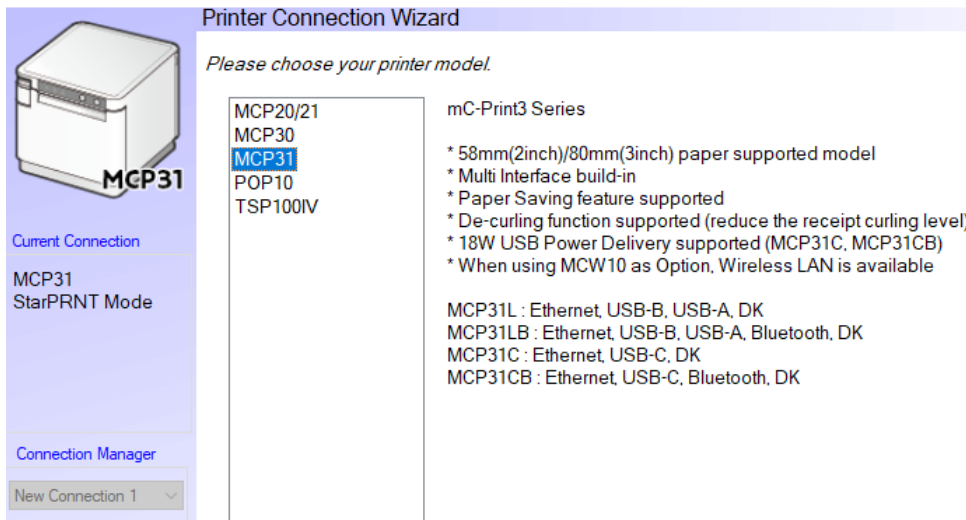


8. Select “Ethernet” and click “Temporary IP Address Assignment”

First choose your interface type then configure its connection settings.

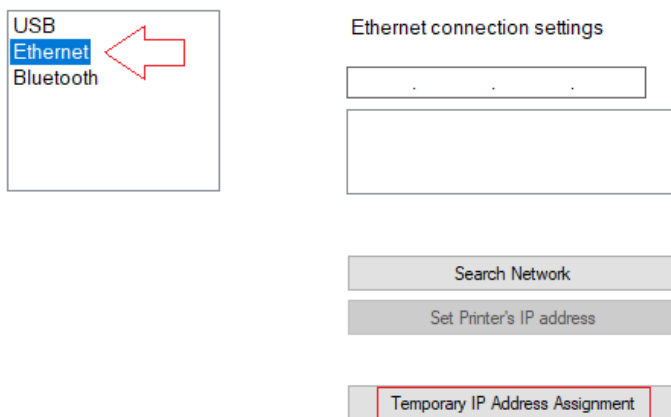

9. Typing MAC Address of the printer [Check by Self-Test] and typing any IP Address which you want [should same network with the Windows on step 5] and click “OK”

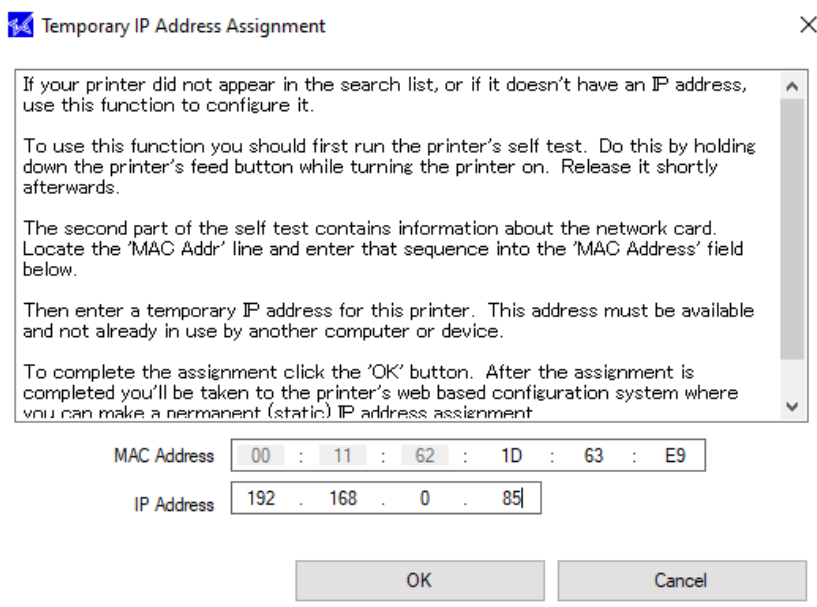

10. Click "Yes"

Set Printer IP Address




The temporary IP address assignment succeeded.
Do you want to see the printer's network configuration site now?

Log in as "root" user if login dialog is shown.
The password is "public" factory setting.

Yes

No

11. Username: root / Password: public then click "Sign in"

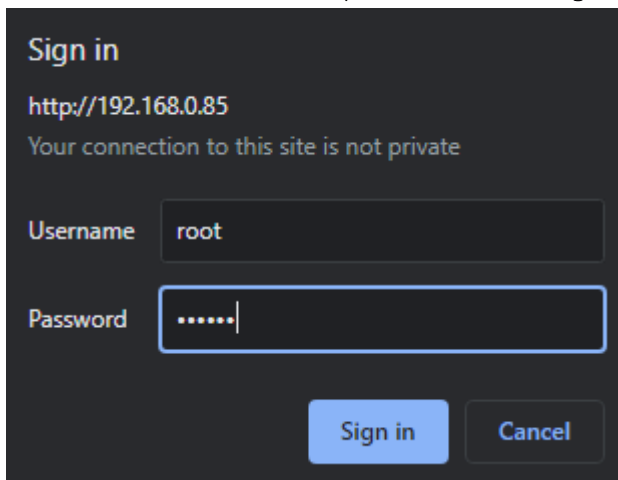

Sign in


http://192.168.0.85

Your connection to this site is not private

Username

Password

12. If the software asks to change password, Click "OK"

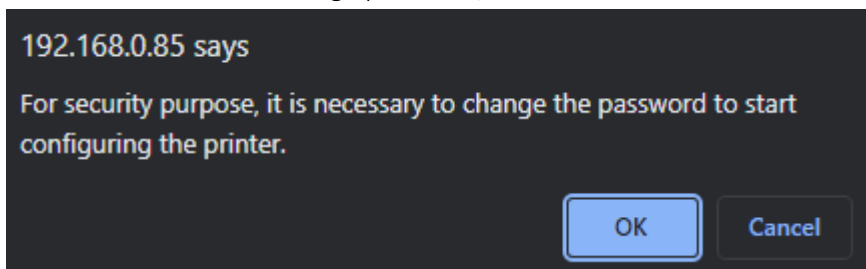

192.168.0.85 says

For security purpose, it is necessary to change the password to start configuring the printer.

13. Input new password > typing "public" [same password] and click "Submit"

Change Password for "root" account

Input old password

Show characters

Input new password

Show characters

Submit

Cancel

14. Click "IP Parameter" on the left side

- Home
 - Home
- Network Configuration
 - IP Parameters**
 - System Configuration
 - Change Password
 - Star Micronics Cloud
 - CloudPRNT
 - SSL/TLS
 - Miscellaneous
- Set Default
- Display Status
 - Device Status
- System Access
 - Logout

"root" password is accepted!

Please execute "Save" menu if these settings are correct.

Return to [Previous page <Change Password>](#)
(Don't use "Back" button of browser to return.)

15. Select "Static" and typing any IP Address which you want, and click "Submit"

IP Parameters

Static

Following addresses are used.

IP Address

Subnet Mask

Default Gateway

Dynamic

Addresses are obtained from network.

Submit

Cancel

16. Click "Save"

Static address condition is accepted!

IP Address :

192.168.2.91

Subnet Mask :

255.255.255.0

Deafult Gateway :

192.168.2.1

Please execute "Save" menu if these settings are correct.

Return to [Previous page <IP Parameters>](#)
(Don't use "Back" button of browser to return.)

17. Select "Save > Configuration Printing > Restart Device", and click "Execute"

Save

Save → Configuration printing → Restart device

Save → Restart device

Execute

Cancel

18. There's a sound from the printer and then will be printing self-test with the IP Address as you set from step 15, Finished.

