

## How to set Static IP Address (STAR Printer BSC10E)

1. Self-Test for check IP Address from DHCP then open web browser to access IP Address then click "Login"




Log in by following below username


**Username:** root

**Password:** public


2. Right side, click "IP Parameters" then choose Static then type IP Address then click "Submit"

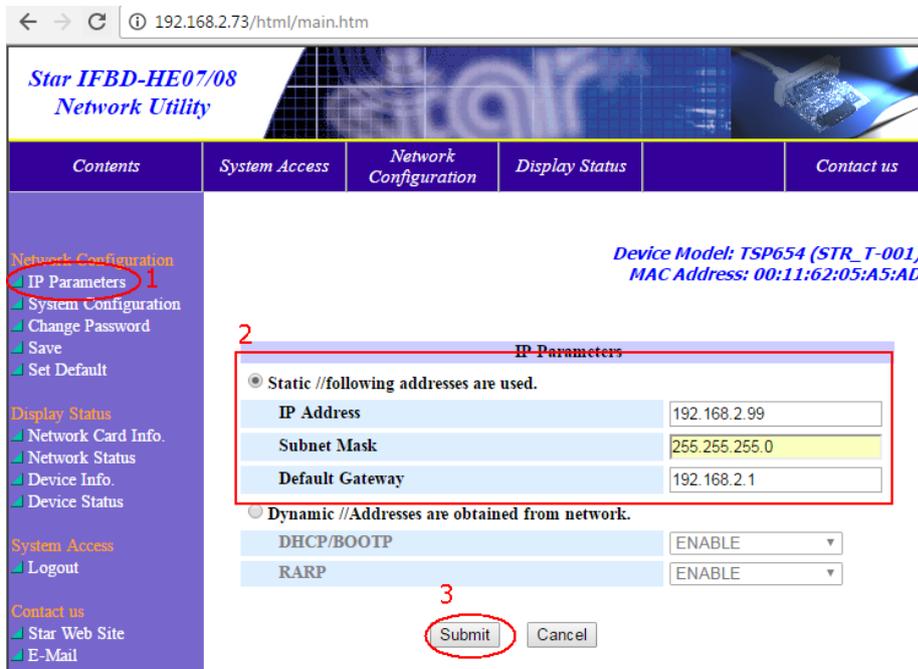

3. Click "Save"

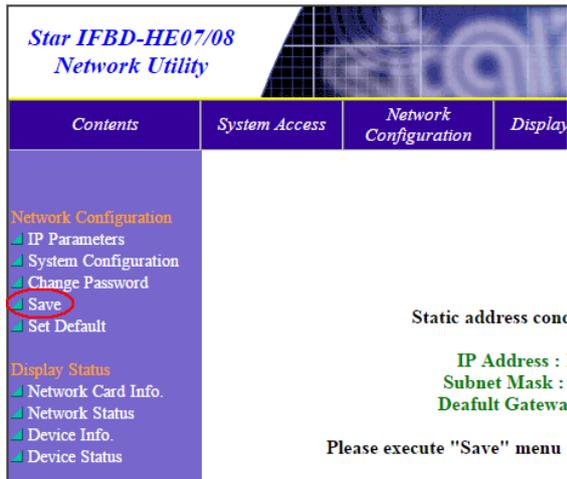

4. Select "Save -> Configuration -> Restart device" then click "Execute"

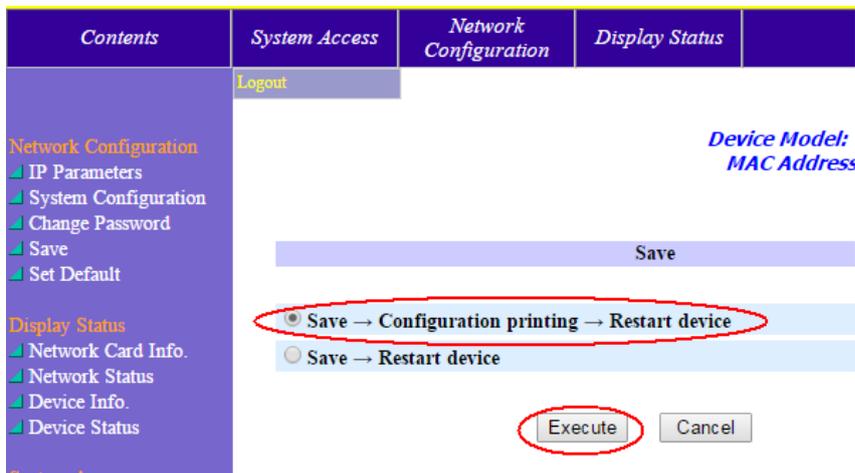

5. Printer will be printing self-test automatically then look at the IP Address same as setup on step 2 or not by second page of Self-test.

```

*****
Current IP Parameters Status
*****
IP Address      :192.168.2.99 (Static)
Subnet Mask     :255.255.255.0
Default Gateway :192.168.2.1
    
```