



How to change emulation for Printer SK1-X11 Model

1. Press and hold 'FEED' and 'SELECT' button on the printer then turn power on. Printer will be printing emulation setting page. (**Default Emulation = ESC/POS**)

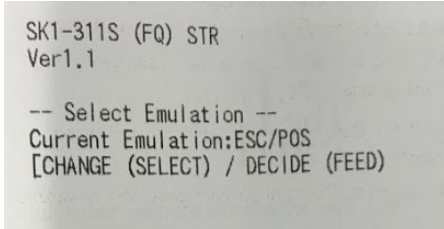


```
SK1-311S (FQ) STR  
Ver1.1  
  
-- Select Emulation --  
Current Emulation:ESC/POS  
[CHANGE (SELECT) / DECIDE (FEED)]
```

2. Press 'SELECT' button on the printer, Emulation will be change to StarPRNT.

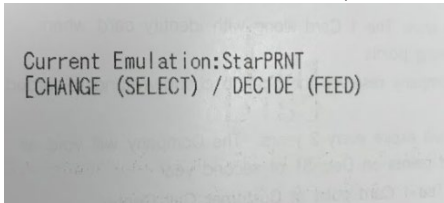

```
Current Emulation:StarPRNT  
[CHANGE (SELECT) / DECIDE (FEED)]
```


3. Press 'FEED' button on the printer, Printer will be printing memory switch setting page for check emulation of the printer. (**Just in case change to StarPRNT**)

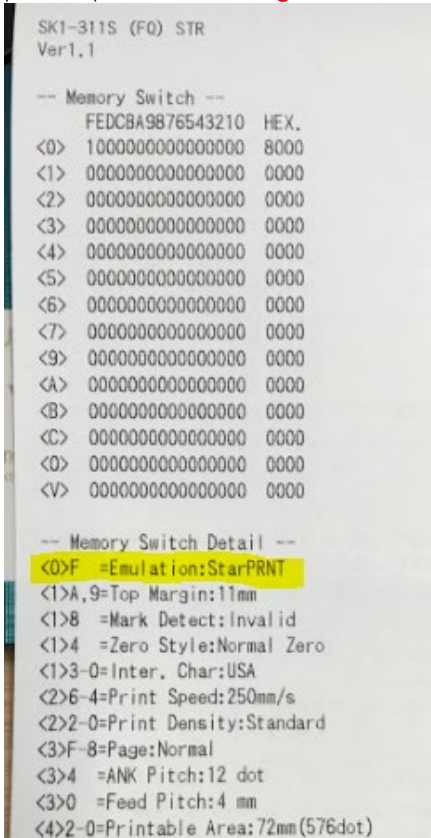

```
SK1-311S (FQ) STR  
Ver1.1  
  
-- Memory Switch --  
FEDCBA9876543210 HEX.  
<0> 1000000000000000 8000  
<1> 0000000000000000 0000  
<2> 0000000000000000 0000  
<3> 0000000000000000 0000  
<4> 0000000000000000 0000  
<5> 0000000000000000 0000  
<6> 0000000000000000 0000  
<7> 0000000000000000 0000  
<8> 0000000000000000 0000  
<9> 0000000000000000 0000  
<A> 0000000000000000 0000  
<B> 0000000000000000 0000  
<C> 0000000000000000 0000  
<D> 0000000000000000 0000  
<E> 0000000000000000 0000  
  
-- Memory Switch Detail --  
<0>F =Emulation:StarPRNT  
<1>A,9=Top Margin:11mm  
<1>8 =Mark Detect:Invalid  
<1>4 =Zero Style:Normal Zero  
<1>3-0=Inter. Char:USA  
<2>6-4=Print Speed:250mm/s  
<2>2-0=Print Density:Standard  
<3>F-8=Page:Normal  
<3>4 =ANK Pitch:12 dot  
<3>0 =Feed Pitch:4 mm  
<4>2-0=Printable Area:72mm(576dot)
```

4. After that press 'SELECT' button on the printer for choose 'NO' change memory switch setting, Printer will be printing

'Memory Switch Setting End'

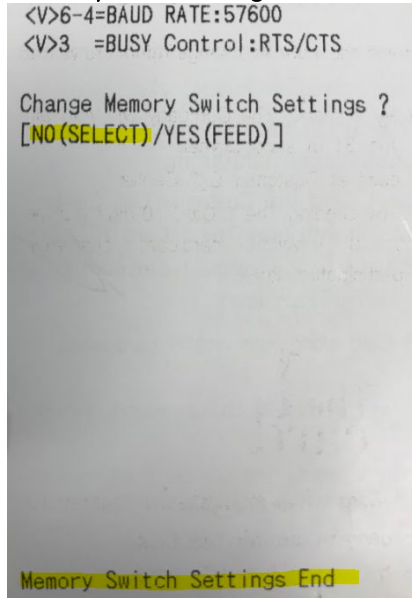

5. Turn power off, press 'FEED' button on the printer and turn power on again then printer will be printing self-test page for check emulation of the printer.

