



How to test print by Windows Utility Driver for SANEI SK Model


1. Connect USB Cable to PC/Laptop then get printer driver (Check by Control Panel > Devices & Printers)

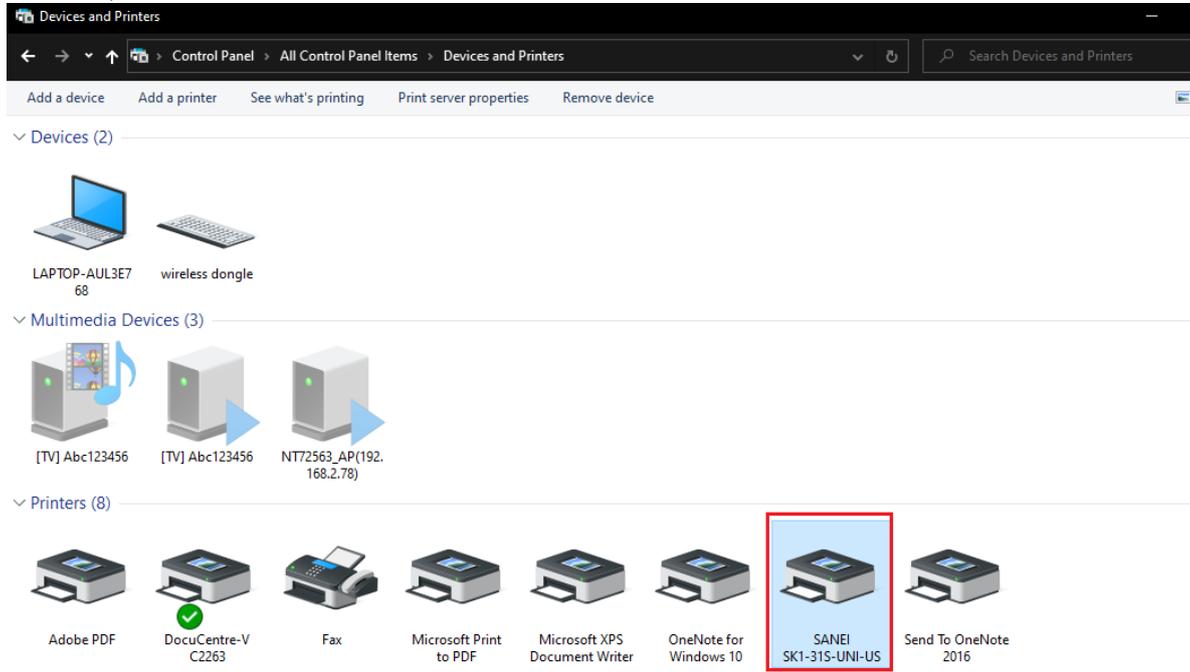


2. Right Click at the printer driver then click "Printer Properties"

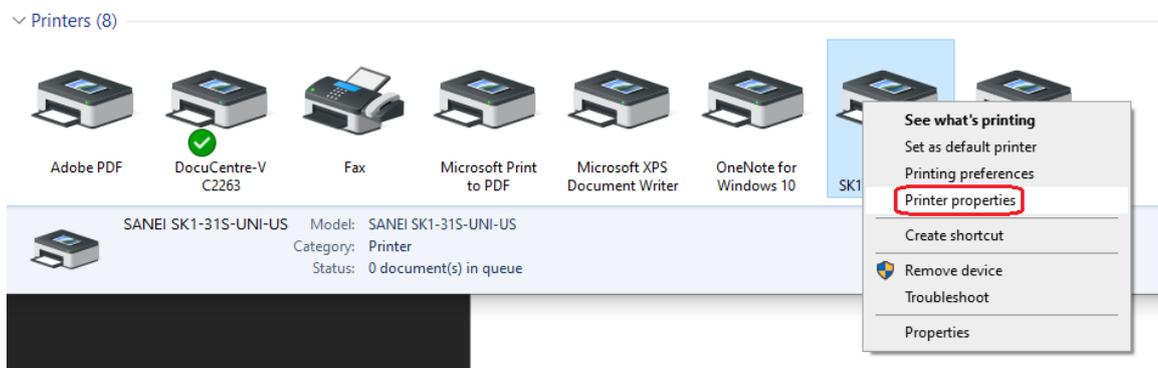

3. Click Tap “Printer Setting” then Click “Utility Menu”

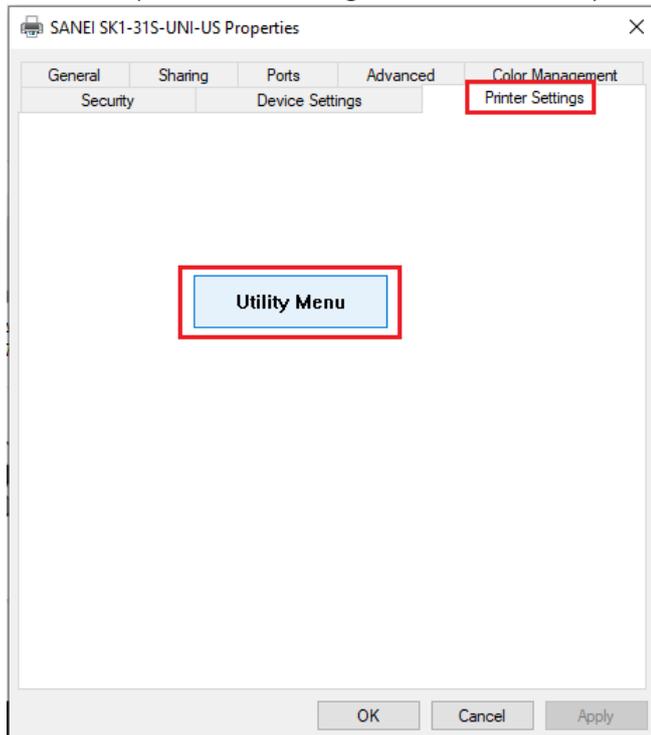

4. Click Tap “Real Time Status” for check printer information such as firmware version, driver version.

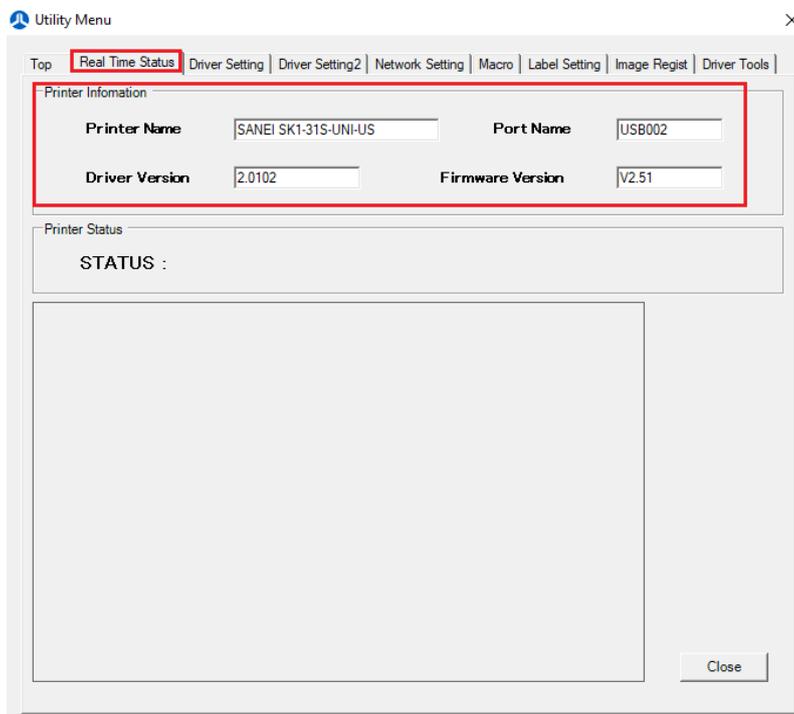

5. Click “Driver Tools” for test print by windows driver utility then click “Test Print”

