



## How to setting Static IP Address for STAR Printer TSP654II


1. Connect LAN cable to the printer for access the internet.
2. Self-Test for check IP Address of the printer.
  - a. Turn printer power off.
  - b. Press and hold 'FEED' button and turn printer power on.
  - c. Continue hold 'FEED' button until self-test was printing out
  - d. Let's see the IP Address at 2<sup>nd</sup> page.
3. Access the IP Address of the printer through browser (any browser)

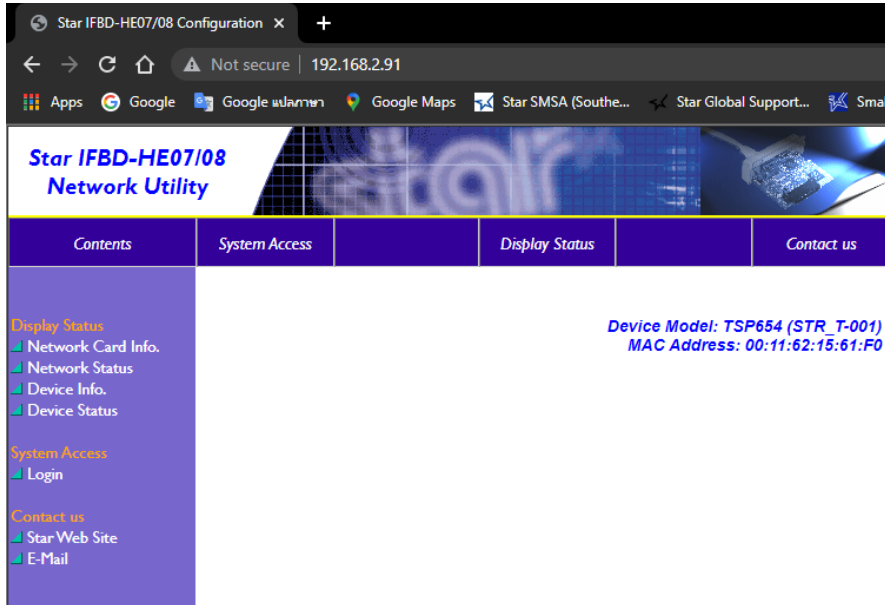


4. Click 'Login'

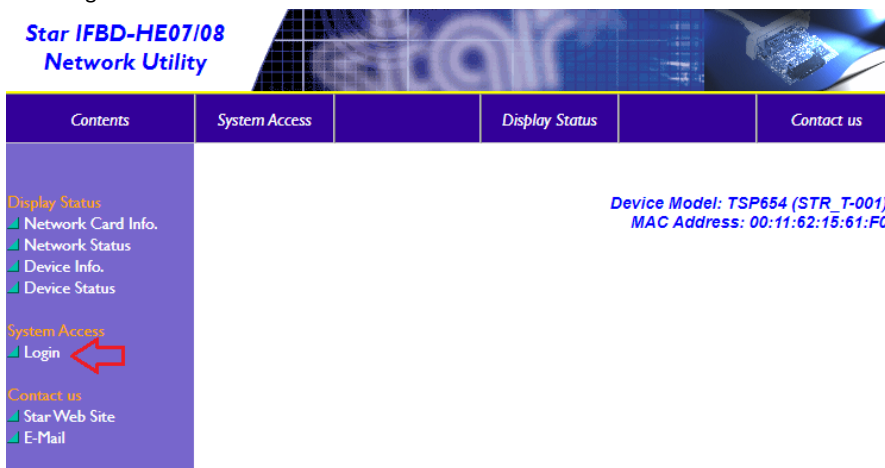

5. Username: root / Password: public, then click 'Sign In'

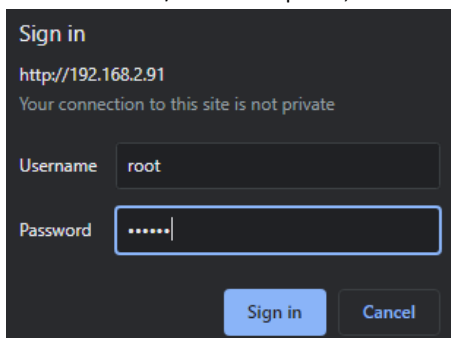

6. Click 'IP Parameter' then select 'Static' and enter the IP Address which you want. And click 'Submit'

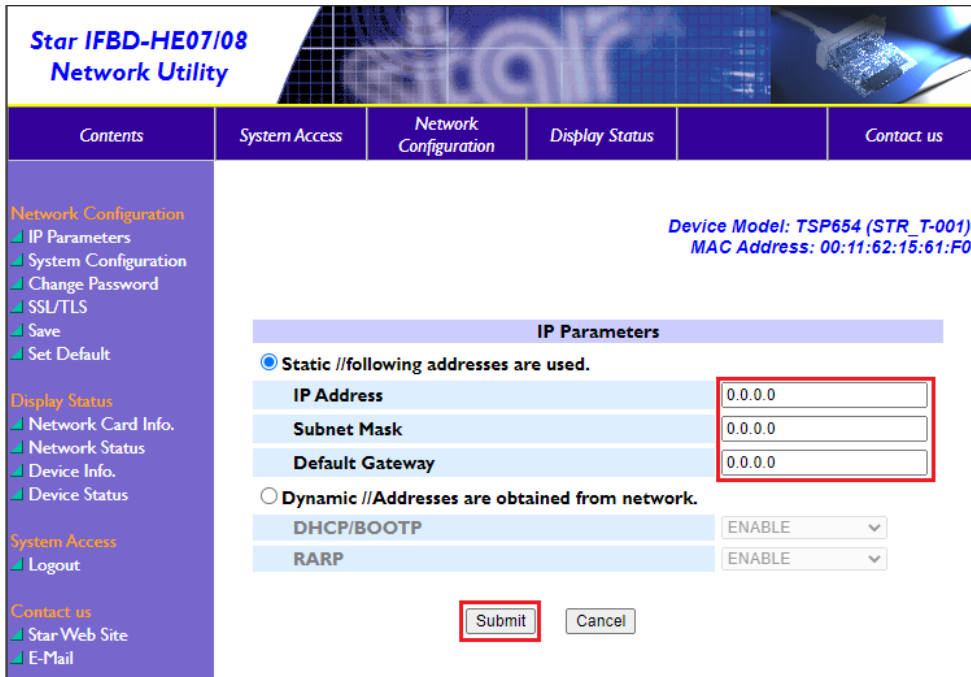

**Star IFBD-HE07/08 Network Utility**

Contents | System Access | Network Configuration | Display Status | Contact us

Device Model: TSP654 (STR\_T-001)  
 MAC Address: 00:11:62:15:61:F0

**IP Parameters**

Static //following addresses are used.


IP Address: 0.0.0.0  
 Subnet Mask: 0.0.0.0  
 Default Gateway: 0.0.0.0

Dynamic //Addresses are obtained from network.

DHCP/BOOTP: ENABLE  
 RARP: ENABLE

Submit | Cancel

7. Click 'Save'

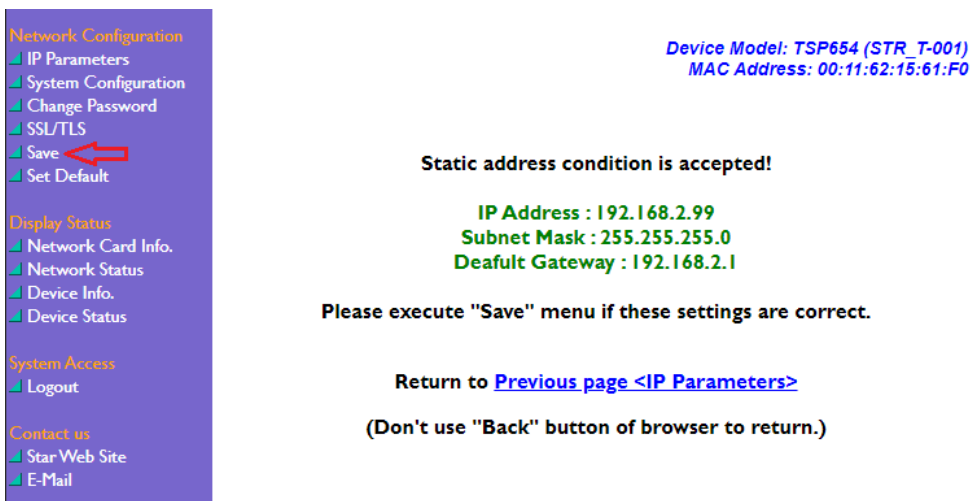

Device Model: TSP654 (STR\_T-001)  
 MAC Address: 00:11:62:15:61:F0


**Static address condition is accepted!**

IP Address : 192.168.2.99  
 Subnet Mask : 255.255.255.0  
 Deafult Gateway : 192.168.2.1

Please execute "Save" menu if these settings are correct.

Return to [Previous page <IP Parameters>](#)  
 (Don't use "Back" button of browser to return.)

8. Select 'Save > Configuration > Restart Device', and click 'Execute'

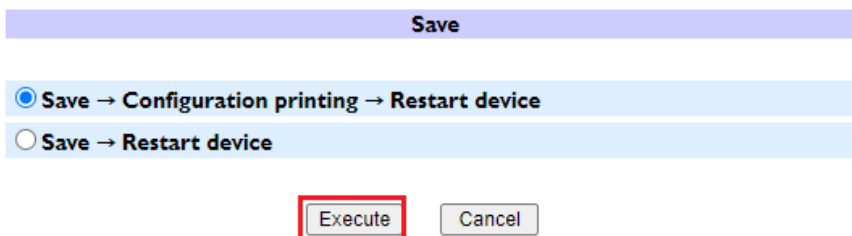

**Save**

Save → Configuration printing → Restart device  
 Save → Restart device

Execute | Cancel

9. Self-test again for check IP Address of the printer.