


How to be setting paper size 58mm (2inch) for STAR TSP654IISK on Windows Utility

*This manual is using USB I/F and connecting through USB Cable to Windows PC


*Do not connect printer to Windows while installing printer driver

*Point of this manual is Printer Setting, Interface is just a connectivity


1. Download STAR Utility from <https://starmicronics.com/support/products/tsp650iisk-support-page/>
2. Click “Download” at StarPRNT Intelligence Software Full

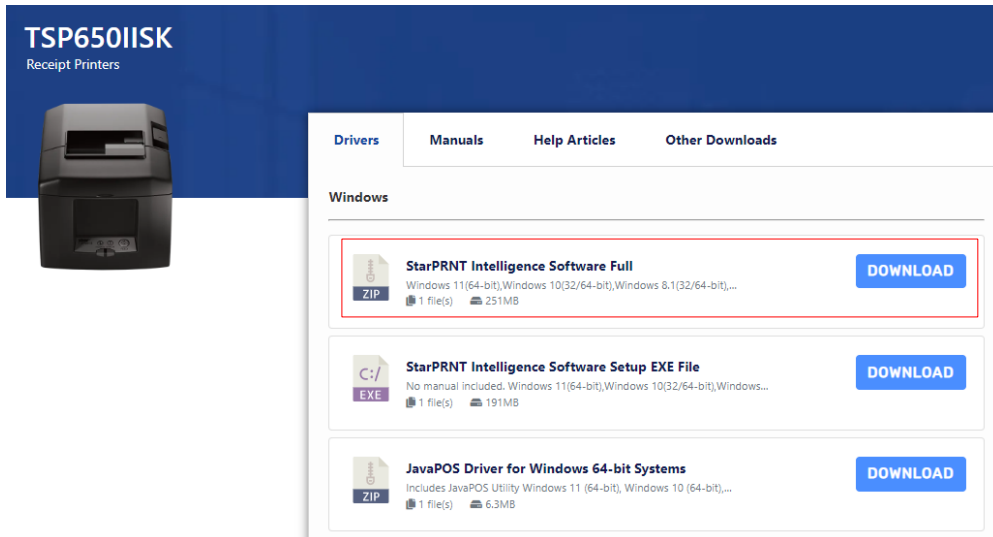


3. Check “I Agree” and click “Download” to download starprnt_v3.8.1

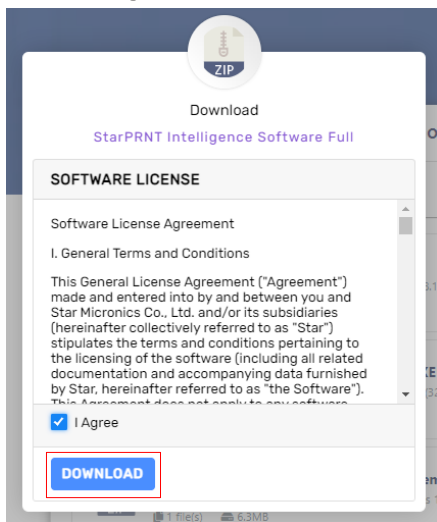


4. Install STAR Utility by extract file > starprnt_v3.8.1\setup then right click “Setup” and select Run as Administrator

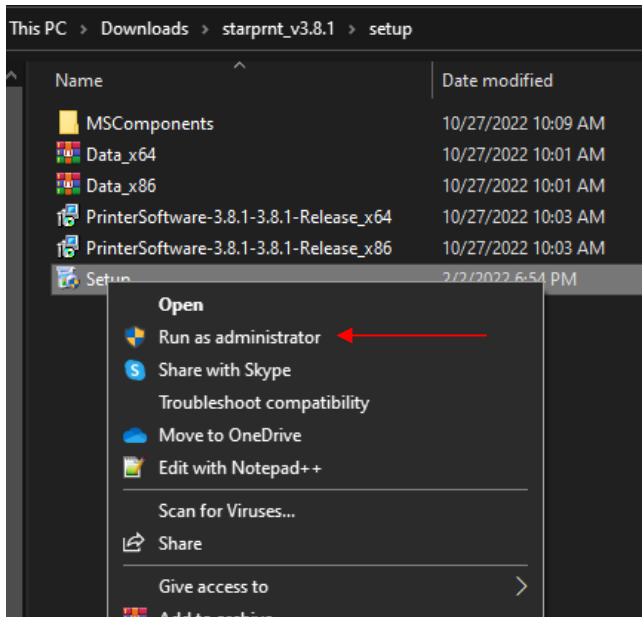


5. Click “Next”

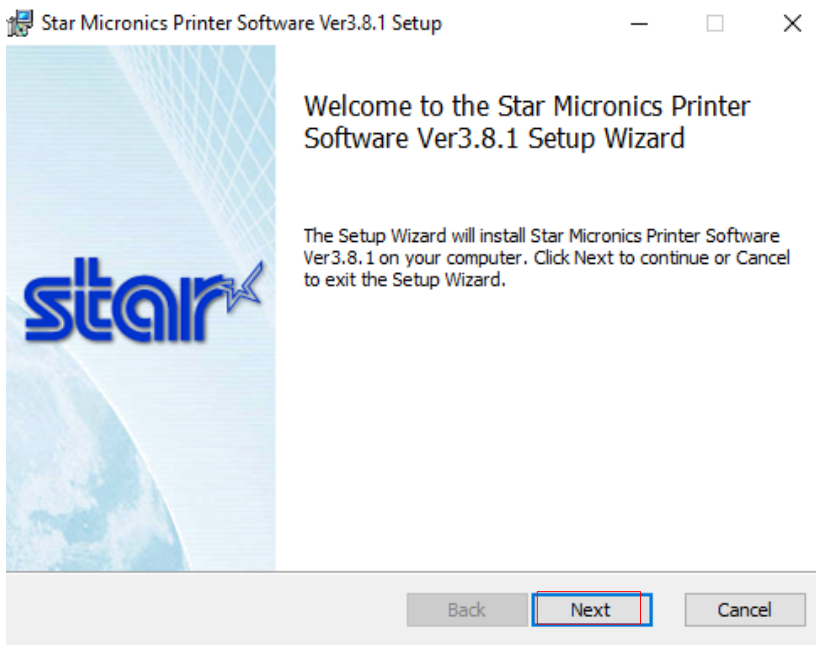

6. Check and click “Next”

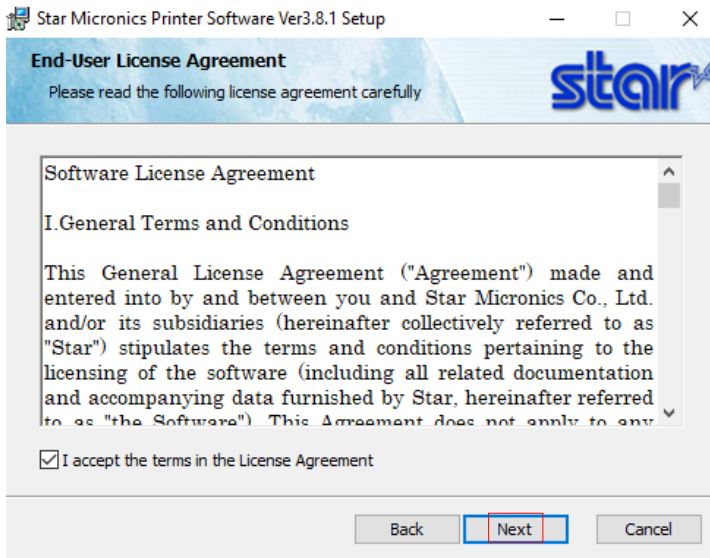


7. Click “Typical”

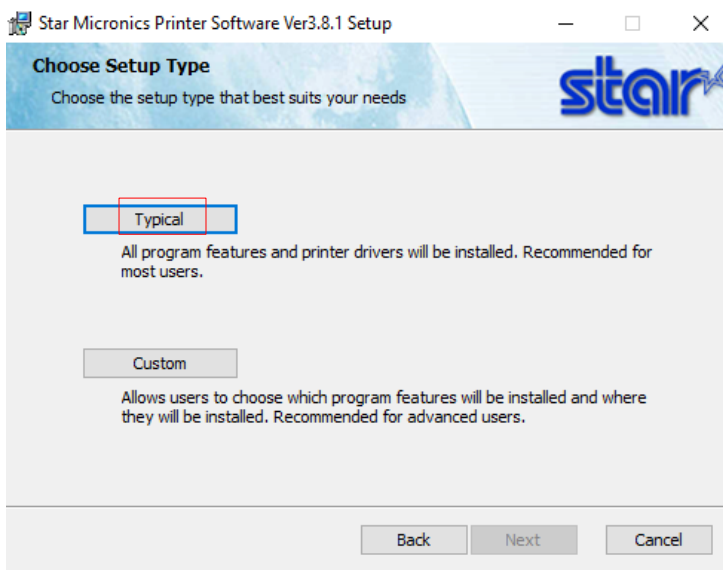


8. Click “Install” and wait until finished, then click “Finish”


9. Open Star Utility [StarMicronics > Printer Utility Star PRNT]

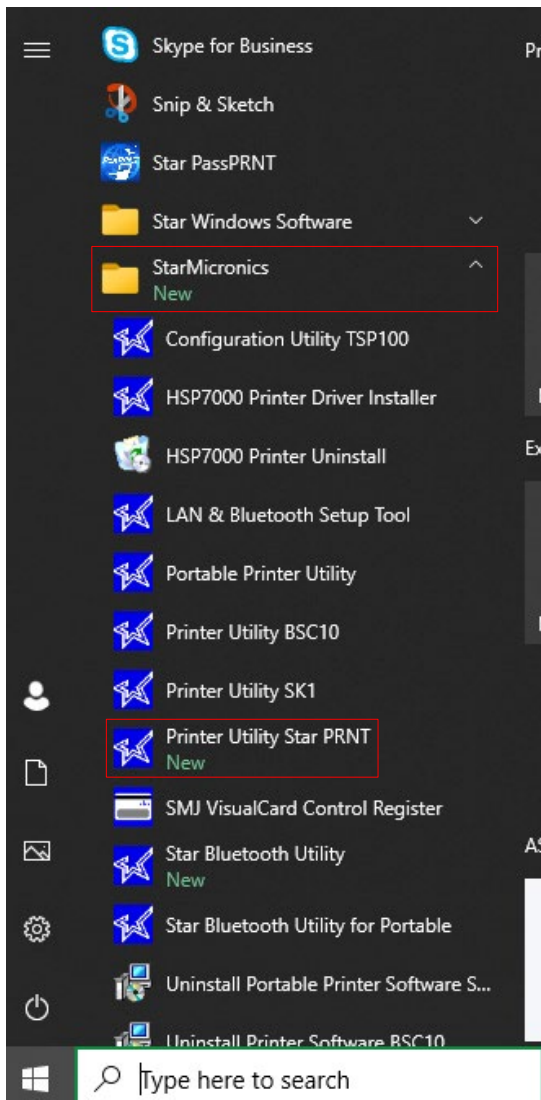


10. Select "TSP654II" and click "Next"

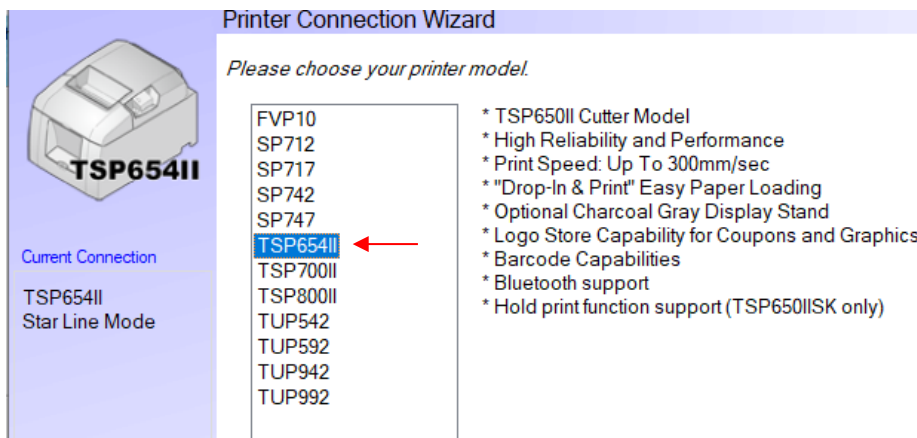


11. If completed install, software will be automatic detect driver printer. Click “Done”

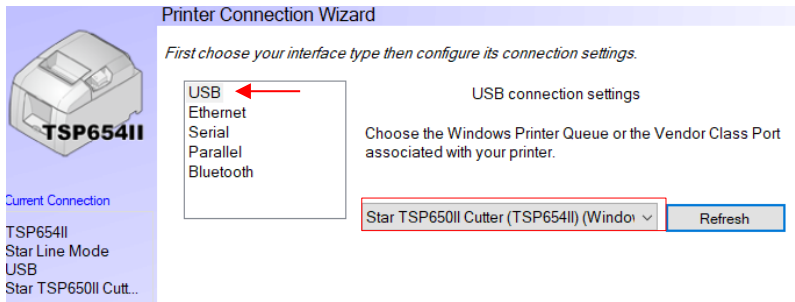

12. Here’s printer name in this tools, Click “OK”

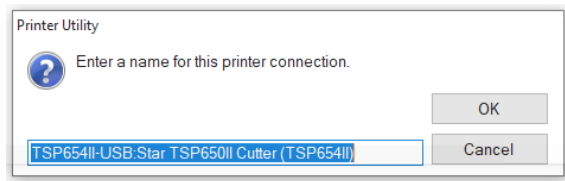

13. Click “Printer Setting”

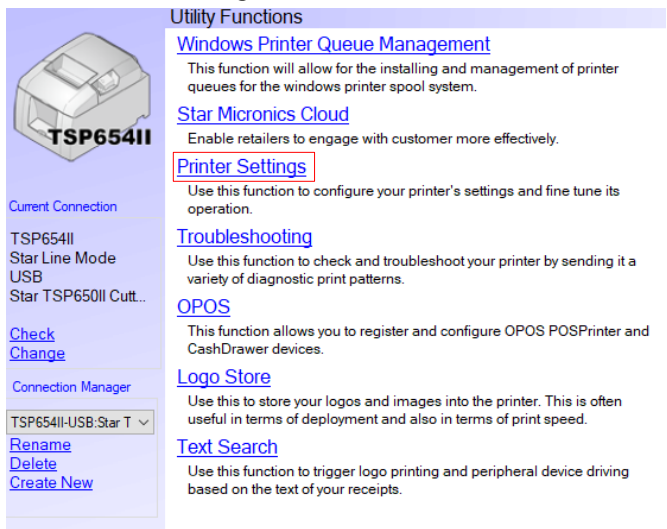

14. Find a Printable Area and change from 72mm > 50.8mm, then click “Store” for save it.
Then click “OK”

Utility Functions > Printer Settings

Category All * : Default Option

Hold Print Timeout	Disable *	▼
International Character	USA *	▼
Line Feed	4mm *	▼
Multi Bytes Character Code	Simplified Chinese (GB2312)	▼
Print Speed	High Speed *	▼
Printable Area	50.8mm	▼
Printer Performance	72mm *	▼
	50.8mm	▼
	34.5mm	▼
	32mm	▼
Top Margin	11mm *	▼
Vertical Length Reduction	Disable *	▼
Zero Character	Normal Zero Font *	▼

File Operations

Export Import

Printer Operations

Reset Defaults Print Settings Store Reload

15. Click "Print Setting" for checking self-test of the printer

