


How to enable Sound on Error (mC-Sound) for mC-Sound Peripheral

*Please download Star Quick Setup Utility Application before following this instruction.


*This instruction is using LAN Connection for testing.

*Your devices/tablet must connect to the same network as printer's network.

1. Connect LAN Cable and mC-Sound at DK-Port (Cash Drawer/Buzzer) behind the printer.

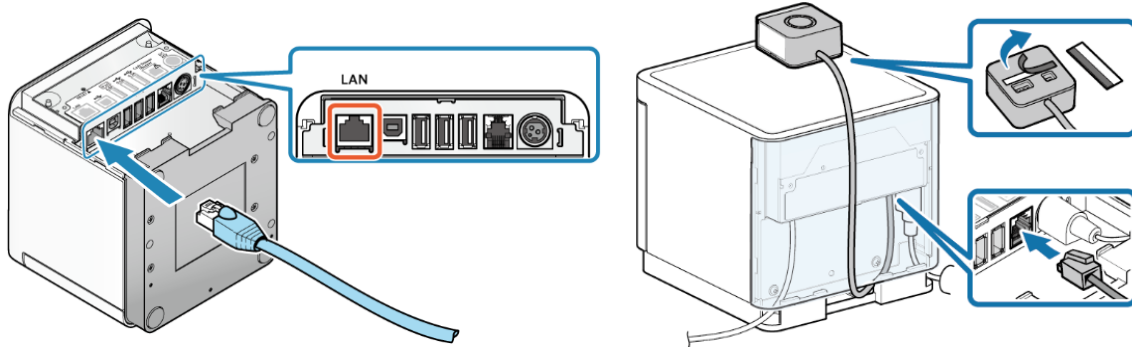


2. Connect power cable and turn printer power on
3. Open Star Quick Setup Utility Application and click 'Select Printer'

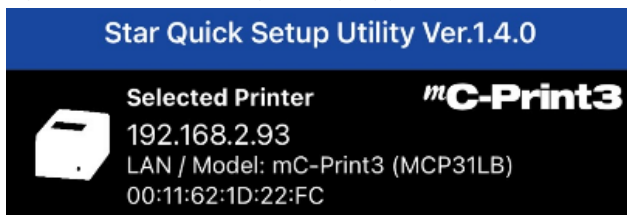


4. Select the printer IP Address that you found on the application.




5. Click 'Yes'

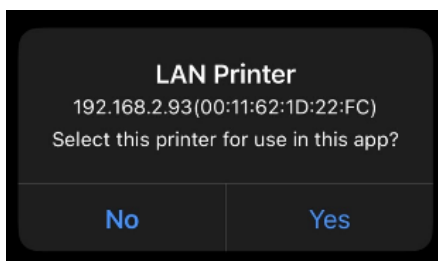


6. Click 'Printer Setting'

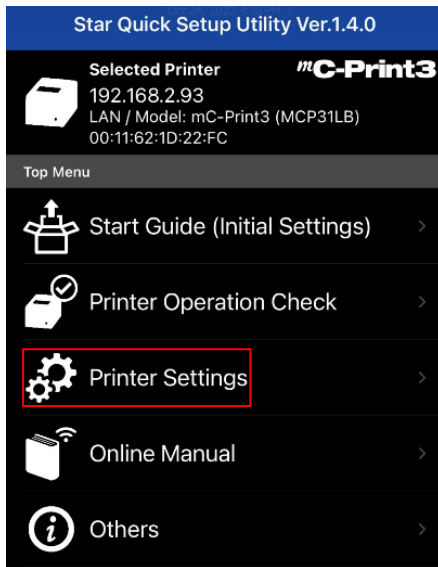


7. Click 'Memory Switch Setting'

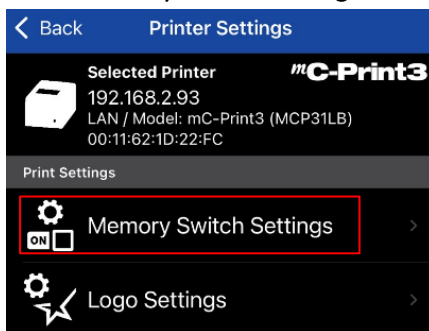


8. Slide down to find 'Sound on Error (mC-Sound)' and change to 'Enable'

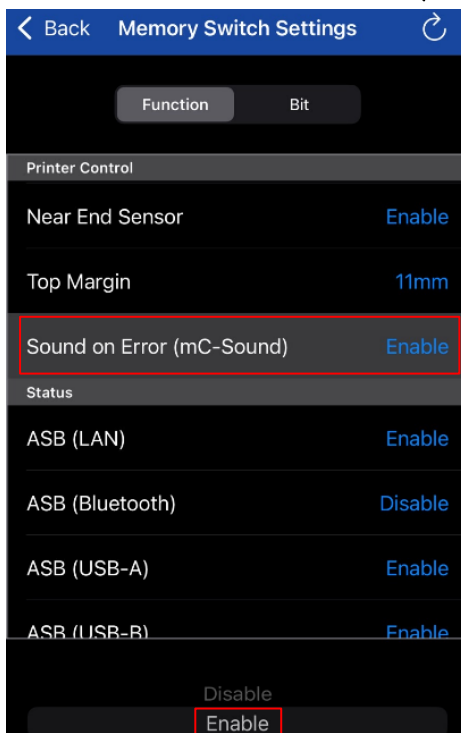


9. Click 'Apply'

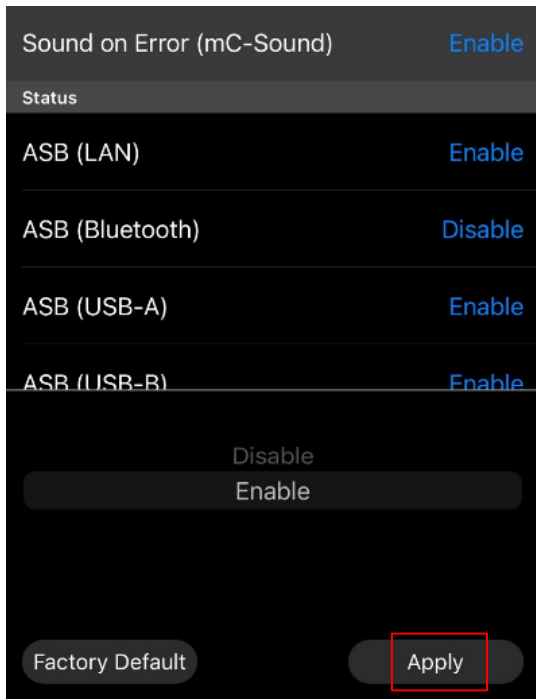

10. Click 'Yes'

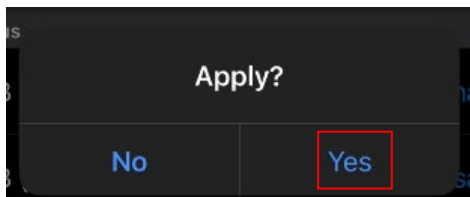

11. Then the application will show 'Success', then click 'OK'. Finished !

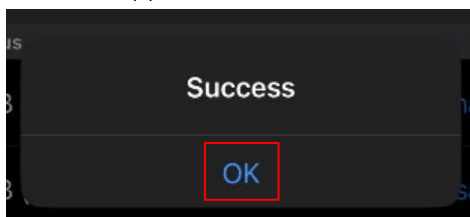

Noted: You can test an error sound once the printer error occurs, as below.

Conditions	Error Sound
Printer cover open error	(Play starts 30 seconds after the error occurs) Long beep (continuous)
No paper error	Beep, beep ... (1/2 second intervals)
Printer network error	Beep, beep, beep ... (1/8 second intervals)
Printer irrecoverable error	Beep, beep, beep ... (1/16 second intervals)