


How to check maintenance counter of the printer TSP654II & TSP654IISK

Check by Hardware

1. There's DIP SW under the printer unit.
2. Turn printer power off.
3. Change DIP SW 1-4 = **OFF** | DIP SW 1-5 = **ON** | DIP SW 1-6 = **OFF** | DIP SW 1-7 = **ON**



4. Press 'FEED' button and turn printer power on.
5. Printer will be printing 'Permanent Counter' out.

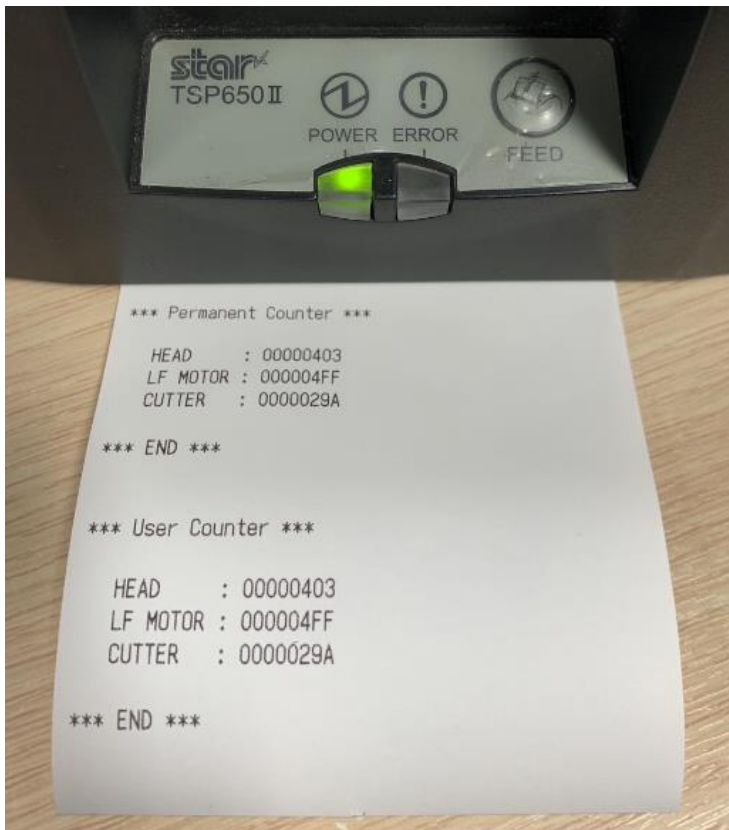

How to Calculate

HEAD: 00000403 = HEX: 403 = Decimal: 1,027 = $1,027 \times 4,000 = 4,108,000$ dot lines

LF MOTOR: 000004FF = HEX: 4FF = Decimal: 1,279 = $1,279 \times 4,000 = 5,116,000$ dot lines

CUTTER: 0000029A = HEX: 29A = Decimal: 666 = $666 \times 10 = 6,660$ cuts

HEAD 4,108,000 dot lines

- $4,108,000 / 8 = 513,500$ mm
- $513,000$ mm = 0.513 km

LF MOTOR 5,116,000 dot lines

- $5,116,000 / 203 = 25,202$ inch
- $25,202 \times 0.0254 = 640$ m