

How to change Memory Switch Setting to Chinese Character (DBCS) with Printer TSP650II

Firstly, if you using LAN connection you need to print self-test page for check can printer get the IP Address?

1. Download Utility Program from <http://www.starmicronics.com/support/> and select same as below picture.

Star Micronics Support Database

Welcome to the Star Micronics Global Support Site! Browse Star's online database to easily and quickly find drivers, software, documentation and FAQs. To begin, choose your printer below.

[Star Micronics Software License Agreement](#)

Product Type	Thermal	▼
	How do I find my Printer Type?	
Printer Family	TSP650II	▼
	How do I find my Printer Family Name?	
Printer Model	TSP650II	▼
	How do I find my Printer Model Name?	
Interface	USB	▼
	How do I identify my interface?	
Operating System	Windows 10 / 8.1 / 8 / 7	▼
	How do I identify my Operating System?	
Language	English	▼



2. Click "StarPRNT Intelligence Software" then click "StarPRNT V3.6 FULL 32/64-bit" and then install until finished.

Star Micronics TSP650II Driver Downloads

 **Recommended:**

► [StarPRNT Intelligence Software](#)
Link to the StarPRNT Intelligence Download page includes support for [AllReceipts](#) (digital receipt servi NOW.


Star Micronics StarPRNT Intelligence Software Downloads

 **Recommended:**

The StarPRNT Intelligence Software supports Star TSP650II, TSP700II, TSP80I, TUP500 and TUP900 Series Printers.

► [StarPRNT V3.6 FULL 32/64-bit \(615MB\)](#)
Installation Package including Drivers, Configuration Utility, OPOS, JavaPOS a Windows 10(32/64-bit), Windows 8.1(32/64-bit), Windows 8(32/64-bit), Window.

3. After install, open program "Printer Utility Star PRNT"

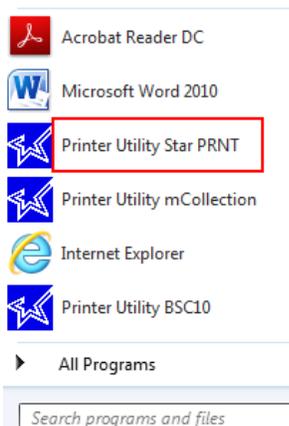

4. Select the printer that you have and click “next”

FVP10	* Front paper exit
SP512	* Voice function
SP542	* Various installation (Flat roof/Shelf
SP712	* Print speed: 250mm/sec
SP717	* Compress printing (save the pape
SP742	* Linear "Paper Width" adjustment fr
SP747	* Bluetooth support
TSP654II	
TSP700II	
TSP800II	
TUP542	
TUP592	
TUP942	
TUP992	

5. Select your interface connections (Depend on your connection) but in this case selected “Ethernet” and fill the IP Address 192.168.1.55 and click “Done” and setting your printer name.

First choose your interface type then configure its connection settings.

USB	Ethernet connection settings
Ethernet	192 . 168 . 1 . 55
Serial	
Parallel	
Bluetooth	

6. Click “Print Setting”

queues for the windows printer spool system.

Star Micronics Cloud

Enable retailers to engage with customer more effectively.

Printer Settings

Use this function to configure your printer's settings and fine tune its operation.

Troubleshooting

Use this function to check and troubleshoot your printer by sending it a variety of diagnostic print patterns.

7. First line for this program, please change from **Single-Byte** to **Double-Byte** and click “**Store**”

[Asian Character \(DBCS\)](#) Single-Byte Character Set (SBCS) *

To

[Asian Character \(DBCS\)](#) Double-Byte Character Set (DBCS)

8. Click “**Print Setting**” for checking the memory switch setting of the printer.
- It should be change from **Standard** to **China**.

