
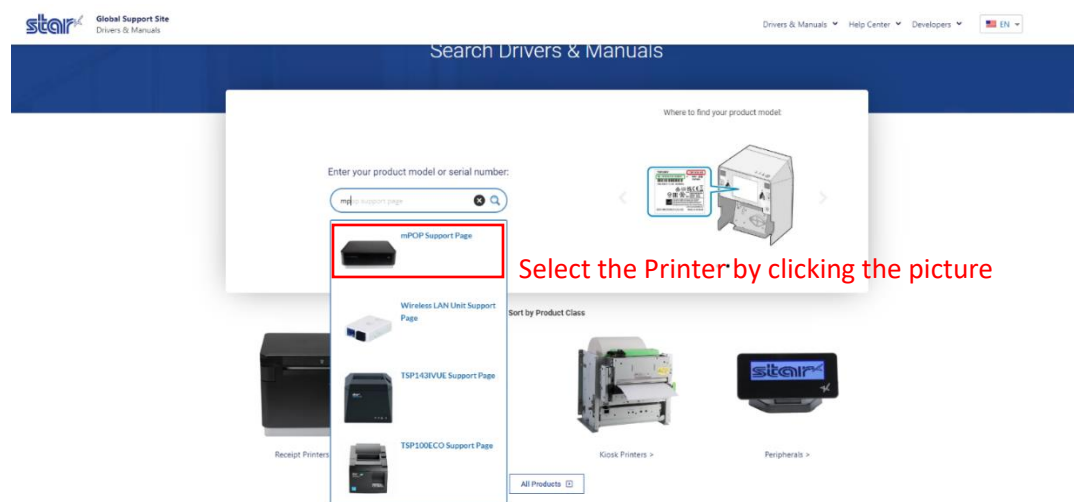



How to update firmware mPOP for Windows PC by USB Cable

****download and installed printer driver before update printer firmware****


1. Go to <http://www.starmicronics.com/support/> for download and installed printer driver.
2. Type your printer name in the text box then click on the printer picture for entering the Printer driver download page.

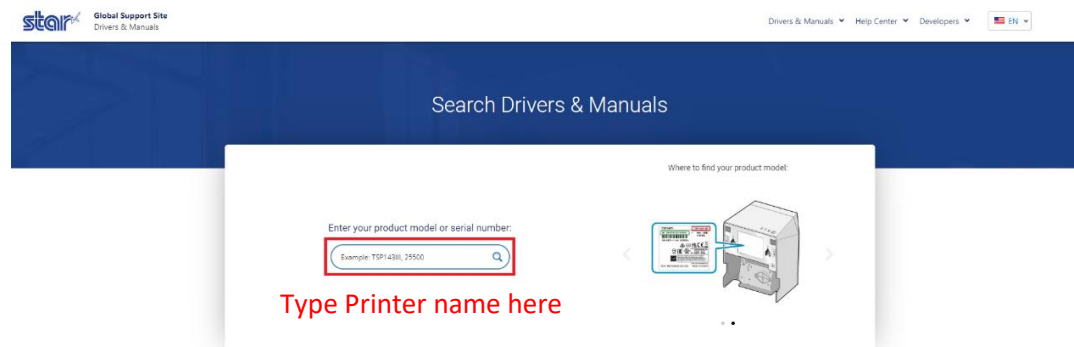


3. Download and Install Utility

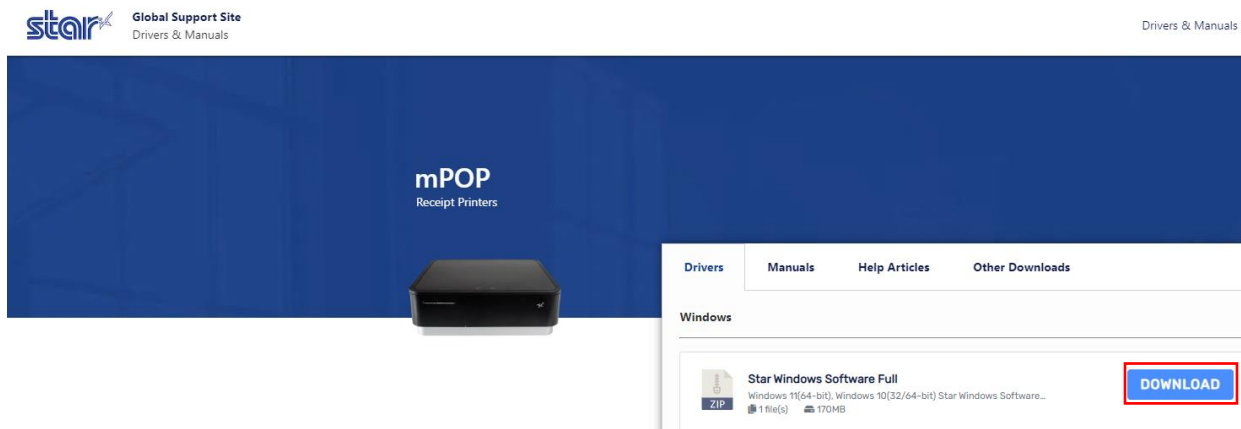


4. Open download file, right click "Setup"

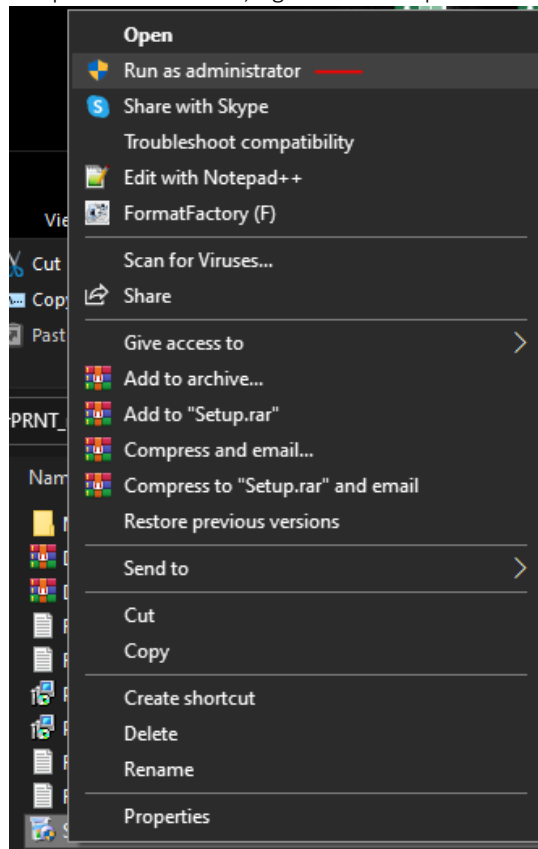


5. Click "Next"

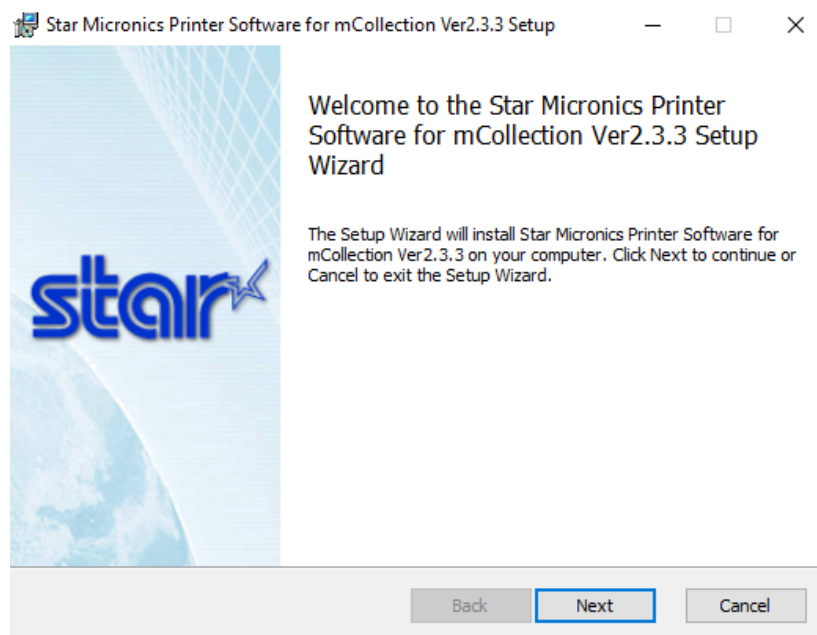


6. Check and click "Next"

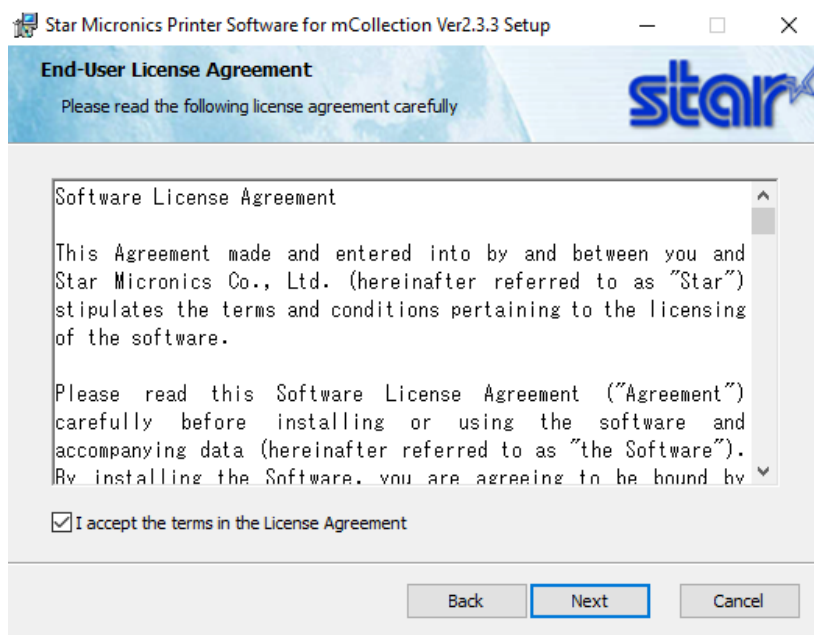


7. Click "Typical"

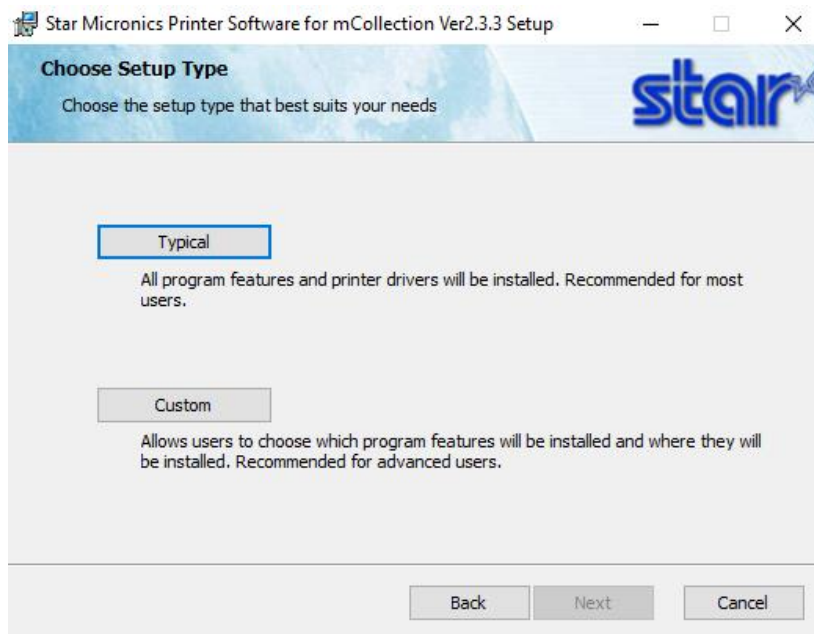


8. Click “Install” and waiting until installed.

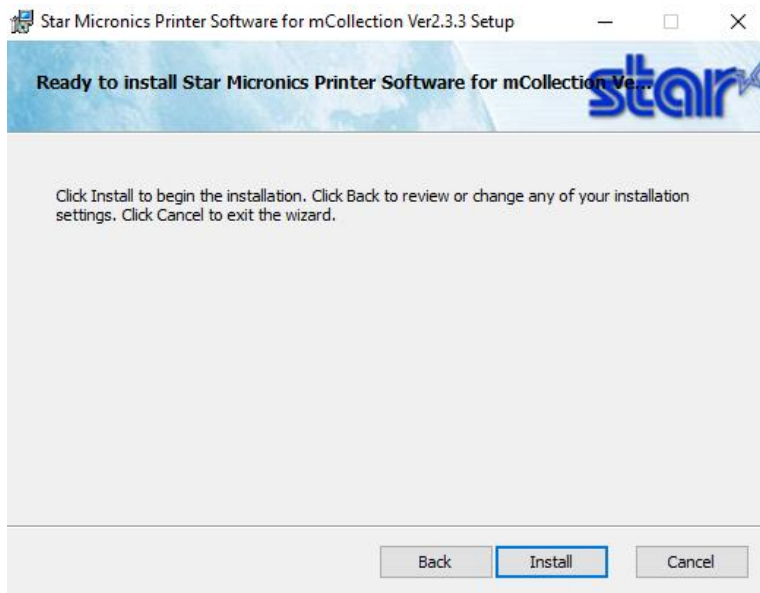


10. Click “Finish” then turn power on and connect USB cable printer to Windows PC

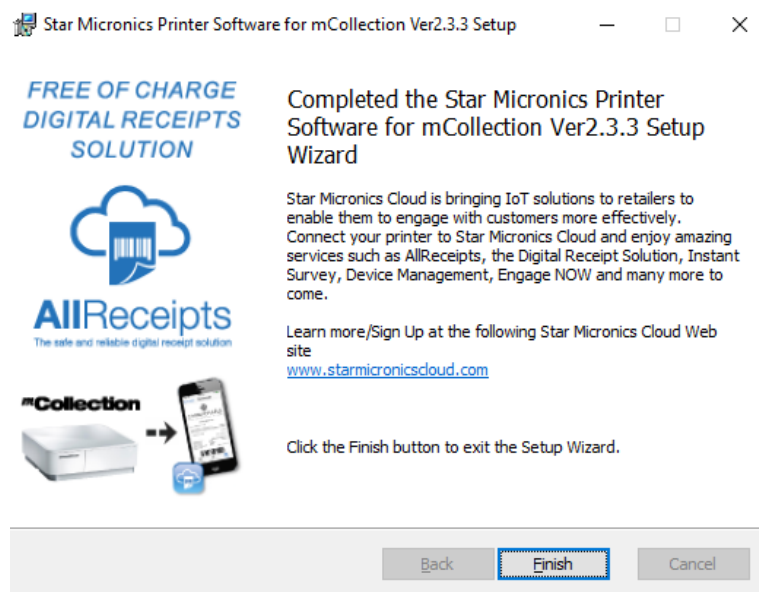


11. Open Control Panel > Devices and Printers > right click “mPOP” and select “Printer Properties”

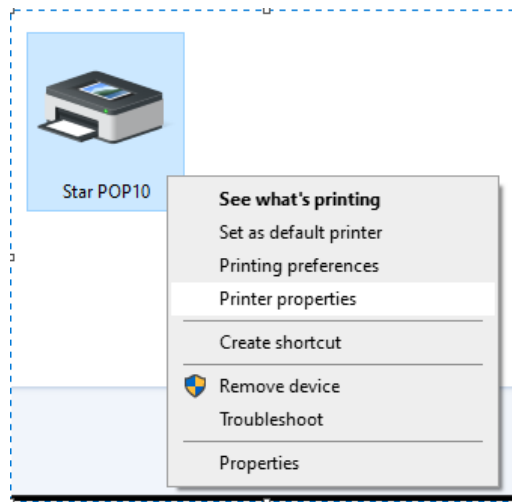

12. Uncheck “Enable Bidirectional” and click “Apply”

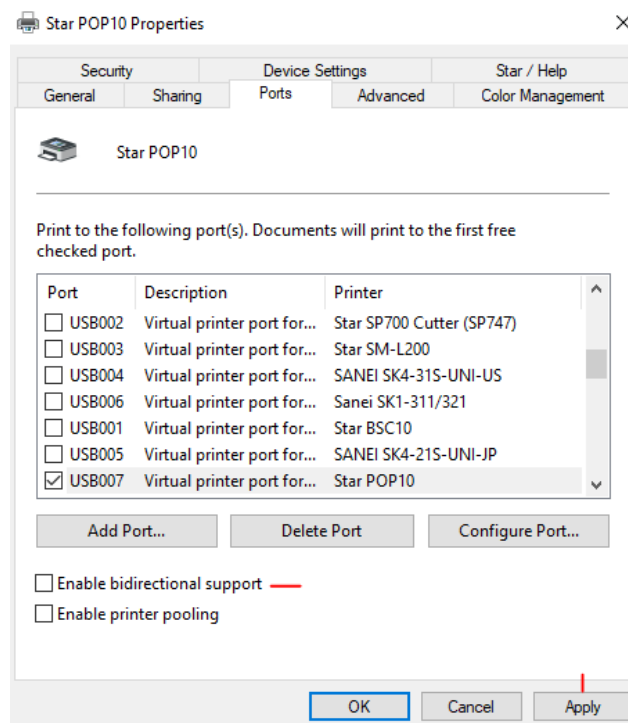


13. Open file for update firmware "MOT2PRINTER"

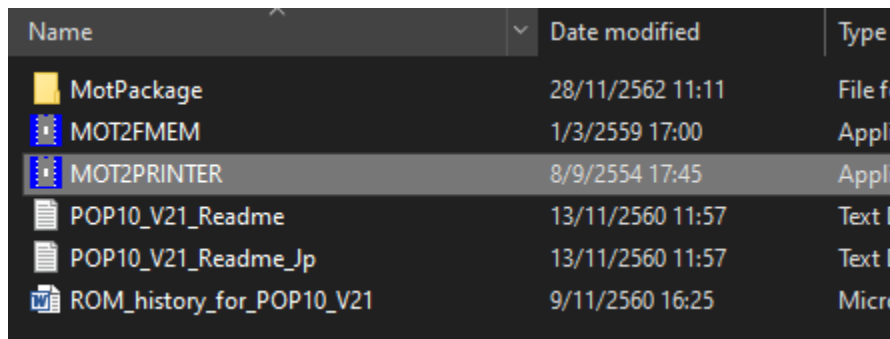


Name	Date modified	Type
MotPackage	28/11/2562 11:11	File fo
MOT2FMEM	1/3/2559 17:00	Appli
MOT2PRINTER	8/9/2554 17:45	Appli
POP10_V21_Readme	13/11/2560 11:57	Text D
POP10_V21_Readme_Jp	13/11/2560 11:57	Text D
ROM_history_for_POP10_V21	9/11/2560 16:25	Micro


14. Click "Printer" select "POP10" and "Invalid"

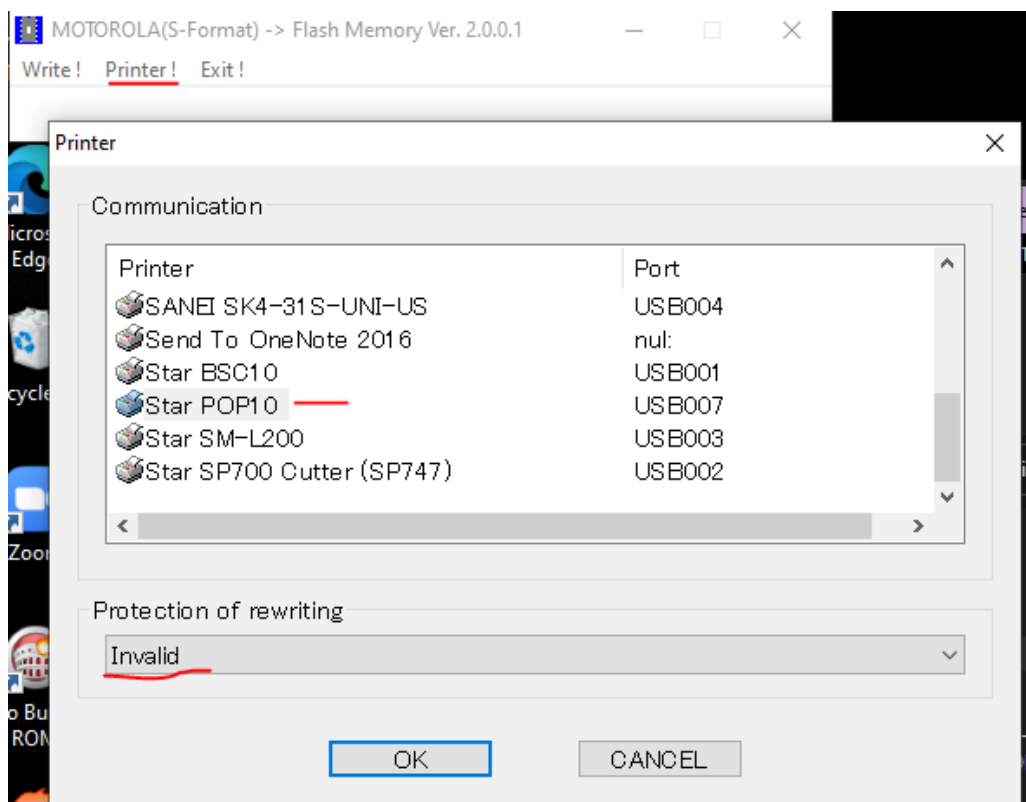

15. Click "Write" and open file which you want to update firmware > Click "Open"

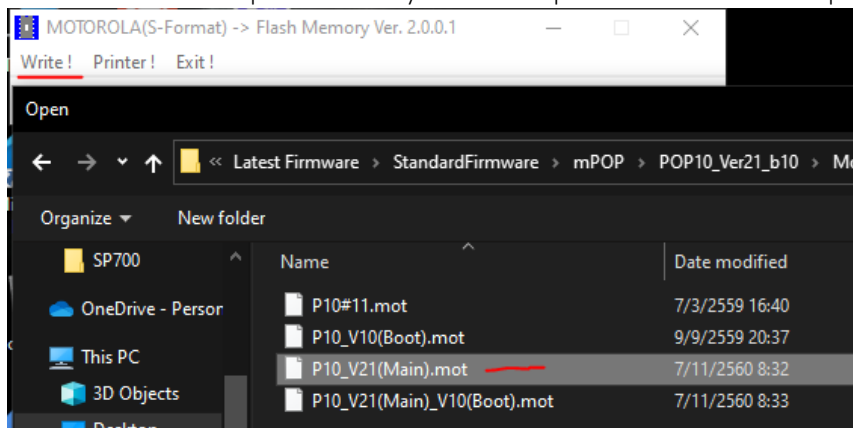

16. Click "OK" 2 times and light at printer will flashing. If finished, printer will have sound.

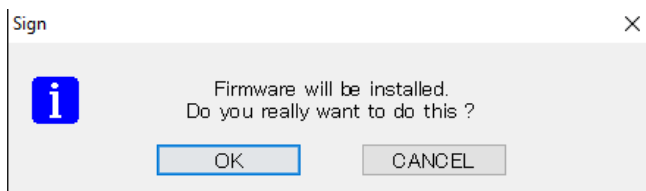

17. Self-test to check firmware version.

