





How to fix red light on HSP7000 PAPER OUT

1. Insert paper but don't turn on the printer
2. Set "Dip Switch 1" bit 4 and 6 to off and "Dip Switch 1" bit 5, 7 and 8 to on like a picture below.

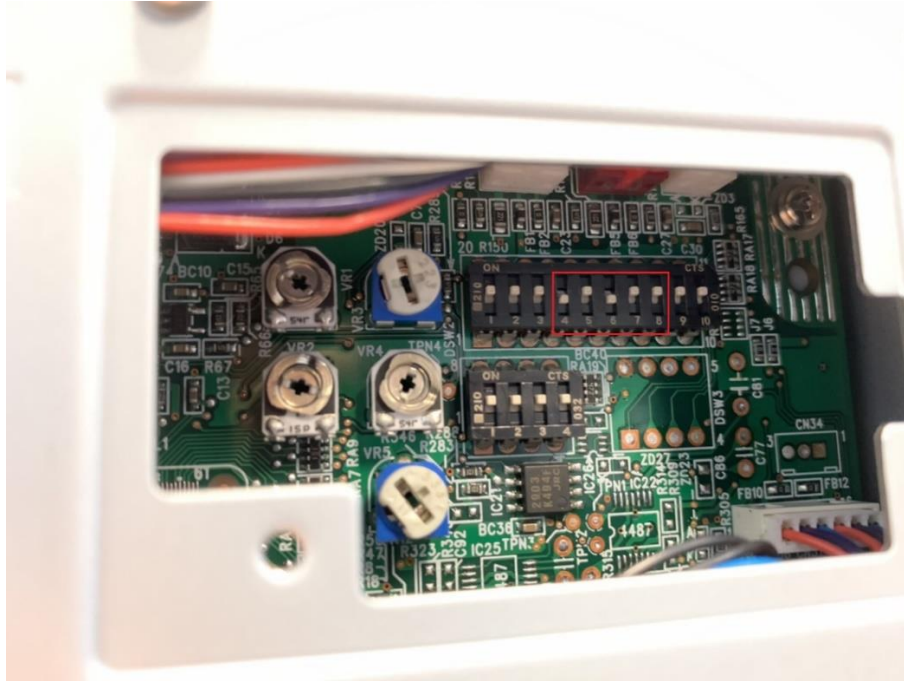


3. Turn on the printer then the light above PAPER OUT picture will be gone.
4. Use small screwdriver to turn VR1 (as picture below) until light above PAPER OUT picture turn on.

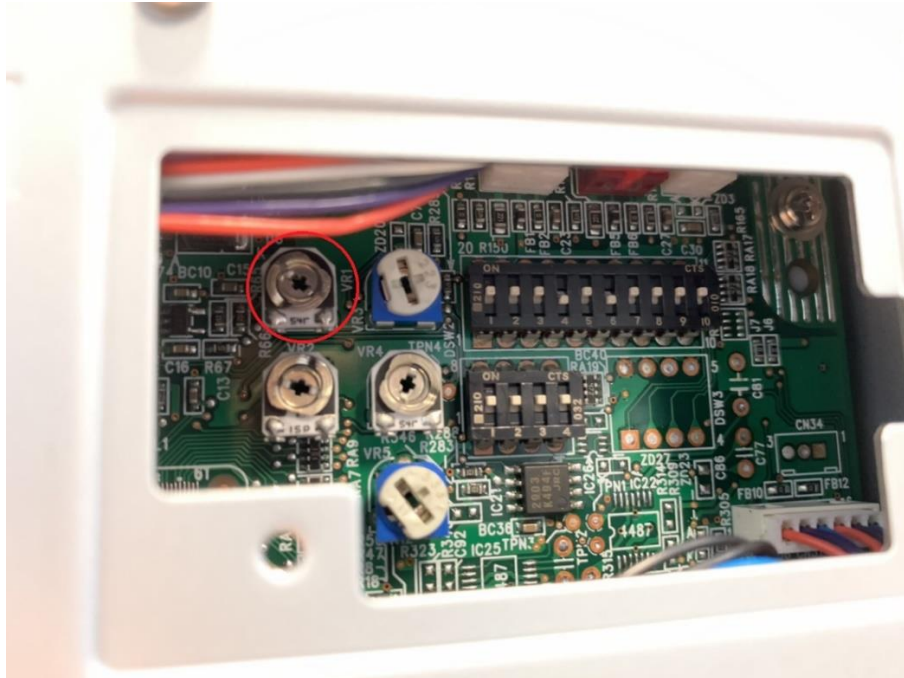



How to fix red light on HSP7000 PAPER OUT

5. Turn off printer then set "Dip Switch 1" bit 4 to 8 in the regular position as picture below.

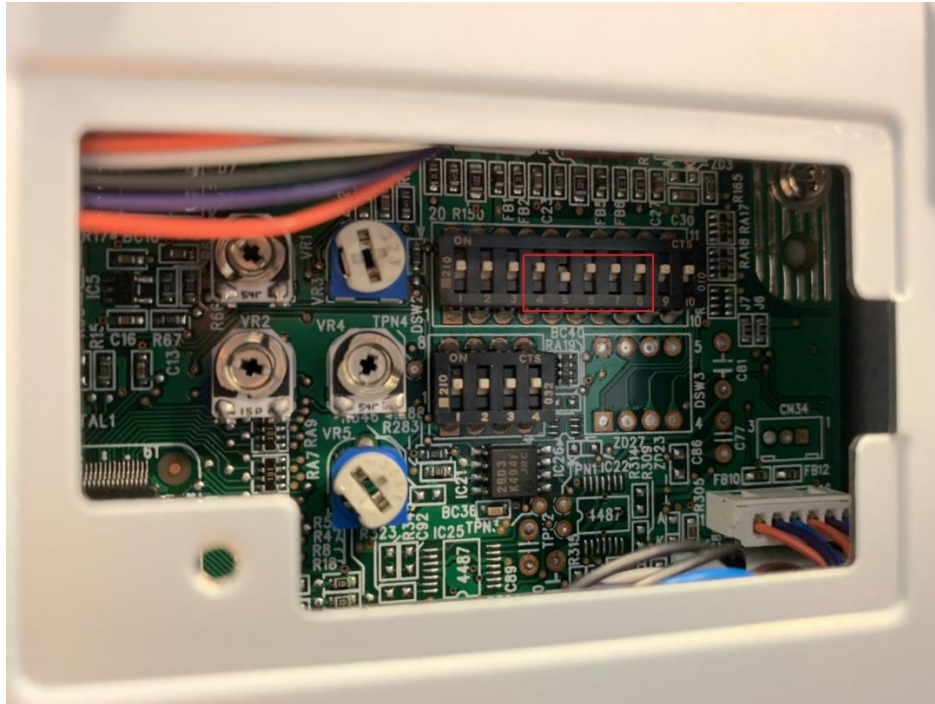

6. Then Turn on the printer, PAPER OUT light will not lit and can use normally.

